 






ASSEMBLY INSTRUCTION'S









MODEL: DM24026 DINING CHAIR

Please follow Assembly Instruction carefully. Step by step.

PART LIST


1	CHAIR BACK		1pc
2	CUSHION SEAT		1pc
3	BOX SEAT		1pc
4	SCRETCHER (L / R)		2pcs
5	FRONT LEG (L / R)		2pcs

HARDWARE LIST


A	JCBC M6X80MM		4pcs
B	JCBC M6X60MM		4pcs
C	JCBC M6X35MM		3pcs
D	SPRING WASHER M6		11pcs
E	FLAT WASHER M6X19MM		11pcs
F	CSK M4X32MM		3pcs
G	CSK M4X38MM		4pcs
H	ALLEN KEY M4		1pc

* Screw Driver Not Provided.



STEP 1

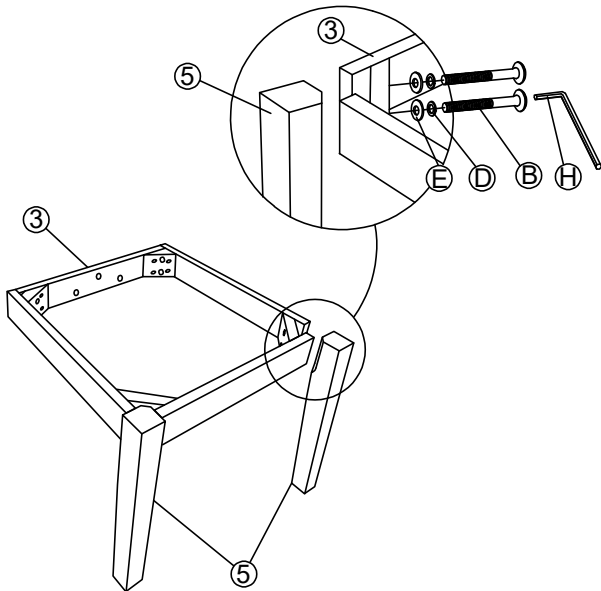

STEP 2

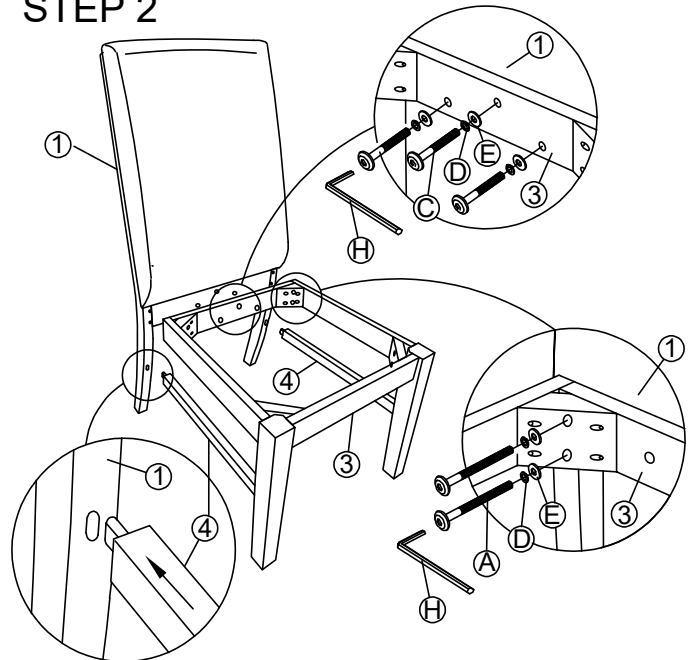

STEP 3

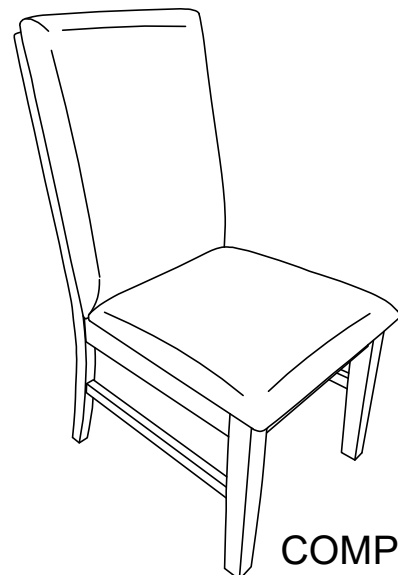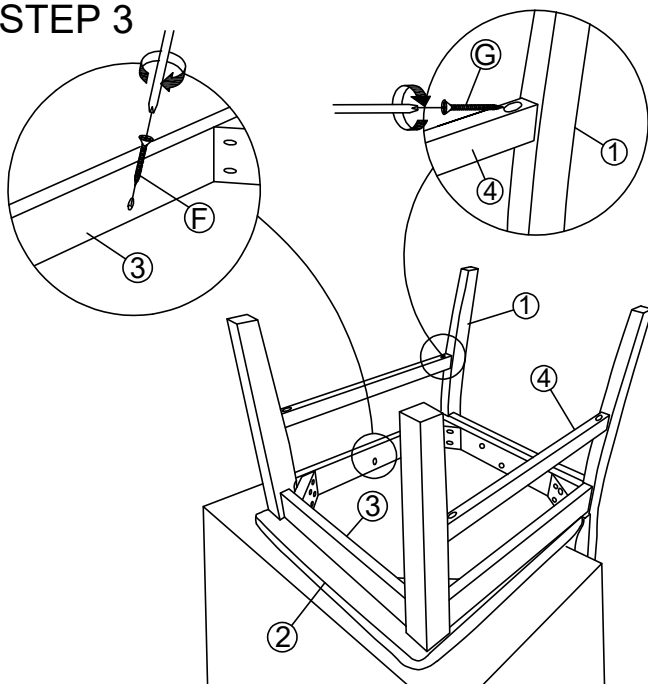

COMPLETED
ASSEMBLY