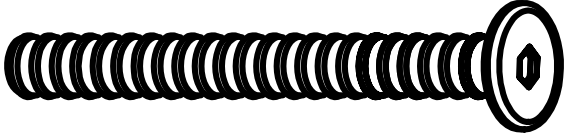
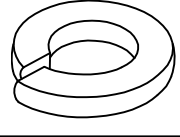
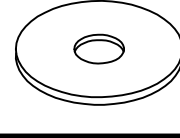

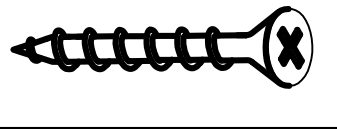



# ASSEMBLY INSTRUCTIONS

MODEL: BE24054-BCH


Read this instruction carefully. Refer hardware and furniture parts list for guidance. Be sure all parts are complete before assembling. Place all wooden furniture part on a clean and flat soft surface to prevent scratches. Refer steps provide as assembling guide.

PART LIST		
ITEM	DESCRIPTION	QTY
A	Apron with Cushion	1 PC
B	Long stretcher	2 PCS
C	Short Stretcher	2 PCS
D	Leg (Right)	2 PCS
E	Leg (Left )	2 PCS



HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBC Screw M6 x 60mm 	8 PCS
2	Spring Washer M6 x 13mm 	8 PCS
3	Flat Washer M7 x 19mm 	8 PCS
4	Allen Key M4 x 55mm 	1 PC
5	CSK Screw M4 x 38mm 	8 PC

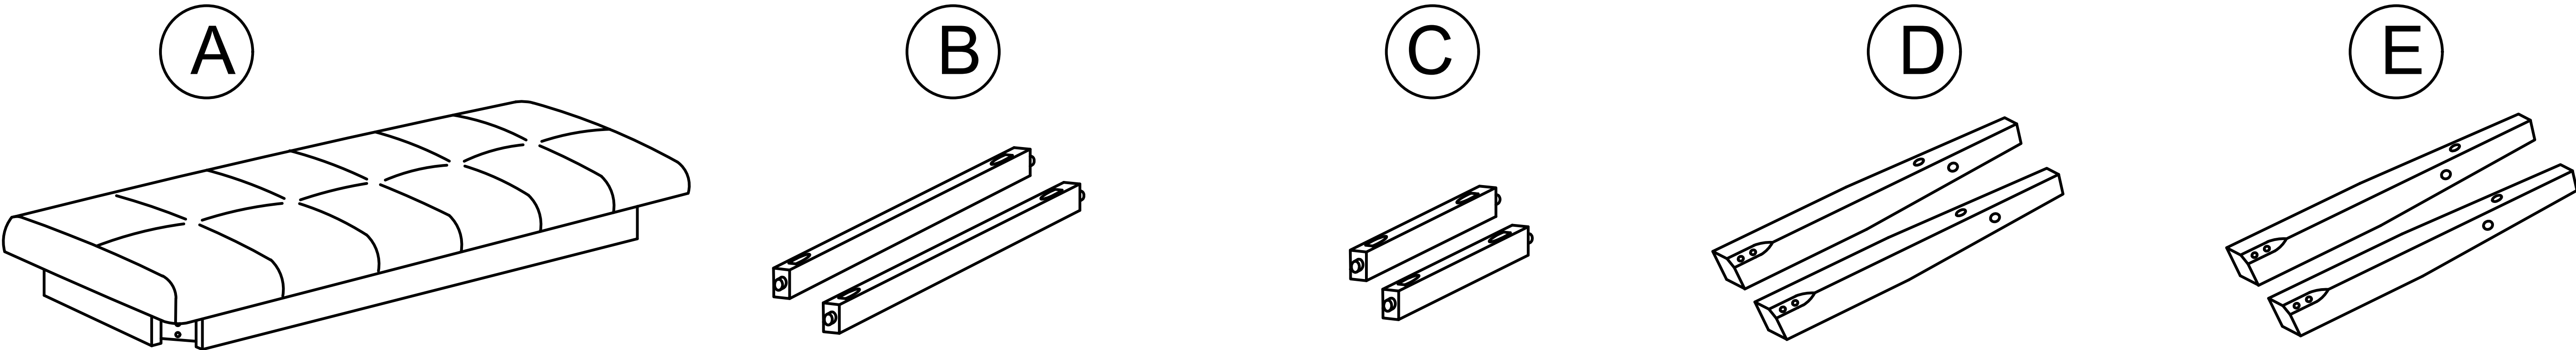

## STEP 1

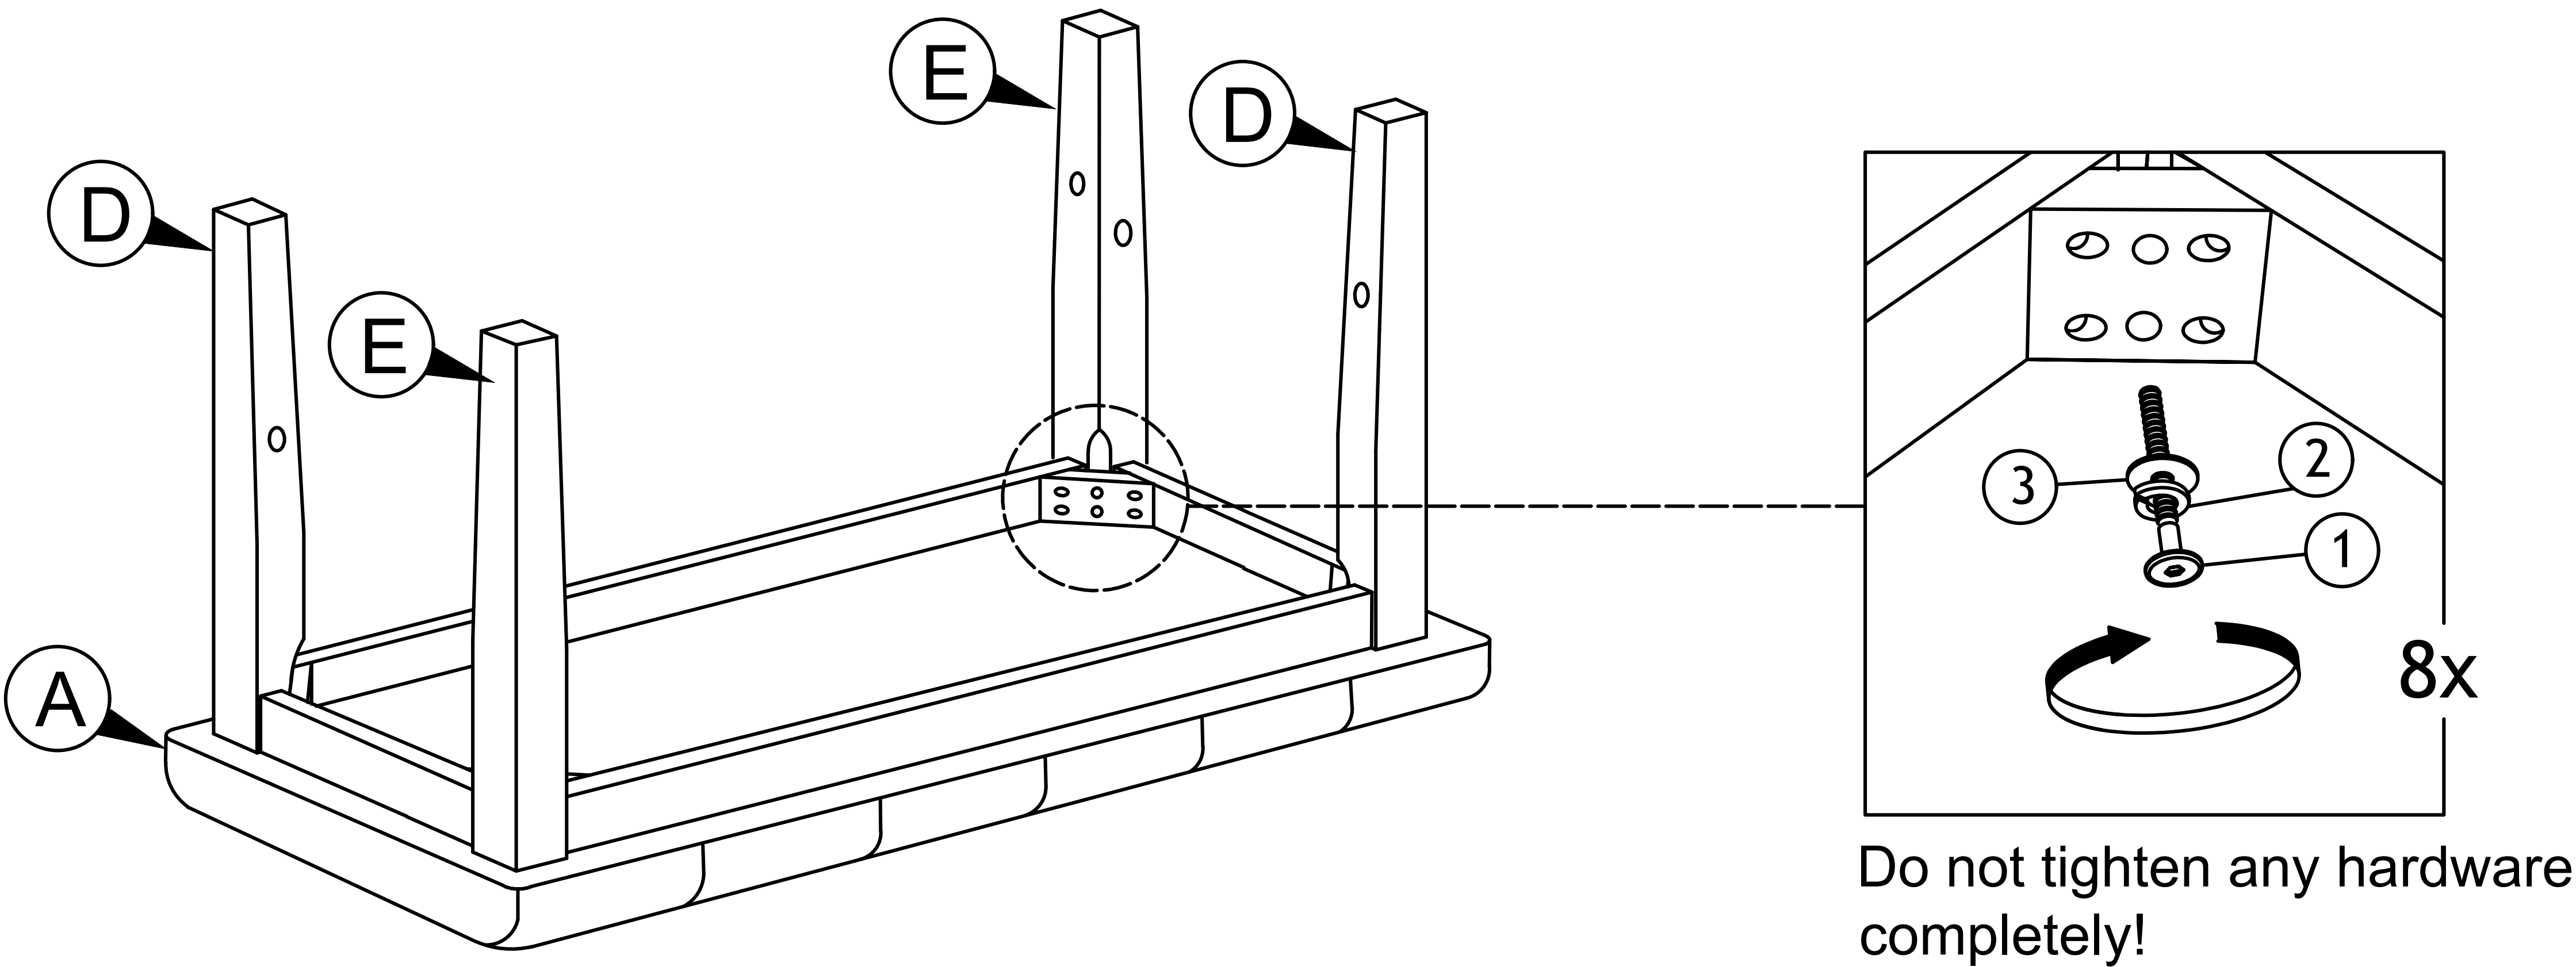

## STEP 2

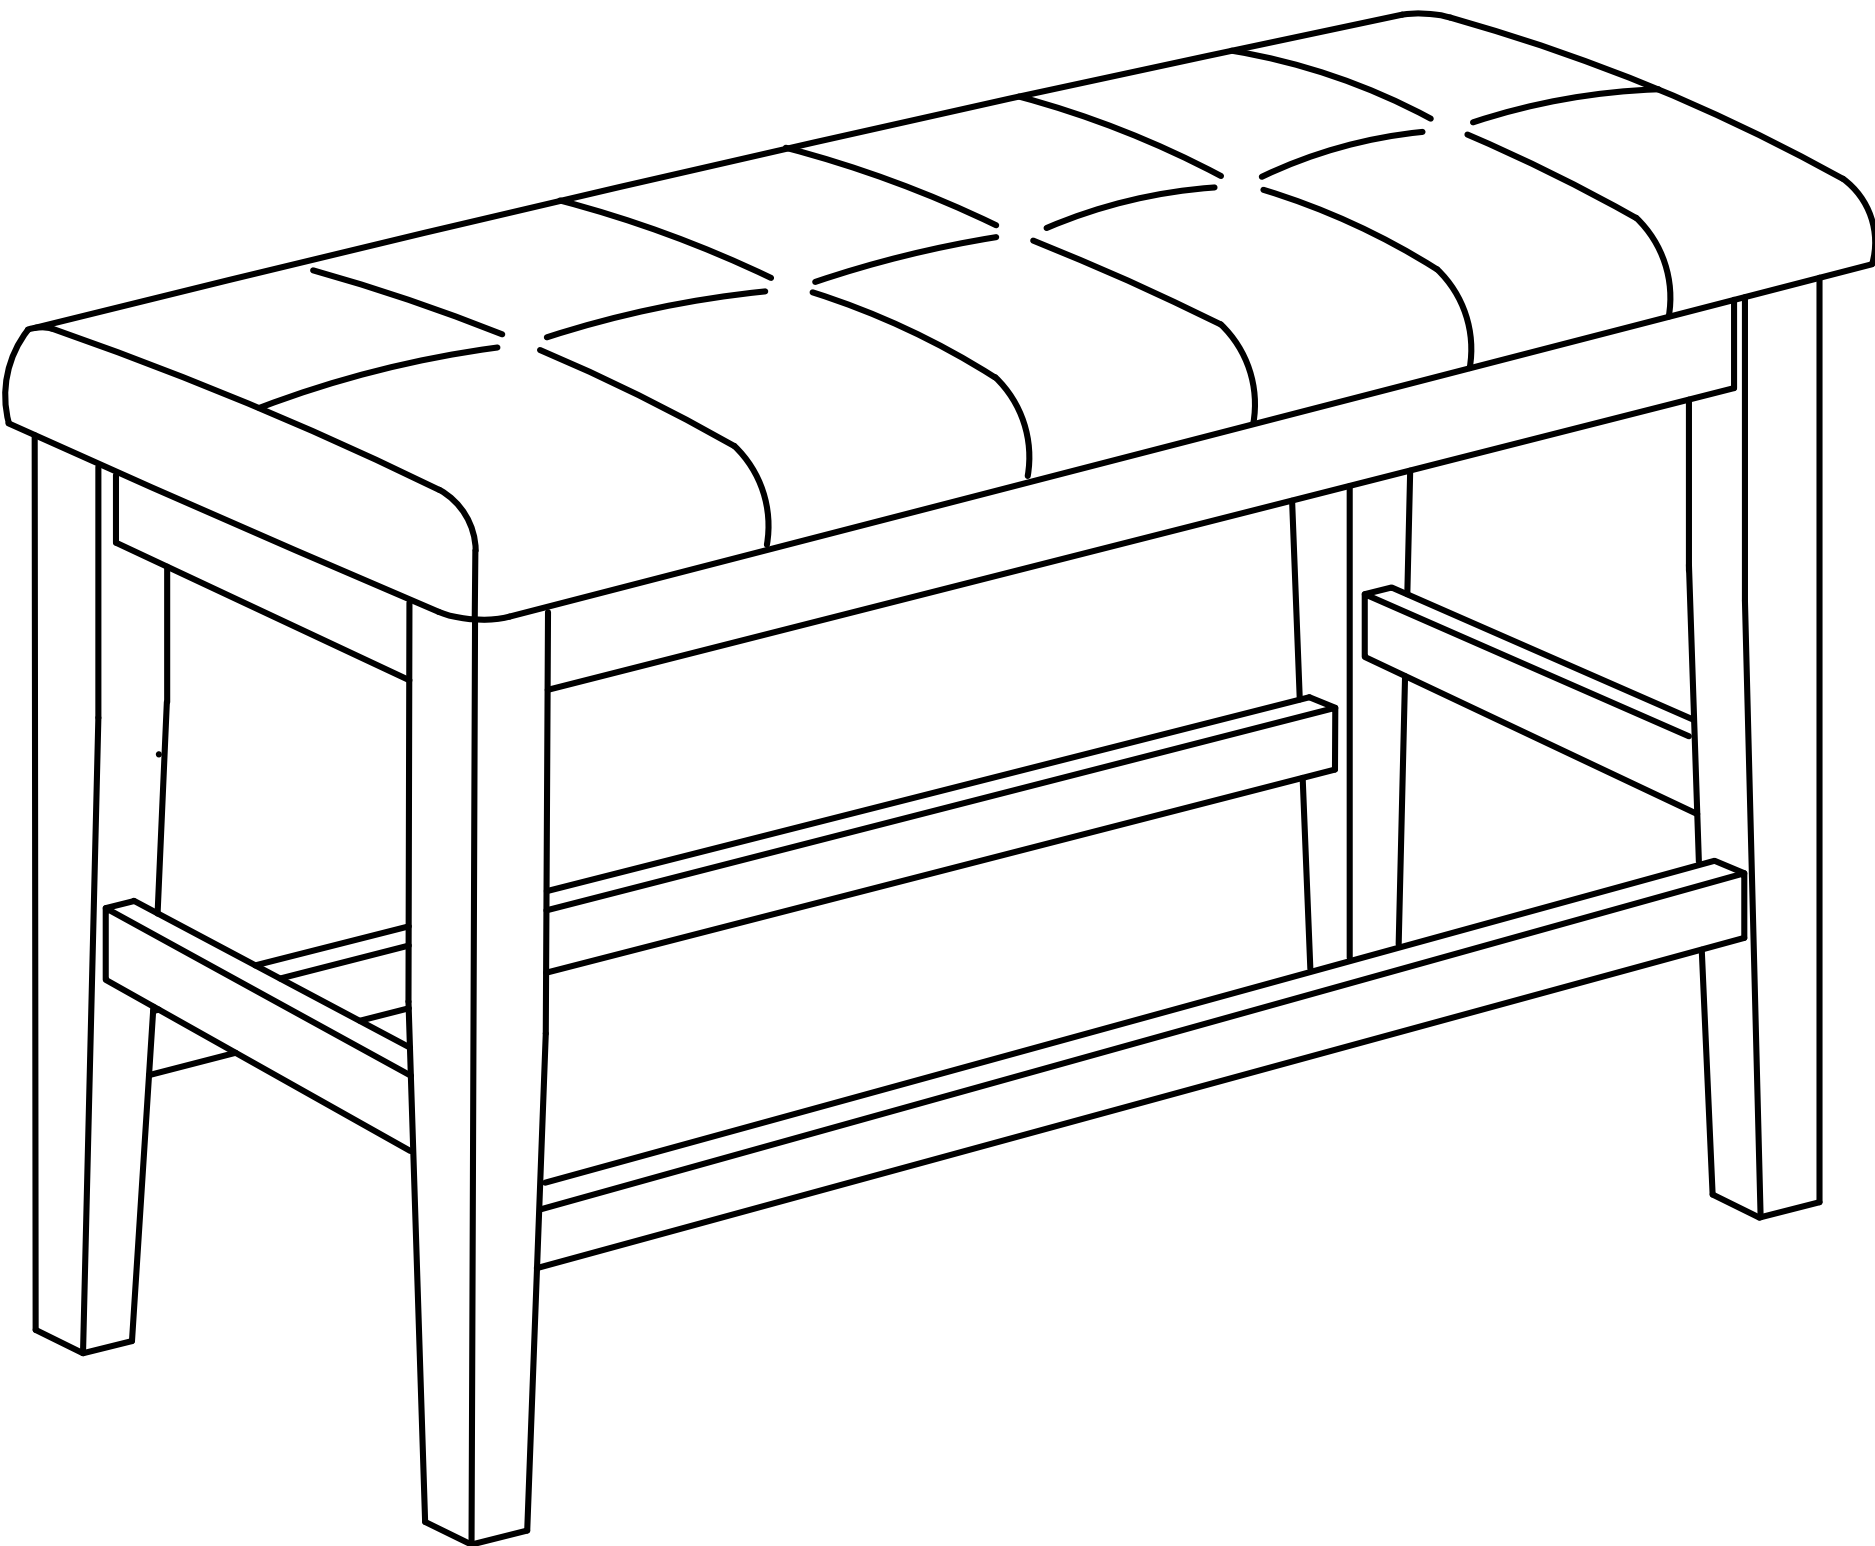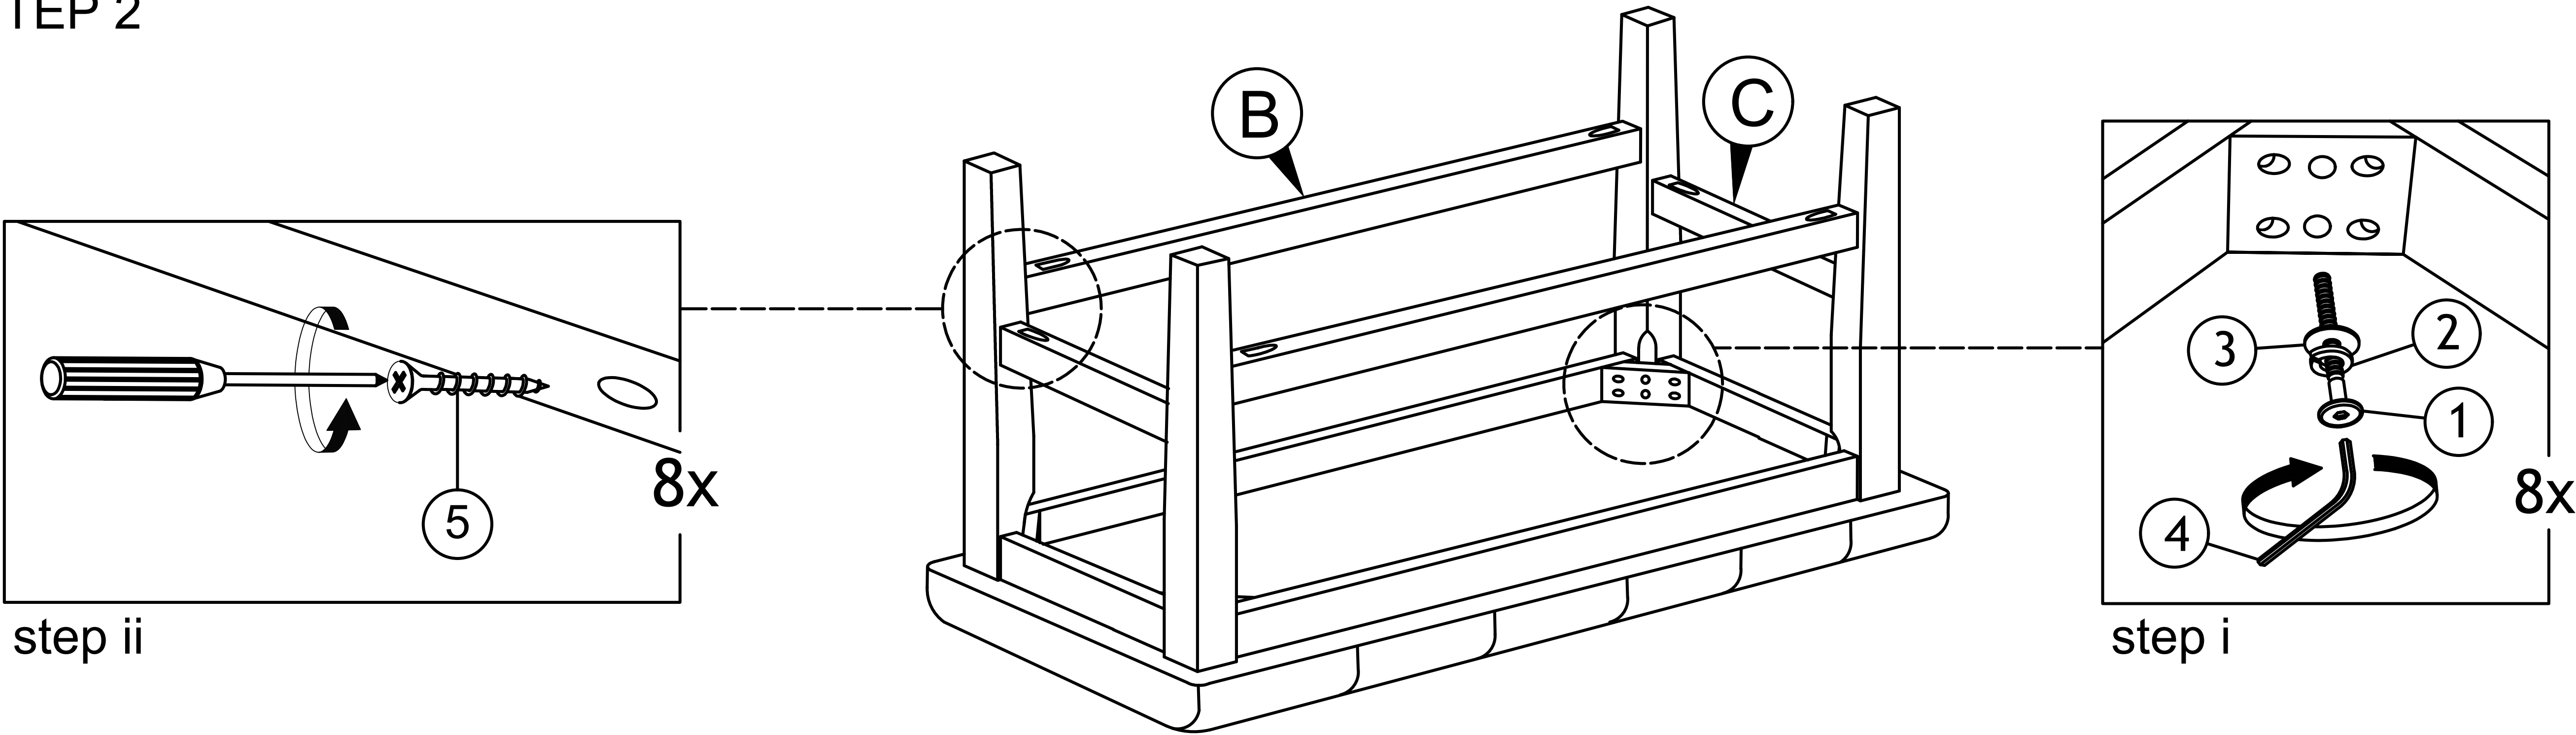

COMPLETED ASSEMBLY