 
 


 










# ASSEMBLY INSTRUCTION'S

MODEL : DM26017 PUB CHAIR


Please follow Assembly Instruction carefully. Step by step.

PART LIST			
1	CHAIR BACK		1pc
2	SEAT		1pc
3	FRONT STRETCHER		1pc
4	SIDE STRETCHER (L/B & R/B)		2pcs
5	FRONT LEG (L/R)		2pcs


HARDWARE LIST			
A	JCBC M6X80MM		4pcs
B	JCBC M6X60MM		4pcs
C	JCBC M6X40MM		2pcs
D	FLAT WASHER M6X19MM		10pcs
E	SPRING WASHER M6		10pcs
F	CSK M4x38		6pcs
G	ALLEN KEY M4		1pc
H	DOWEL 10X30mm		1pc

\* Screw Driver Not Provided.



## STEP 1

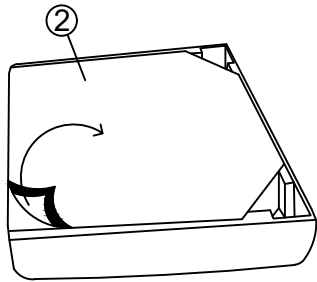

## STEP 3

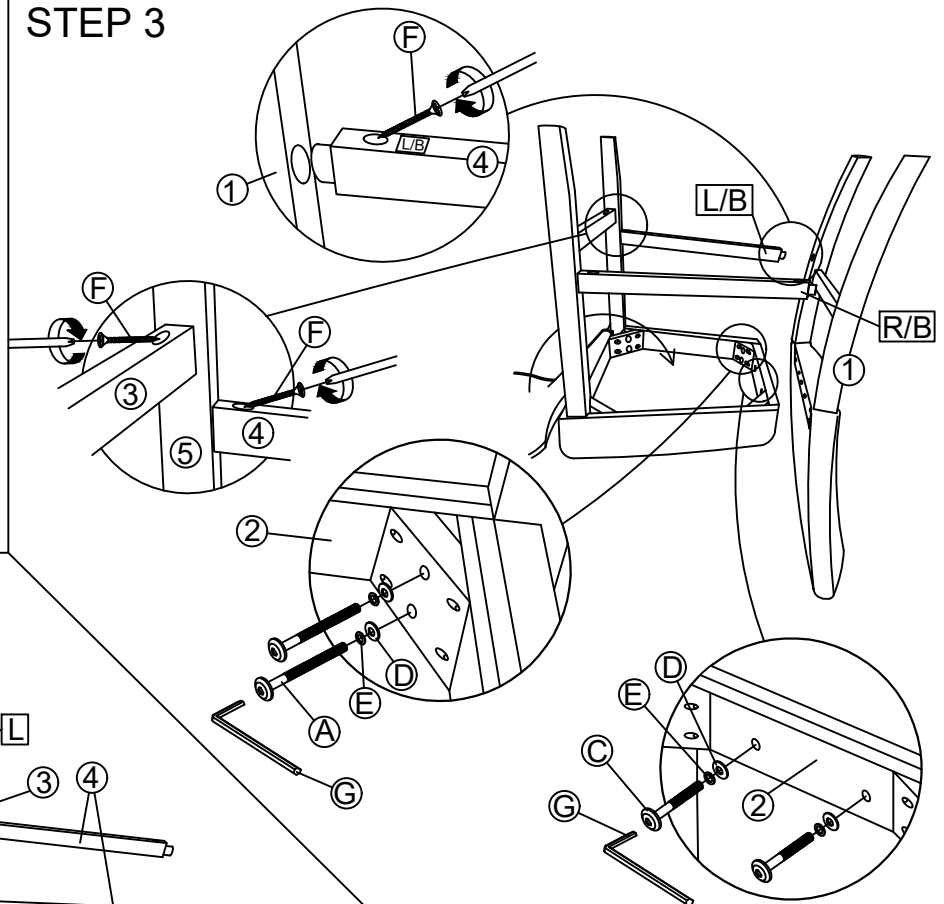

## STEP 2

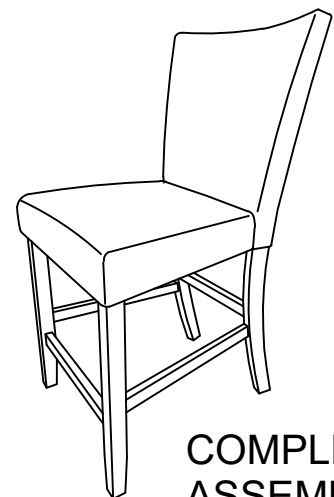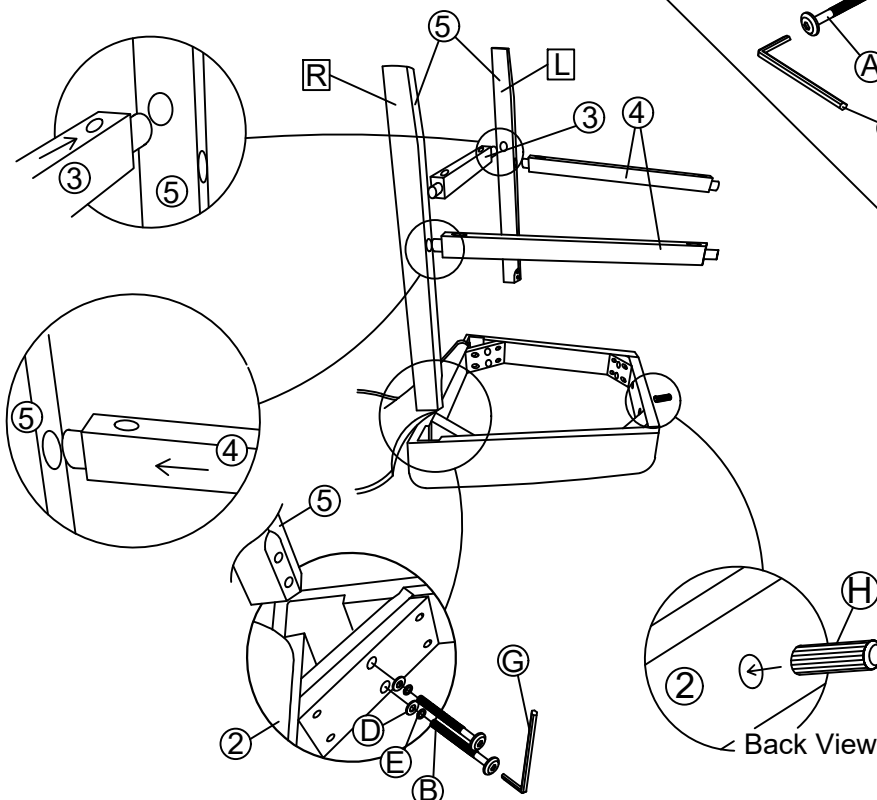

COMPLETED ASSEMBLY