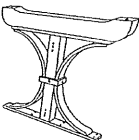 
 


ASSEMBLY INSTRUCTION'S

MODEL:DM21073 DINING TABLE


Please follow Assembly Instruction carefully.Step by step.

PART LIST		
1	TABLE TOP 	1pc
2	CROSS BAR 	2pcs
3	LEG 	2pcs


HARDWARE LIST			
A	JCBC M6x100mm		4pcs
B	SPRING WASHER M6		4pcs
C	FLAT WASHER M6x13mm		4pcs
D	WOOD DOWEL M10x30mm		8pcs
E	CSK M4X32MM		16pcs
F	BUTTON 14.5mm		4pcs
G	ADJUSTABLE M6X23mm		4pcs
H	ALLEN KEY M4X100		1pc

* screw driver not provided

 
STEP 1

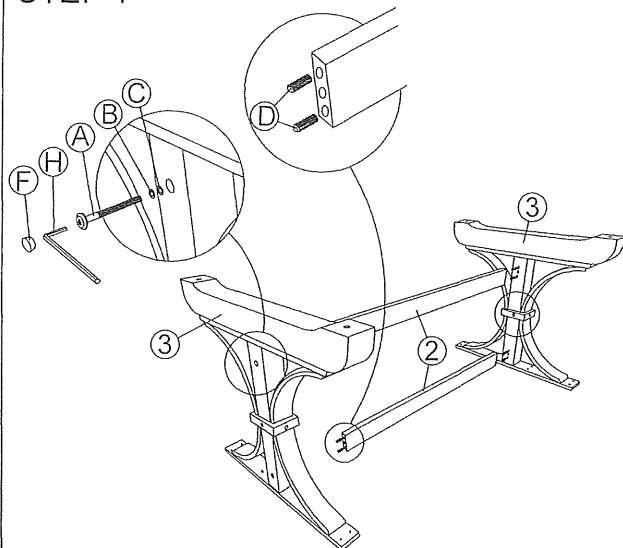

 STEP 2

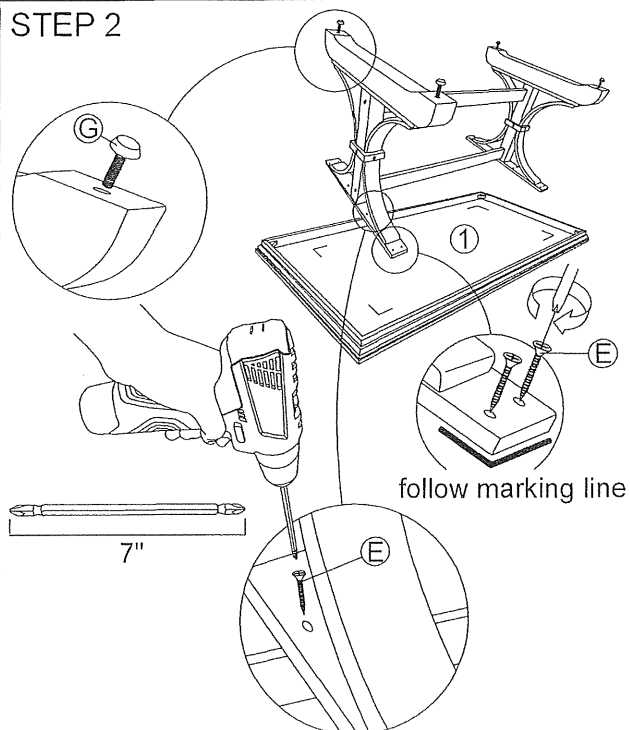

COMPLETED
ASSEMBLY

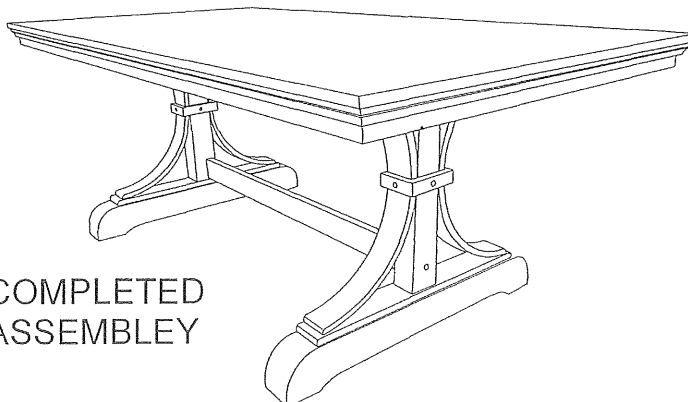 


ASSEMBLY INSTRUCTION'S


MODEL: DM21073 DINING CHAIR

Please follow Assembly Instruction carefully. Step by step.


PART LIST		
1	CHAIR BACK	1pc
2	SEAT	1pc
3	FRONT LEG	2pcs

 HARDWARE LIST			
A	JCBC M6X80MM		4pcs
B	JCBC M6X60MM		4pcs
C	JCBC M6X40MM		2pcs
D	FLAT WASHER M6X19MM		10pcs
E	SPRING WASHER M6		10pcs
F	ALLEN KEY M4		1pc

 
STEP 1

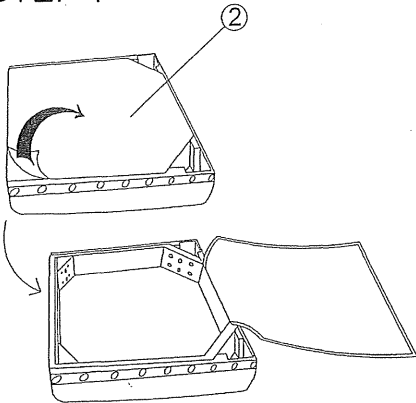

 STEP 2

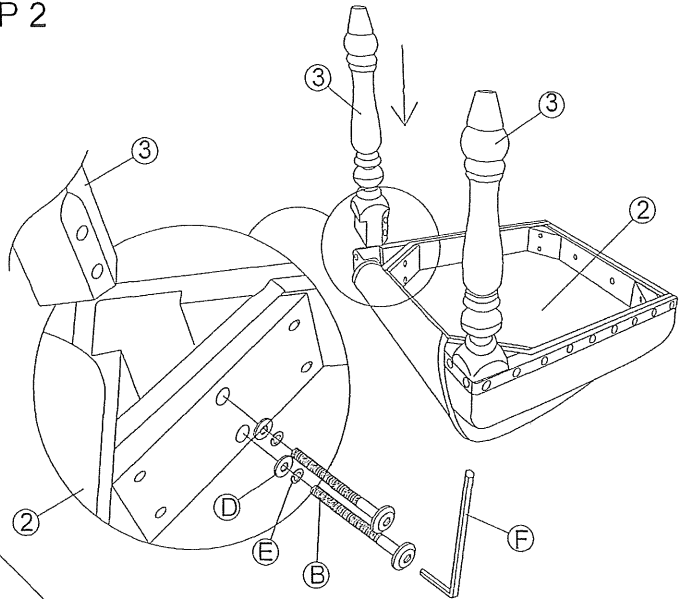

 STEP 3

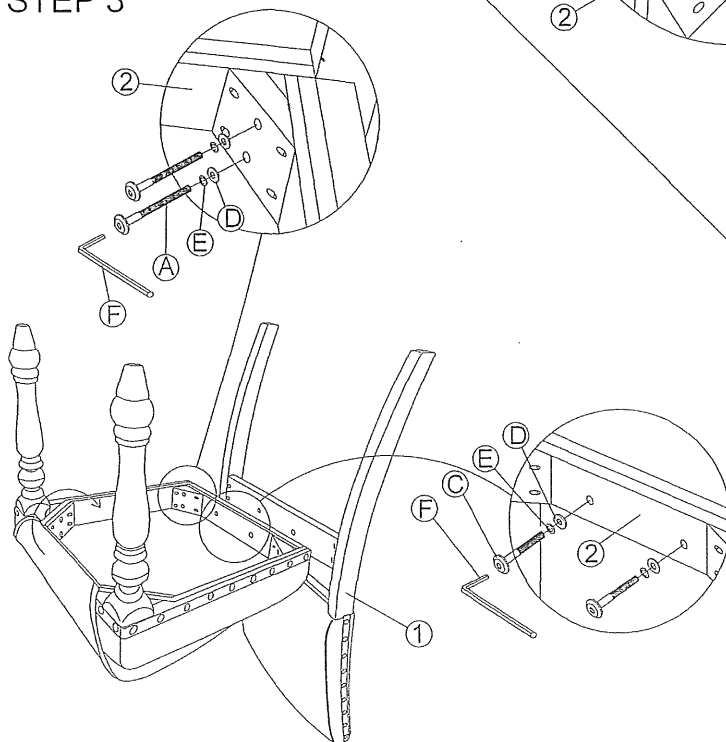

STEP 4



COMPLETED
ASSEMBLY

ASSEMBLY INSTRUCTION'S


MODEL: DM21073 BENCH CHAIR

Please follow Assembly Instruction carefully. Step by step.


PART LIST		
1	SEAT	1pc
2	LEG	4pcs
3	CENTER LEG	2pcs

HARDWARE LIST			
A	JCBC M6x60mm		12pcs
B	FLAT WASHER M6x19mm		12pcs
C	SPRING WASHER M6		12pcs
D	ADJUSTABLE M6x20mm		2pcs
E	ALLENKEY M4		1pc


 
STEP 1

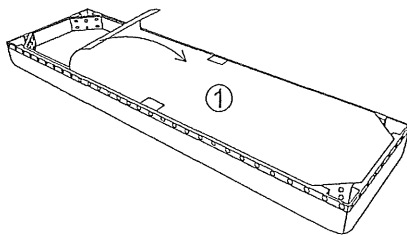

 STEP 2

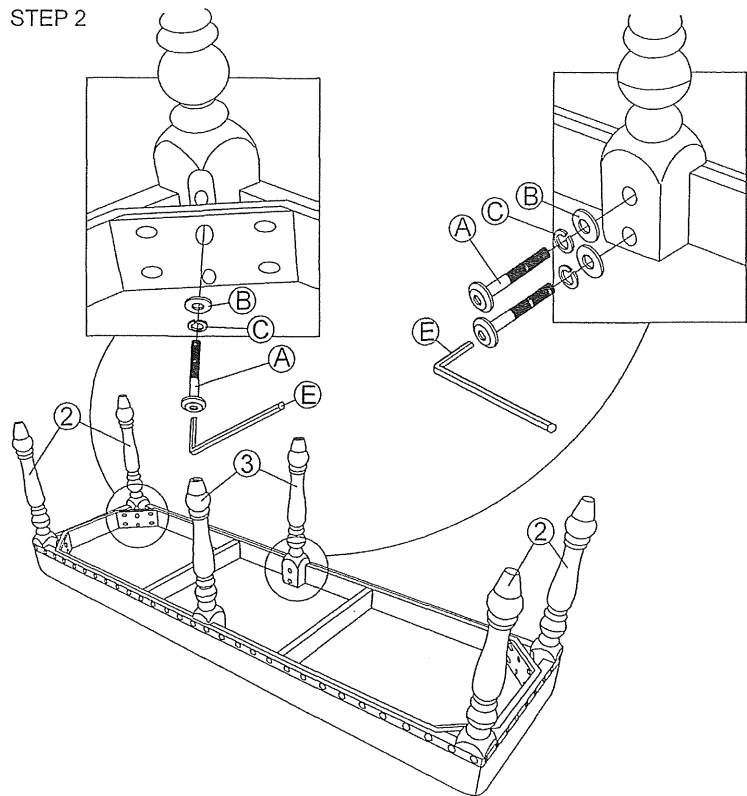

  STEP 3

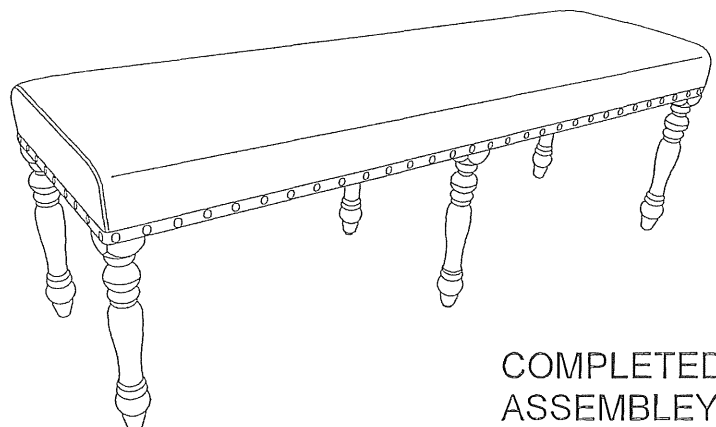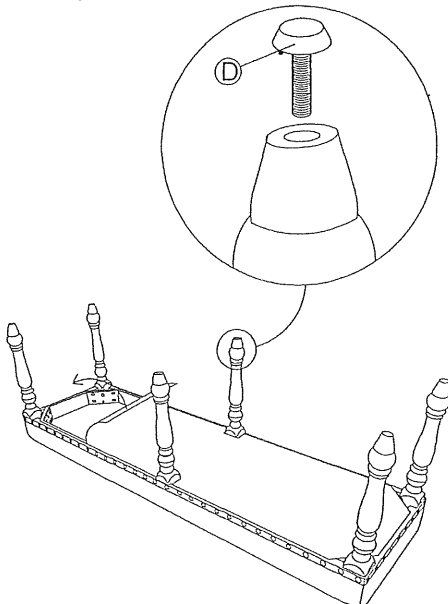

COMPLETED
ASSEMBLY