


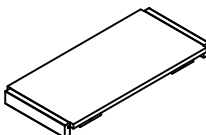
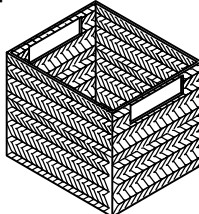
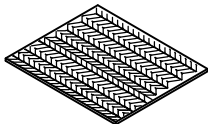





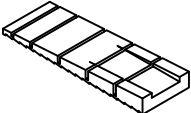




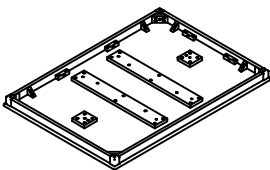


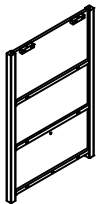


## ASSEMBLY INSTRUCTIONS

### SET TABLE DV25009

FOR THE TABLE :

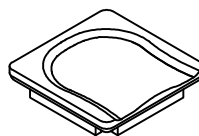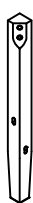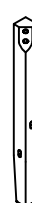
<p>A x 1</p> 	<p>B x 2</p> 	<p>C x 2</p> 	<p>D x 3</p> 
<p>E x 4</p> 	<p>F x 4</p> 	<p>G x 8</p>  <p>Ø8 x 30mm</p>	<p>H x 2</p>  <p>Ø1/4"x45mm</p>
<p>J x 14</p>  <p>Ø1/4"x38mm</p>	<p>K x 6</p>  <p>Ø5/16"x38mm</p>	<p>L x 1</p>  <p>M4</p>	<p>M x 3</p> 

FOR A STOOL x 4
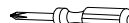
<p>N x 1</p> 	<p>P x 2</p> 	<p>R x 2</p> 	<p>S x 4</p> 
<p>U x 8</p>  <p>1/4"x50mm</p>	<p>W x 8</p>  <p>M8x45mm</p>	<p>L x 1</p>  <p>M4</p>	<p>Not Included</p> 


 NOTE: UNIT SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.  
DO NOT TIGHTEN ANY BOLTS UNTIL ALL BOLTS HAVE BEEN STARTED!

NOTE: ASSEMBLY INSTRUCTION FOR MULTIPLE UNITS, THE PARTS/LABEL INDEX ARE SEPARATED FOR DIFFERENT UNITS  
THE PARTS & HARDWARE ARE PLACED INSIDE THE BOX AS BELOW


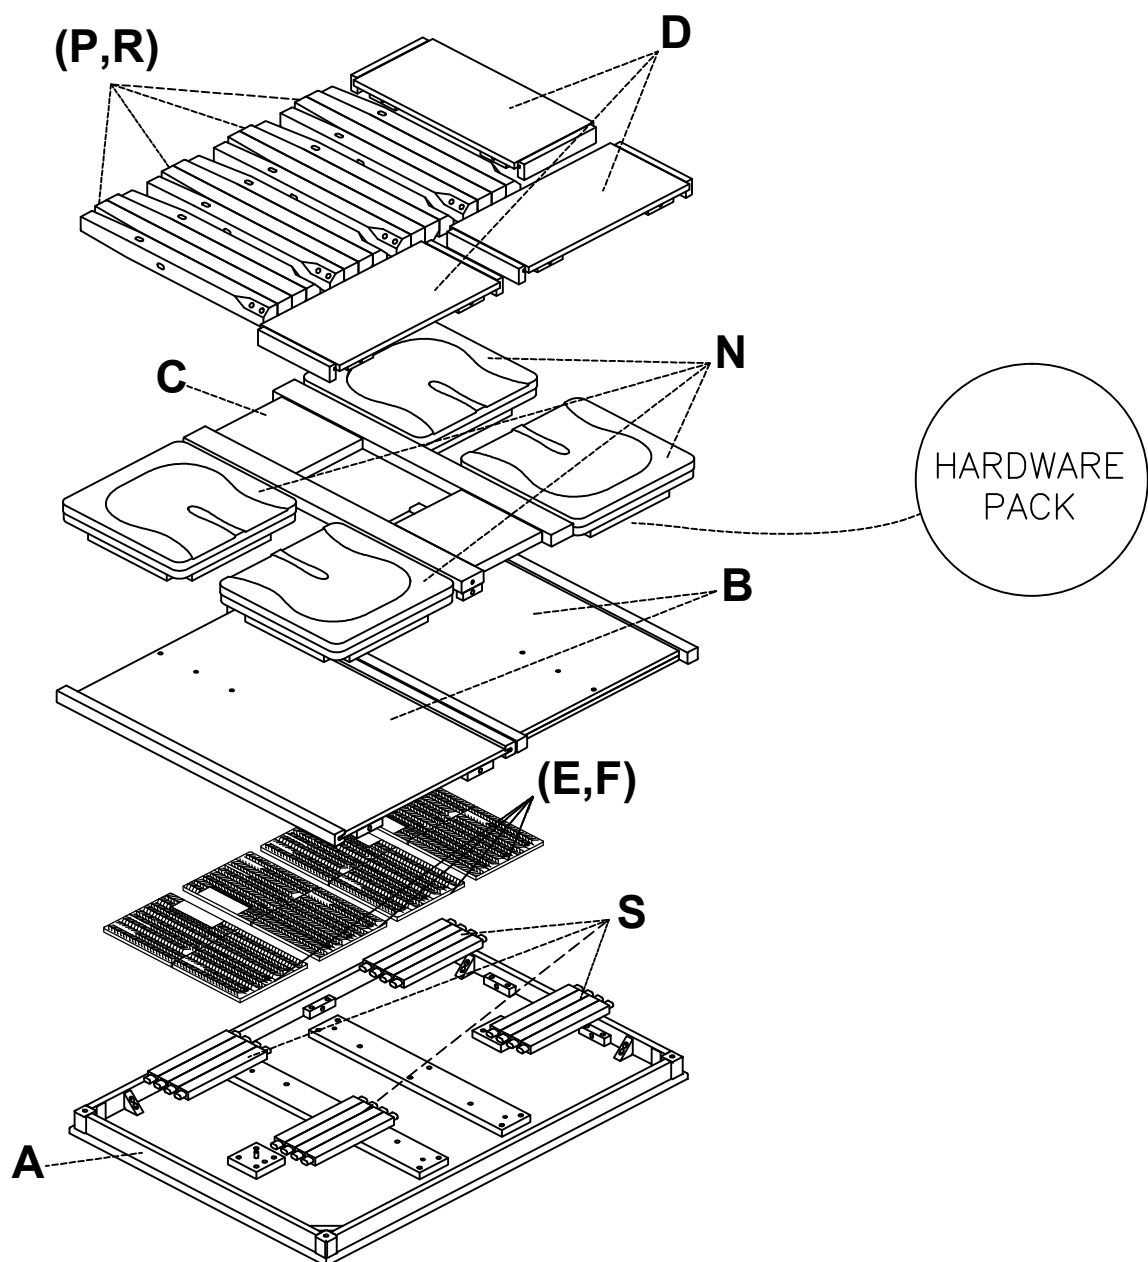


## Step 1

J x 6

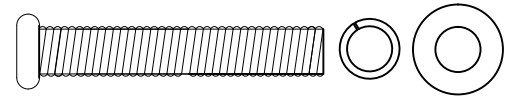


Ø1/4"x38mm

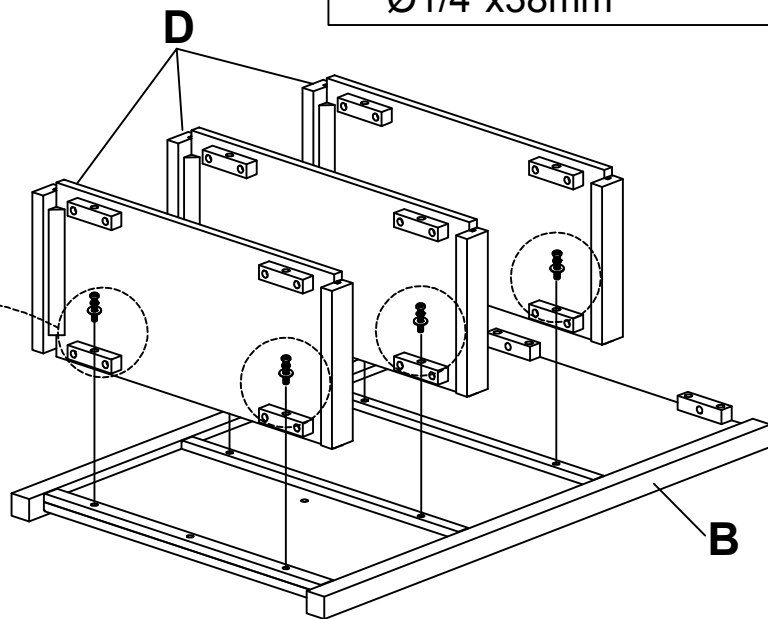
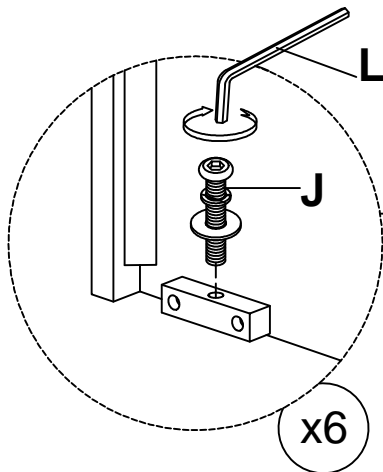


## Step 2

J x 6

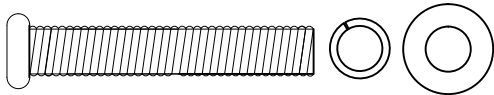


Ø1/4"x38mm

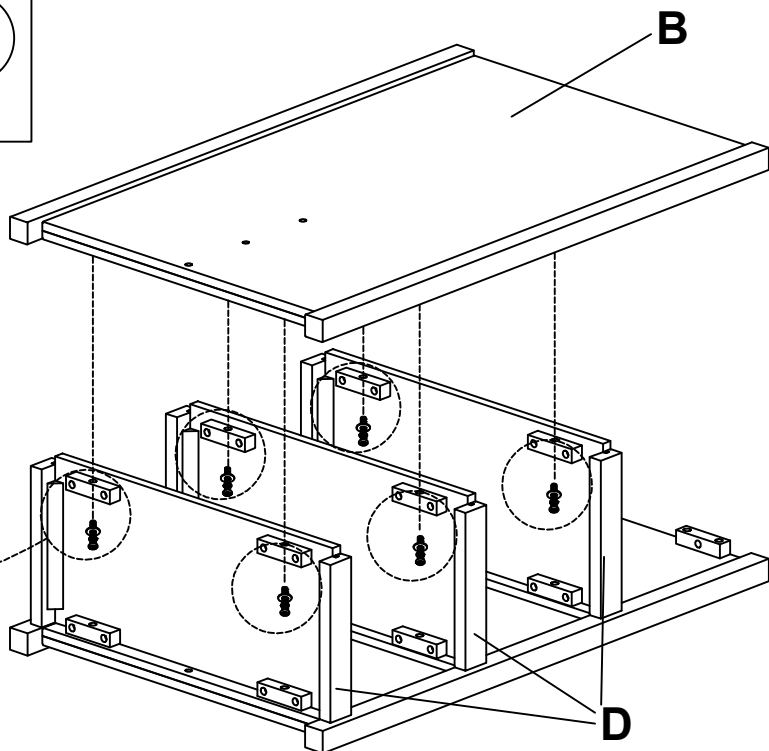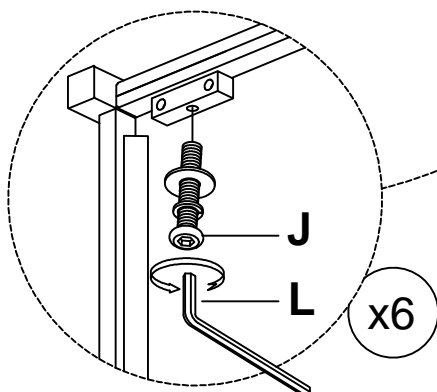


### Step 3

H x 2

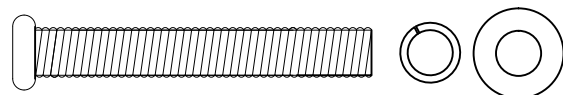

Ø1/4"x45mm

J x 2


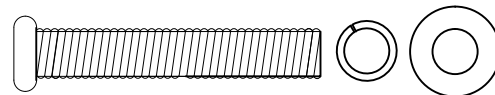


1/4"x38mm

G x 2




Ø8 x 30mm

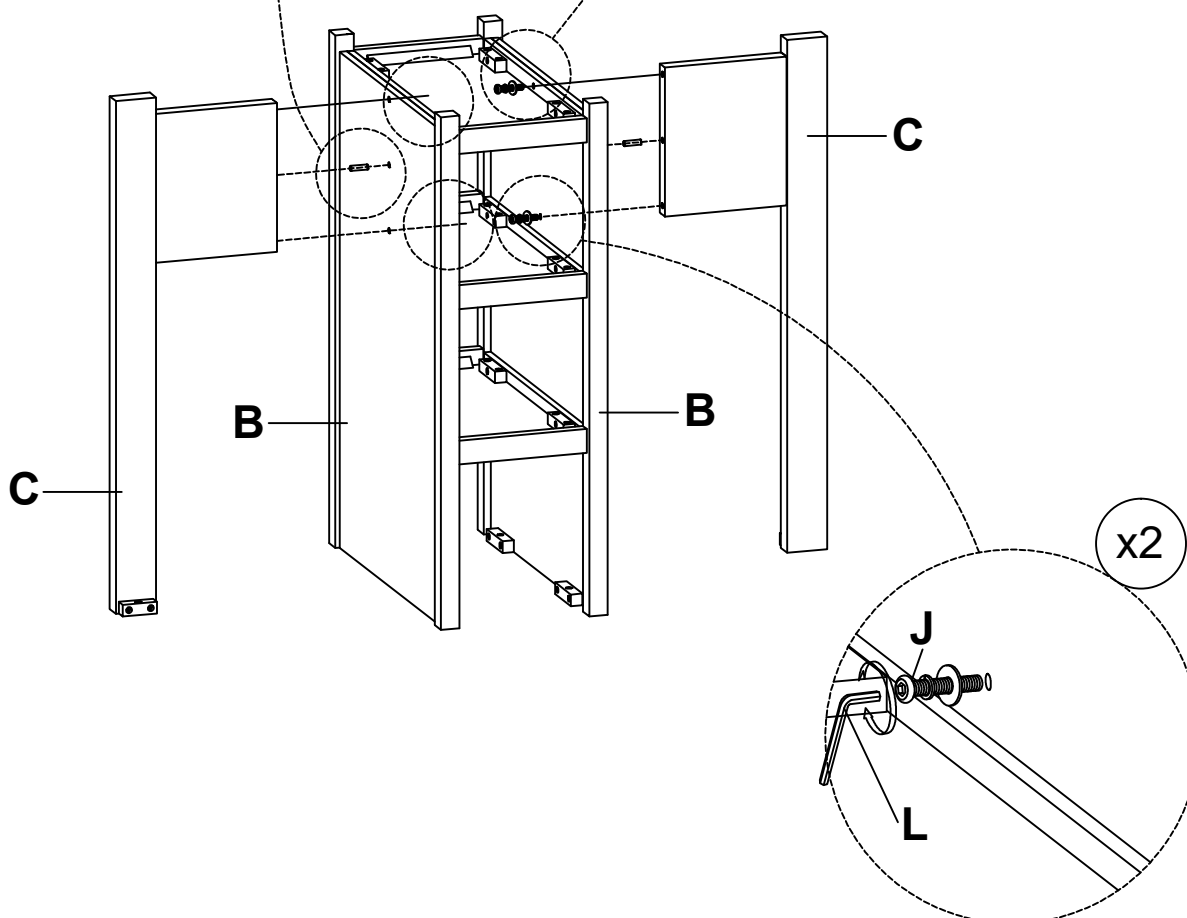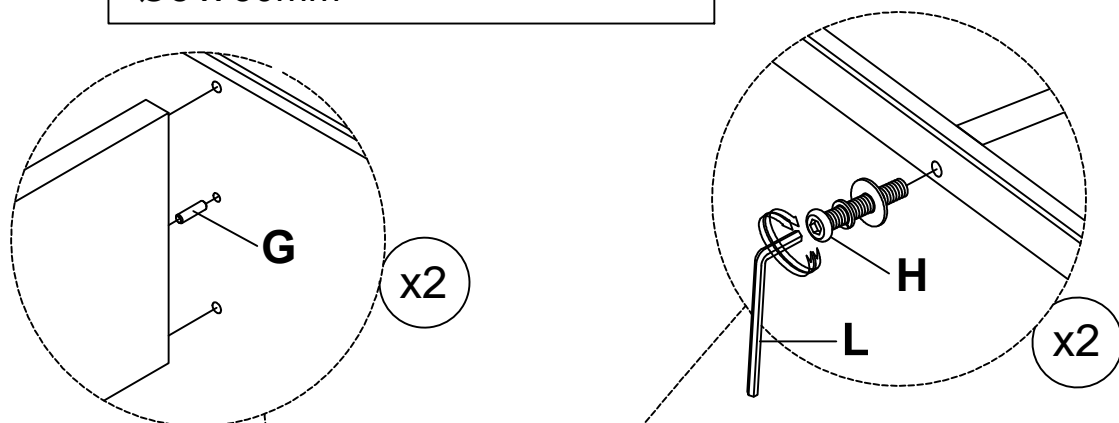


## Step 4

K x 6

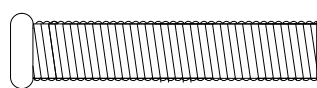




Ø5/16"x38mm

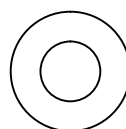


G x 6




Ø8 x 30mm

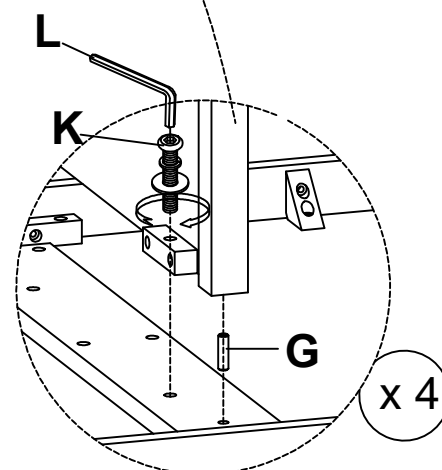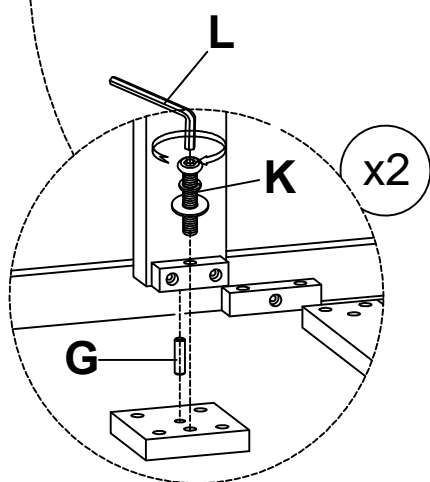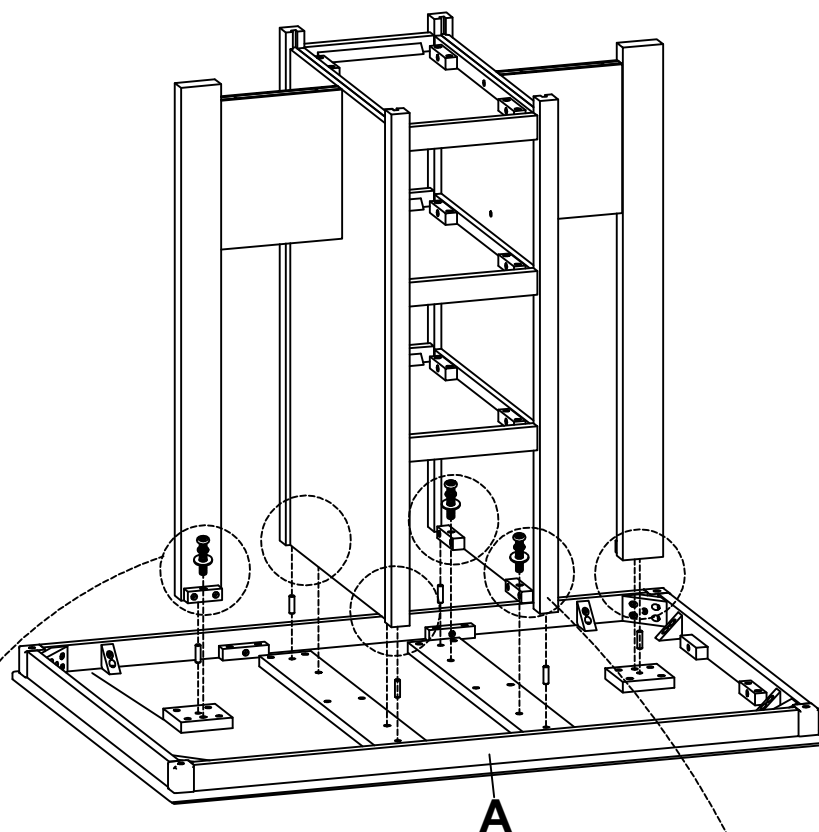

## Step 5

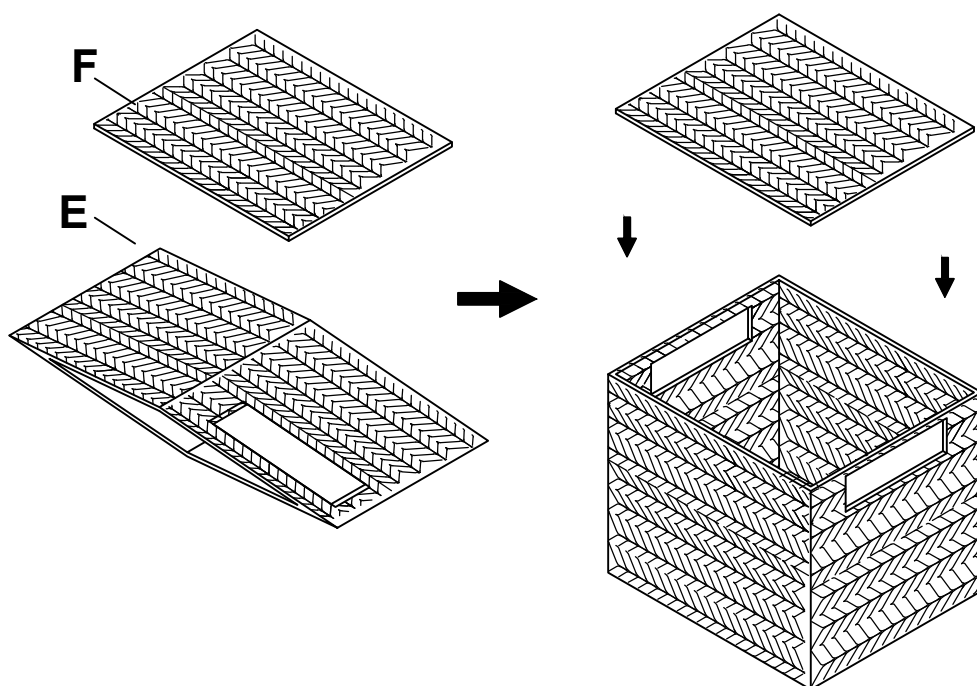


## Step 6

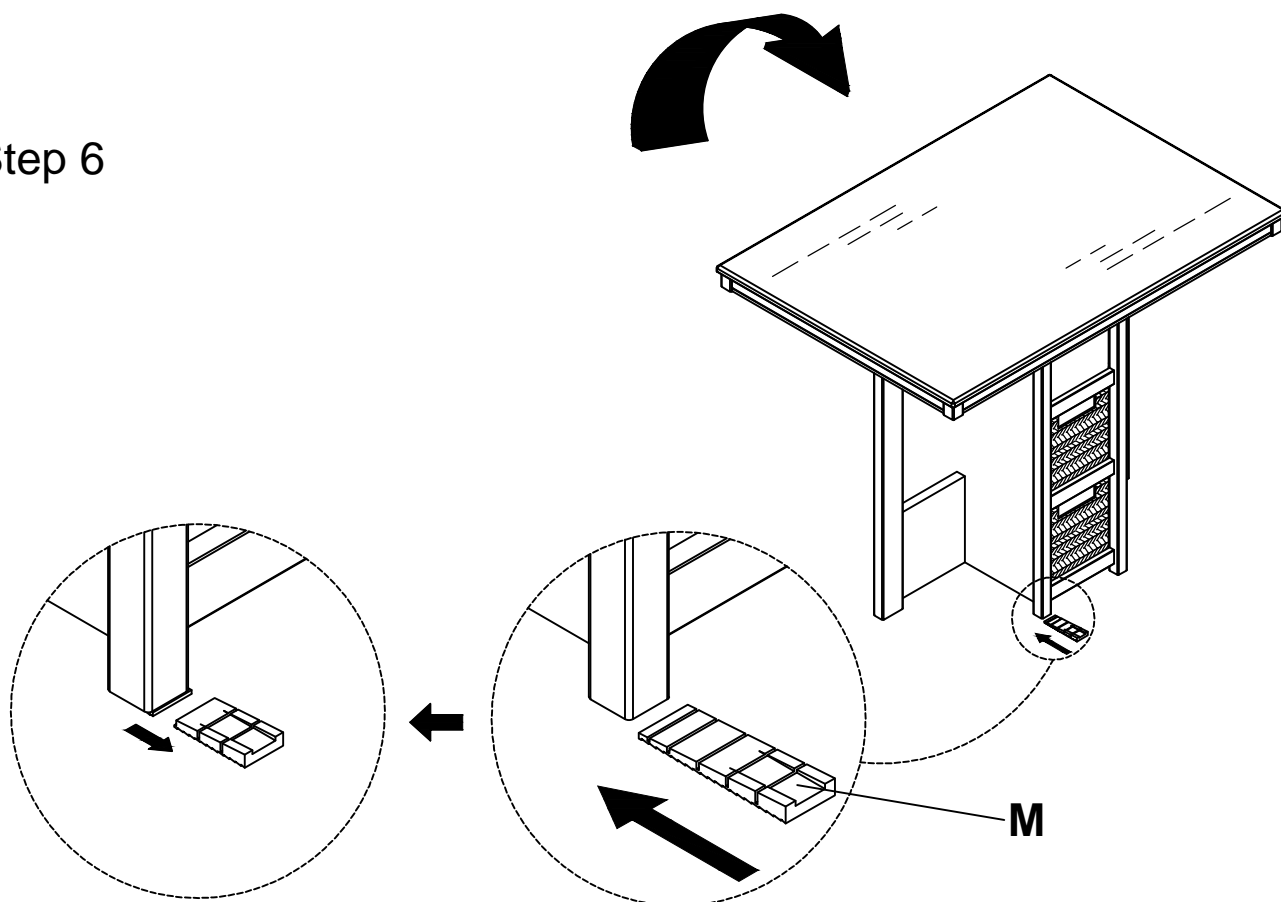



NOTE: IF THE UNIT IS PLACED ON AN UNLEVEL SURFACE, PLACE AA LEVELER UNDERNEATH ONE FOOT UNTIL THE UNIT IS LEVEL. BREAK OFF ANY PROTRUDING SEGMENTS.

## Step 7

U x 4

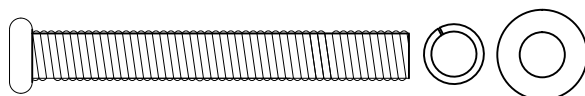


Ø1/4"x50mm

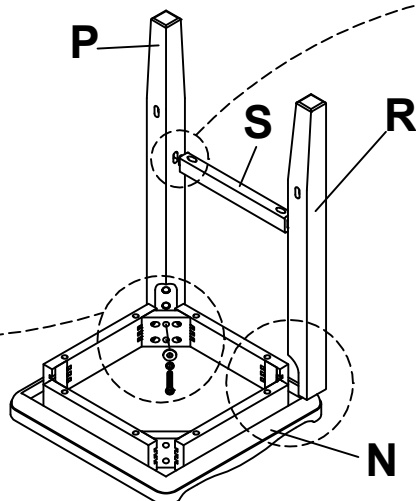
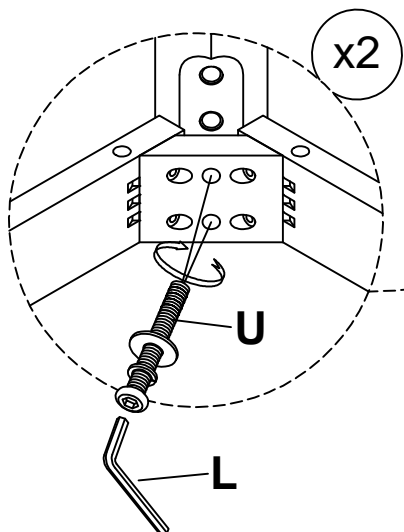


## Step 8

U x 4

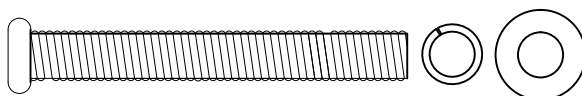

Ø1/4" x 50mm

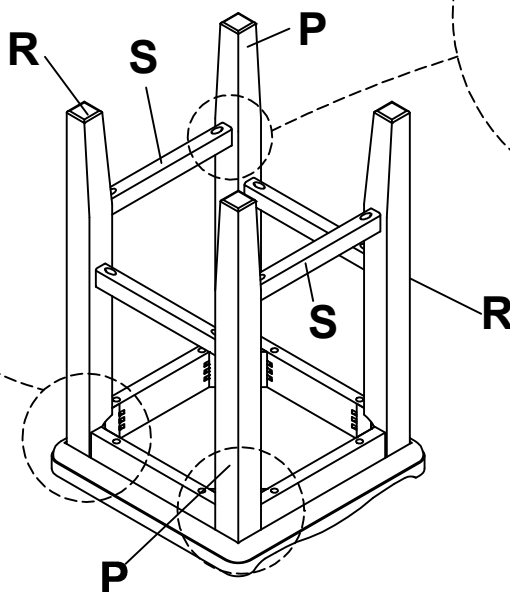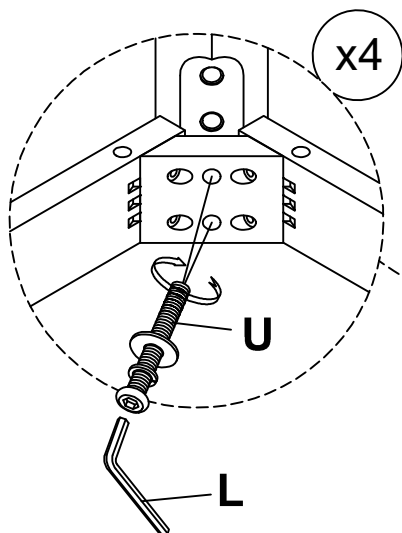


## Step 9


W x 8



M8x45mm

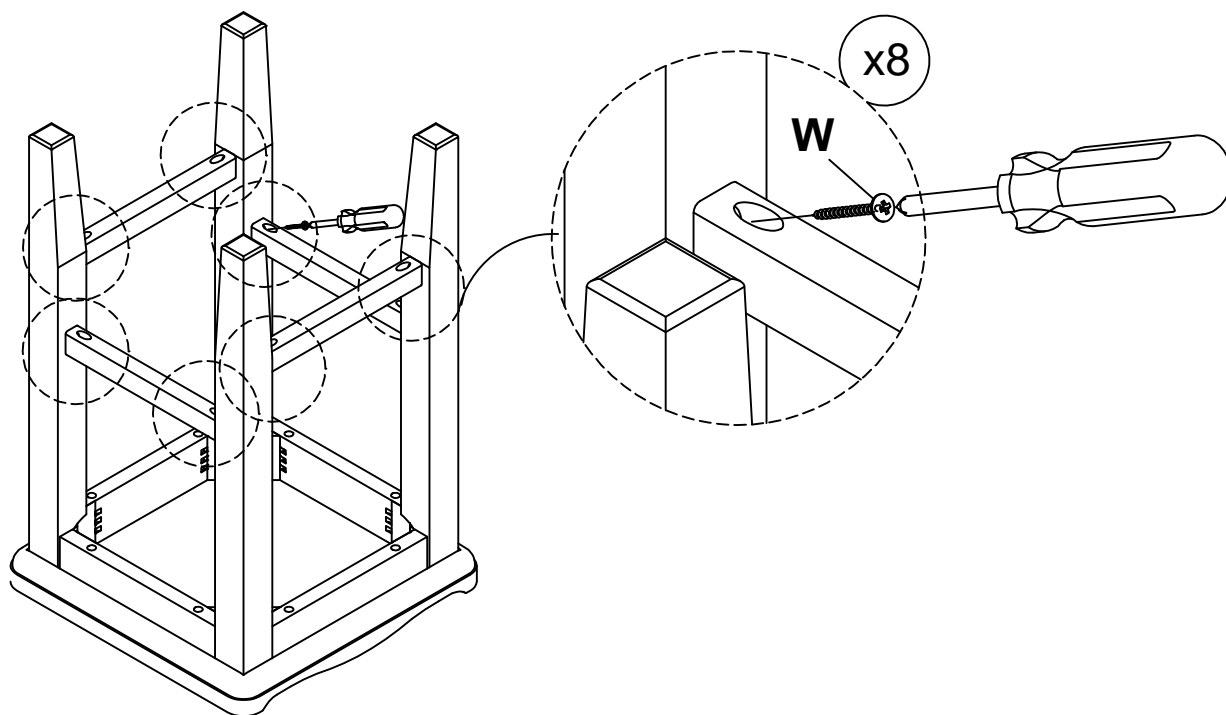

## Step 10

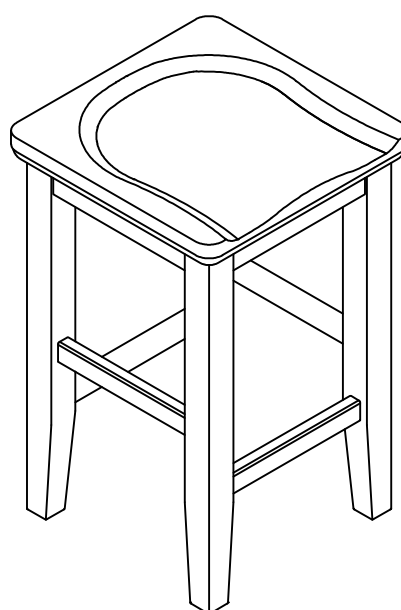

NOTE: Level the chair and tighten all bolts with the allen wrench.

## Step 11

