

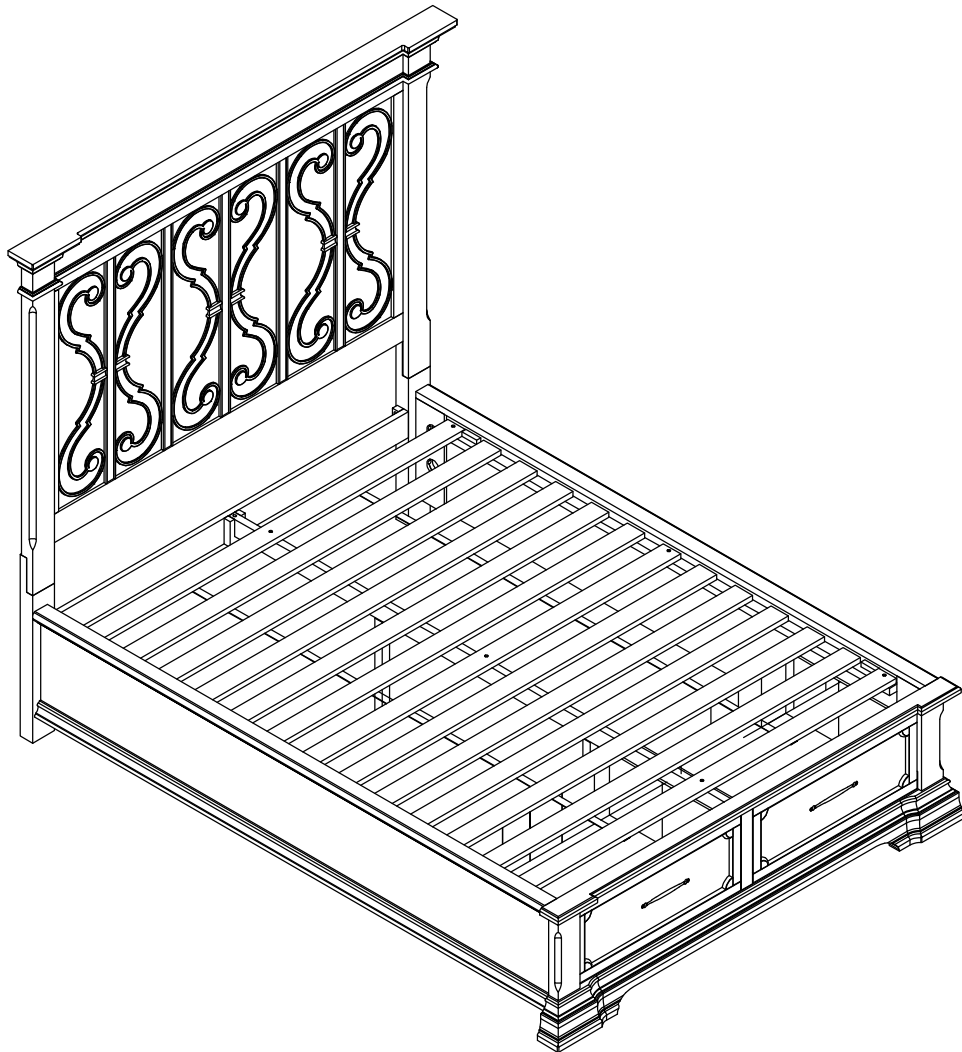


MOLLAI
COLLECTION

MBV1213/2213-Q

QUEEN BED

ASSEMBLY INSTRUCTIONS







ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


Warning!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION

A		Headboard	1PC
B		H/Board leg (R/ L)	2PCS
C		Bottom Rail	1PC
D		Footboard	1PC
E		Footboard Leg support	2PCS
F		Bed rail	2PCS
G		Bed slat Roll	1 SET
H		Bed slat support	1 SET
K		Center support with leveler	2PCS


HARDWARE IDENTIFICATION

1		Bolt:5/16" x 1-3/4"	12PCS
2		Bolt:1/4" x 1-3/4"	4PCS
3		Lock washer:5/16"	12PCS
4		Flat washer:5/16"	12PCS
5		Lock washer:1/4"	4PCS
6		Flat washer:1/4"	4PCS
7		Allen wrench	1PC
8		Threaded Stud	8PCS
9		Hex Nut	8PCS
10		Half round nut	8PCS
11		Wrench	1PC
12		Screw	11PCS

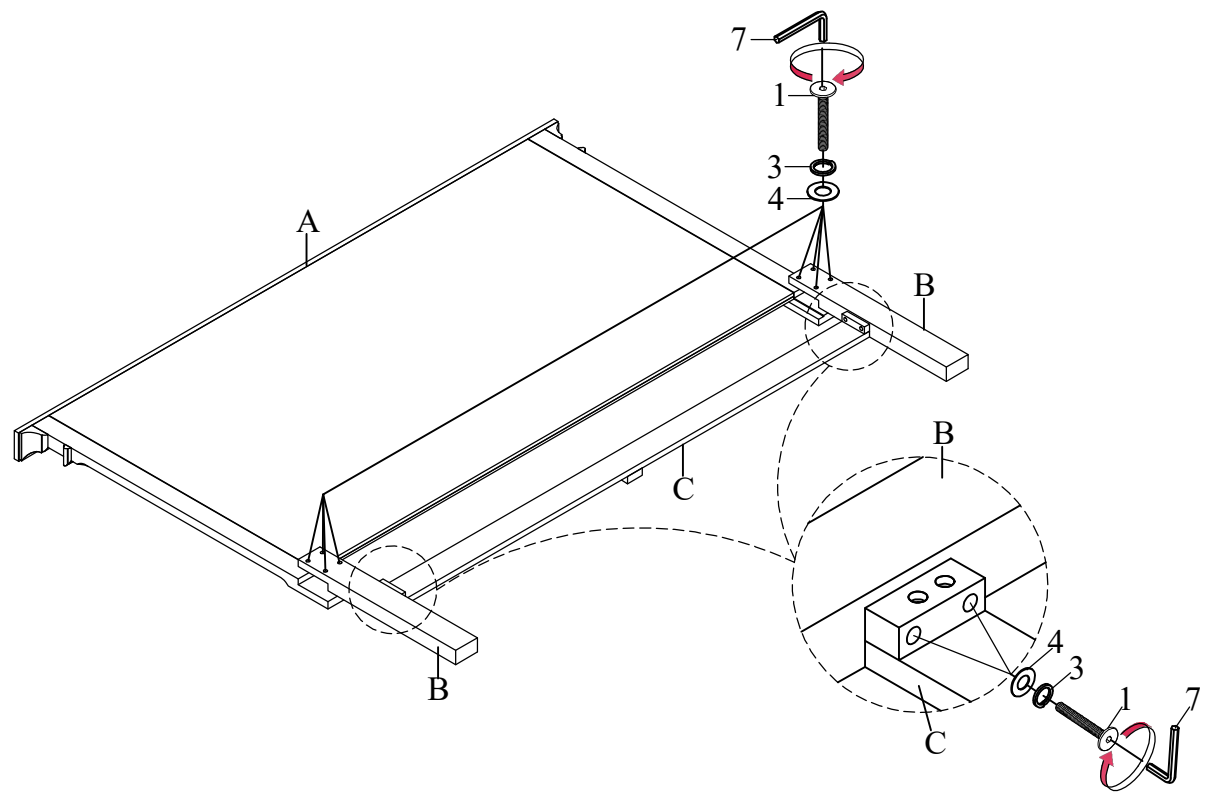
STEP 1.



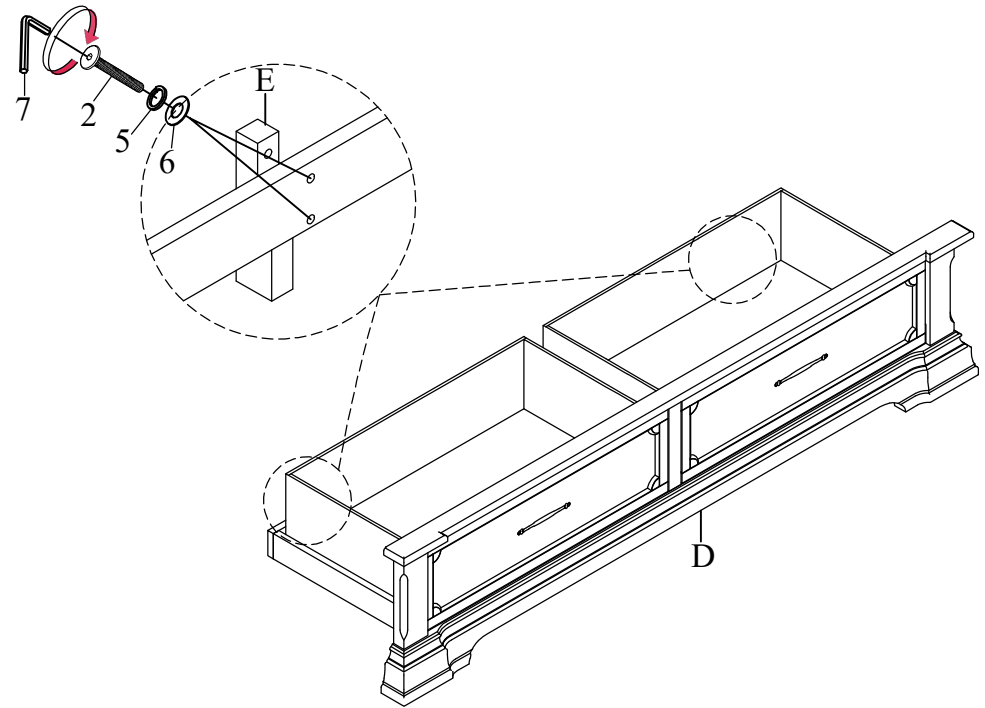STEP 2.



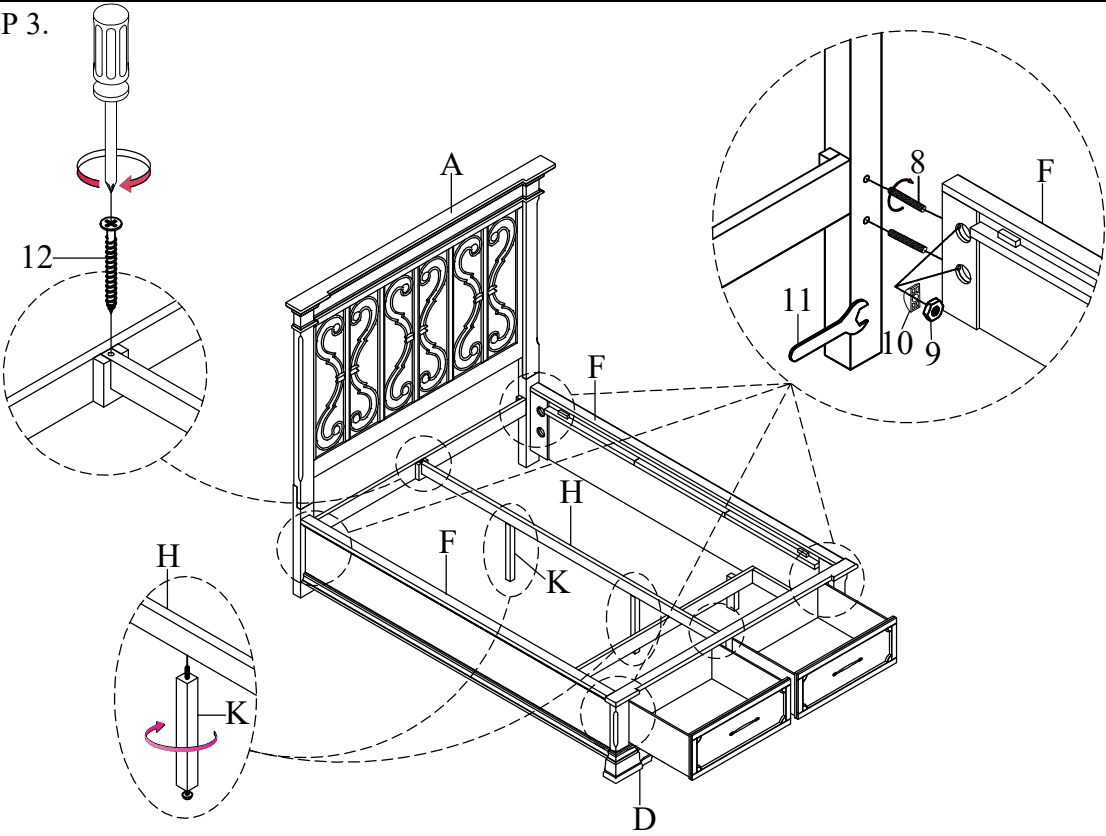STEP 3.



STEP 4.

