


ASSEMBLY INSTRUCTION

MODEL:DM25657-AC

NO	PARTS LIST		QTY
1	SIDE LEG (L)		1PC
2	SIDE LEG (R)		1PC
3	FRONT RAIL		1PC
4	CENTER RAIL		2PCS
5	BACK SUPPORT		2PCS
6	BACK CUSHION		1PC
7	CUSHION SEAT		1PC


NO	HARDWARE LIST		QTY
A		JCBC M6 x 25mm	2PCS
B		JCBC M6 x 45mm	8PCS
C		JCBC M6 x 70mm	4PCS
D		SPRING WASHER	14PCS
E		CSK SCREW M4 x 32mm	4PCS
F		DOWEL M8 x 30mm	10PCS
G		M4 ALLEN KEY	1PC
H		WOOD BUTTON	6PCS
I		DOWEL M8 x 20mm	4PCS

STEP 1

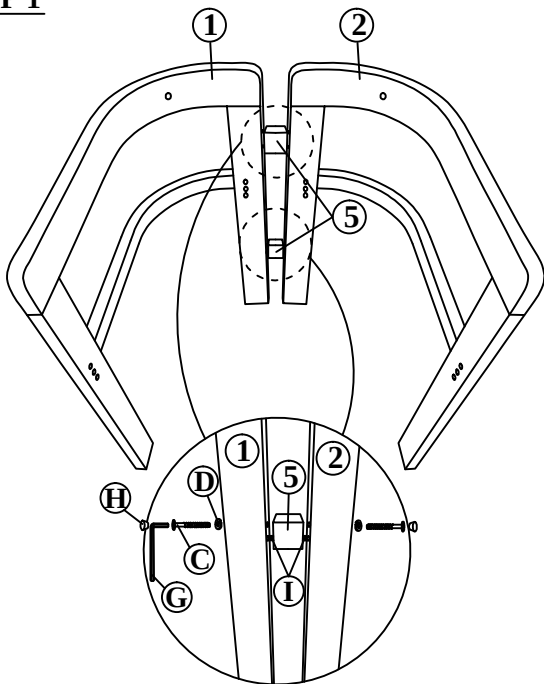

(Do not fully tighten JCBC screw)

STEP 2

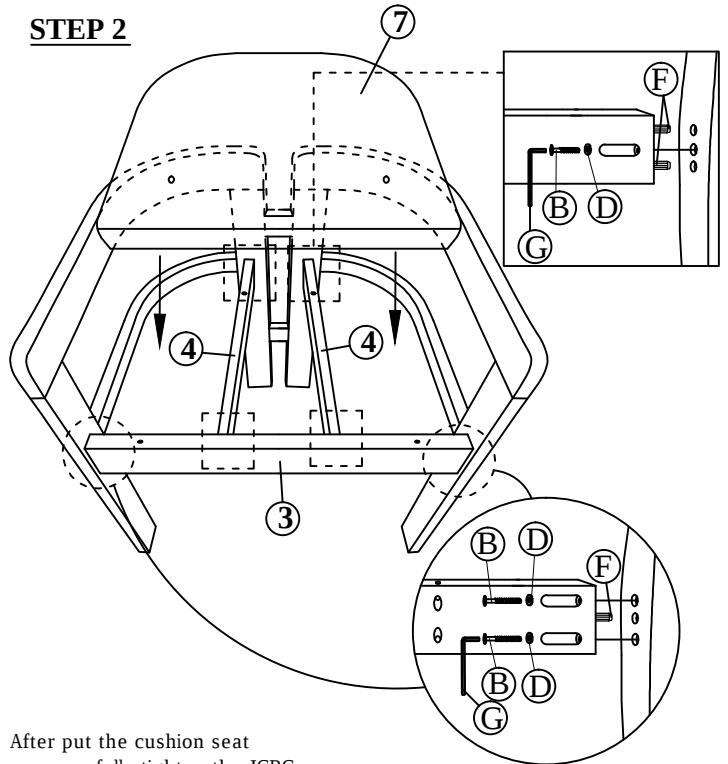

After put the cushion seat you may fully tighten the JCBC screw

STEP 3

