


ASSEMBLY INSTRUCTION

ITEM : BM22121-QB


NO	PARTLIST	QTY
1	 HEADBOARD CUSHION	1PC
2	 RIGHT WING (WITH "R" LABEL)	1PC
3	 LEFT WING (WITH "L" LABEL)	1PC
4	 FOOTBOARD CUSHION	1PC
5	 FOOTBOARD LEG	2PCS
6	 SIDE RAIL	2PCS
7	 SIDE RAIL	2PCS
8	 SIDE RAIL SUPPORT LEG	2PCS
9	 SLAT	4PCS
10	 SUPPORT LEG WITH ADJUSTABLE FEET	4PCS

ITEM	HAREWARE	QTY
A	 JCBB SCREW M8 x 20MM	4PCS
B	 JCBC SCREW M8 x 50MM	4PCS
C	 JCBC SCREW M6 x 15MM	6PCS
D	 JCBC SCREW M6 x 35MM	18PCS
E	 WOOD DOWEL M10 x 30MM	4PCS
F	 SPRING WASHER M6 x 12MM	14PCS
G	 FLAT WASHER M6 x 19MM	14PCS
H	 SCREW M4 x 32MM	8PCS
I	 L - KEY M5 x 65MM	1PC
J	 L - KEY M4 x 100MM	1PC
K	 SPRING WASHER M8 x 14MM	4PCS
L	 FLAT WASHER M8 x 22MM	4PCS


STEP 1

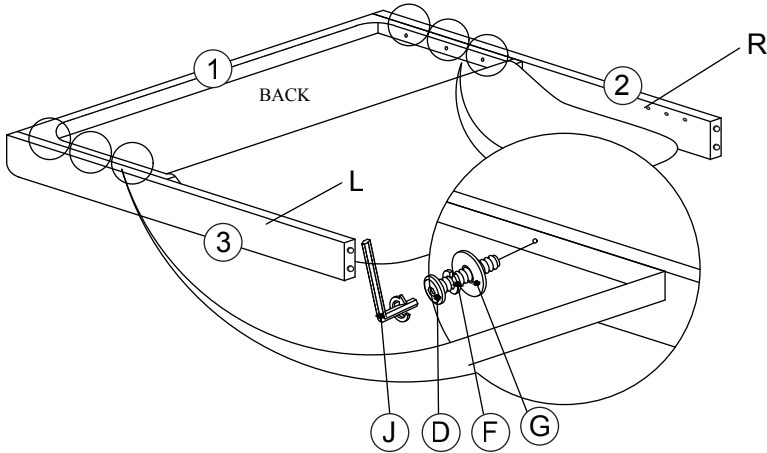


STEP 2

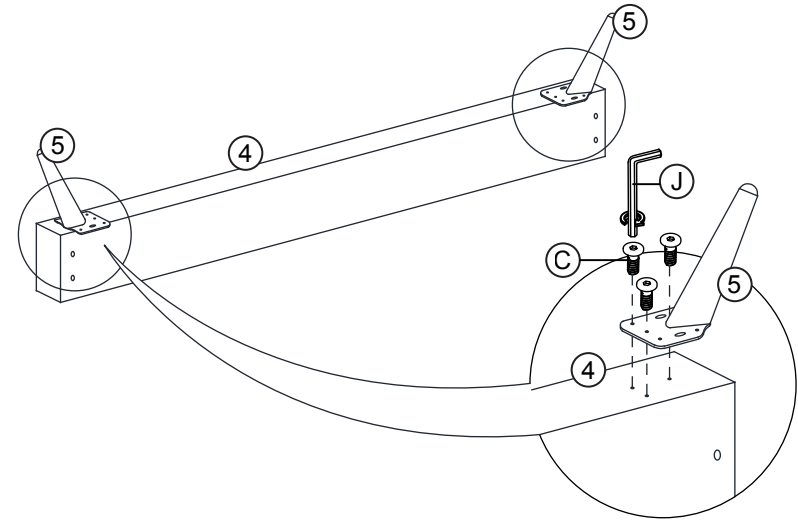

STEP 3

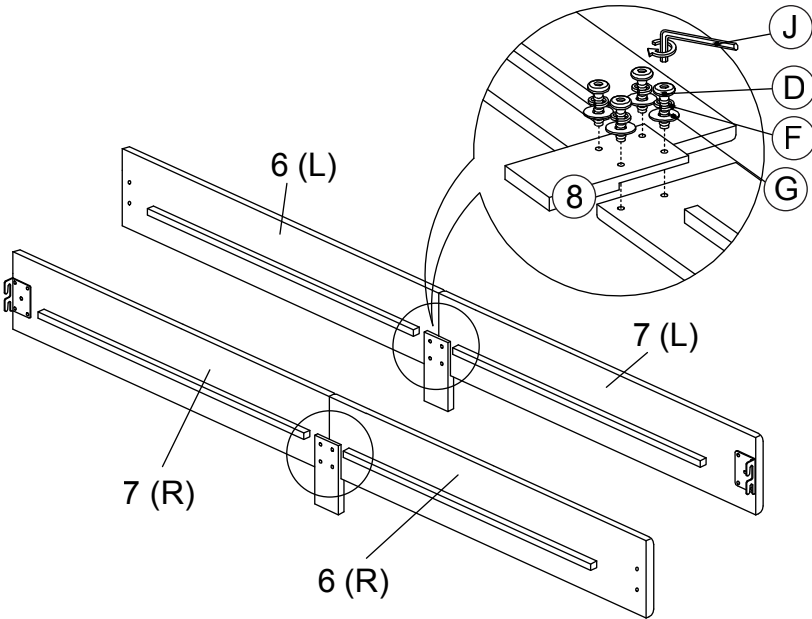


STEP 4

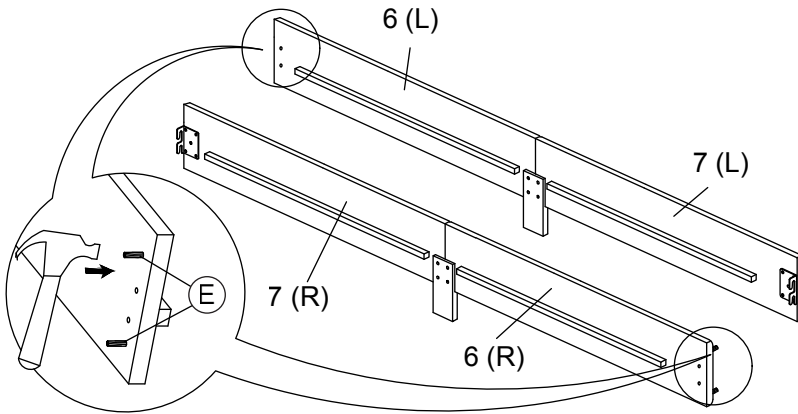


ASSEMBLY INSTRUCTION

ITEM : BM22121-QB


STEP 5

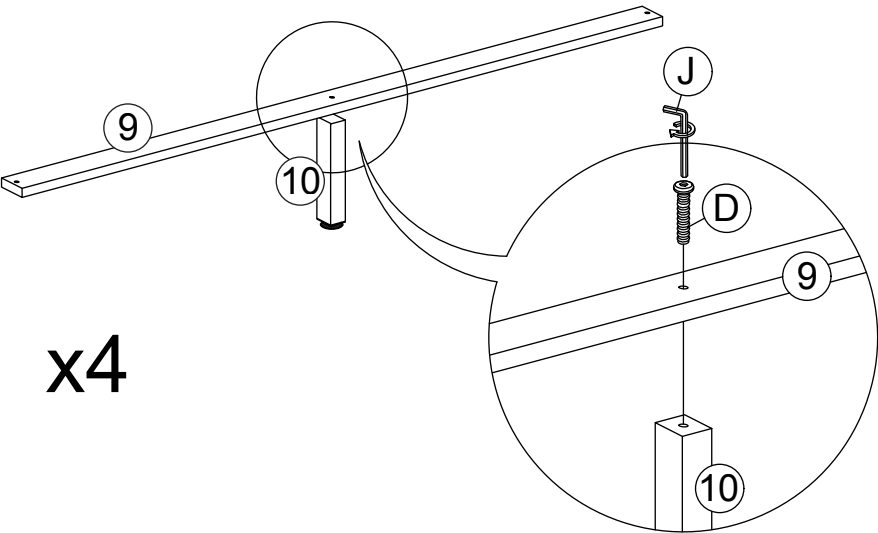


STEP 6

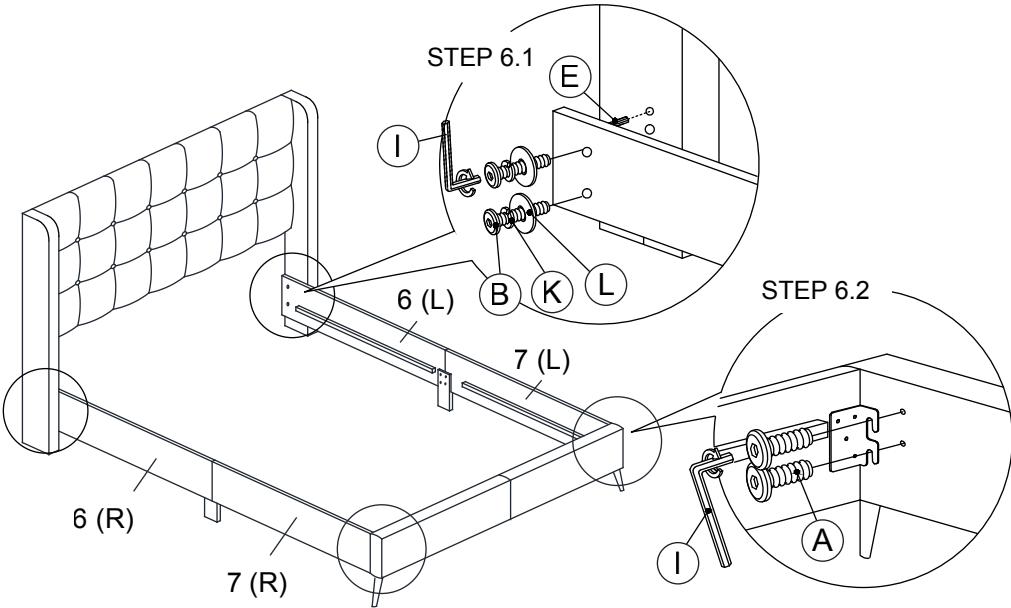

STEP 7

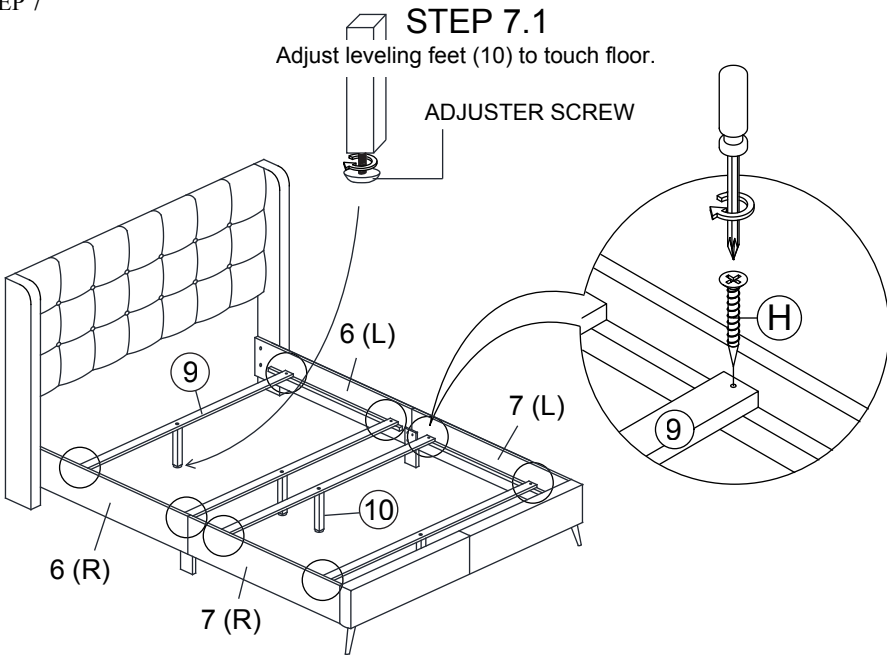

STEP 8

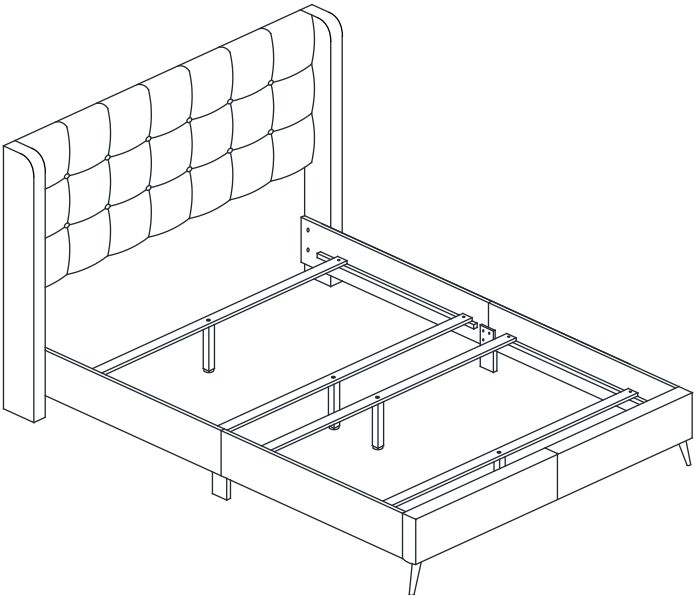

ASSEMBLY
COMPLETED