


BUYER : **BEL IMPORTS INC**

(QUEEN BED 60" x 80")

MODEL: BF2501B (REF:SMALL G7000) \*SMALL G8900


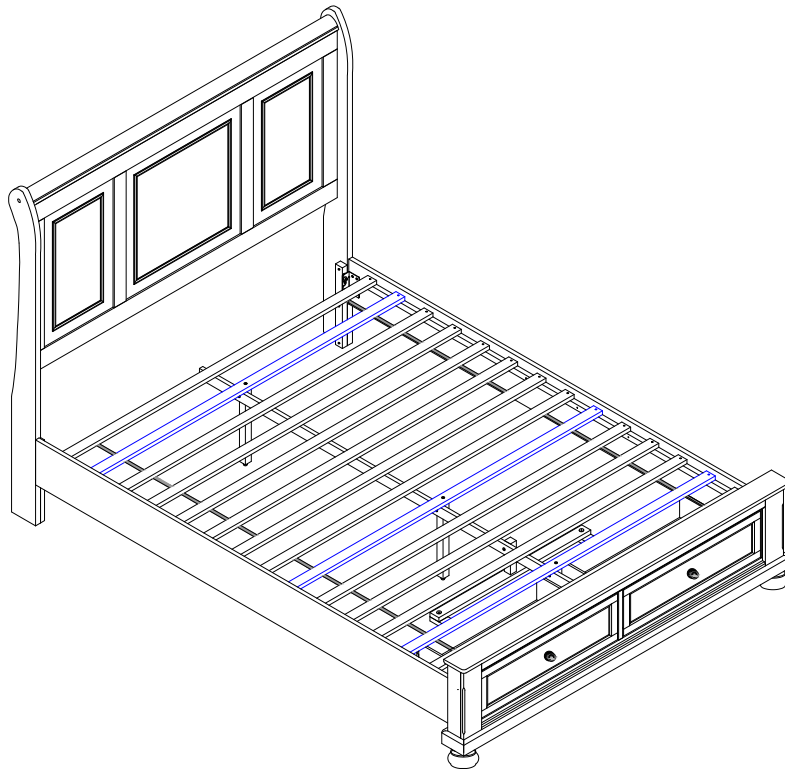




\* FOR INTERNAL USE ONLY  
\* 15/08/2025



PI NO #:	Colour :	Quantity
	TOBACCO 3067	
	*Extra	
	<b>Total :</b>	




\*TOTAL : 14 PCS SLATS + 1 PC LONG + 3 PCS SUPPORT LEGS

#### HARDWARE PACK 1









NO	HARDWARE DESCRIPTION	QTY
A.	JCBC Bolt M6 X 40mm 	6PCS
B.	JCBC Bolt M6 X 50mm 	2PCS
C.	Allen Key M4 	1PC
D.	Wood Button M15 x 9mm 	2PCS
E.	Spring Washer M6 	6PCS
F.	Flat Washer M6 	6PCS
SCREW DRIVER NOT PROVIDE !!!		

PACKING

#### HARDWARE PACK 2

NO	HARDWARE DESCRIPTION	QTY
G.	JCBC Bolt M6 x 35mm 	10PCS
H.	Chipboard Screw M4 x 32mm 	28PCS
I.	Adjuster Screw M6 x 24mm 	2PCS
SCREW DRIVER NOT PROVIDE !!!		

PACKING

NO	HARDWARE DESCRIPTION	QTY
A1.	Bed Bracket L&R 	4 PCS
B2.	Bracket - I 	4 PCS
C3.	Chipboard Screw M4 X 16mm 	36 PCS
D4.	Screw M8 x 16 mm 	8 PCS
E5.	Handle #TQ 0602-BLACK (Drawer) 	2 PCS
F6.	Handle Screw (Drawer) 	2 PCS
G7.	JCBC Bolt M6 x 35mm 	4 PCS
H8.	Adjuster Screw M6 x 24mm 	3 PCS


JOINT

# ASSEMBLY INSTRUCTION

QUEEN BED


## IMPORTANT SAFETY NOTICE READ CAREFULLY BEFORE BEGINNING ASSEMBLY!

- \* Before you begin, please read the Assembly Instruction carefully, identify all the parts, and hardware included. Do not skip any steps and follow the assembly steps in order.
- \* Place parts on the carton while installing to prevent damage or scratches. Be sure to check all packing materials carefully for small parts may have come loose inside the carton during shipment. If parts are missing, contact the retailer from which you purchased the product to obtain any missing part. **DO NOT USE SUBSTITUTE PART.**
- \* Some steps may require two or more people, do not attempt by yourself as there is a risk injury.



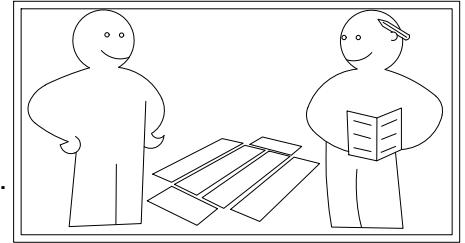


Attention:  
Two people are required for assembly and lifting unit.

**NOTE: YOUR UNIT MAY LOOK DIFFERENT IN APPEARANCE FROM THE ONE SHOWN IN THE ILLUSTRATIONS ON THIS INSTRUCTION SHEET.**

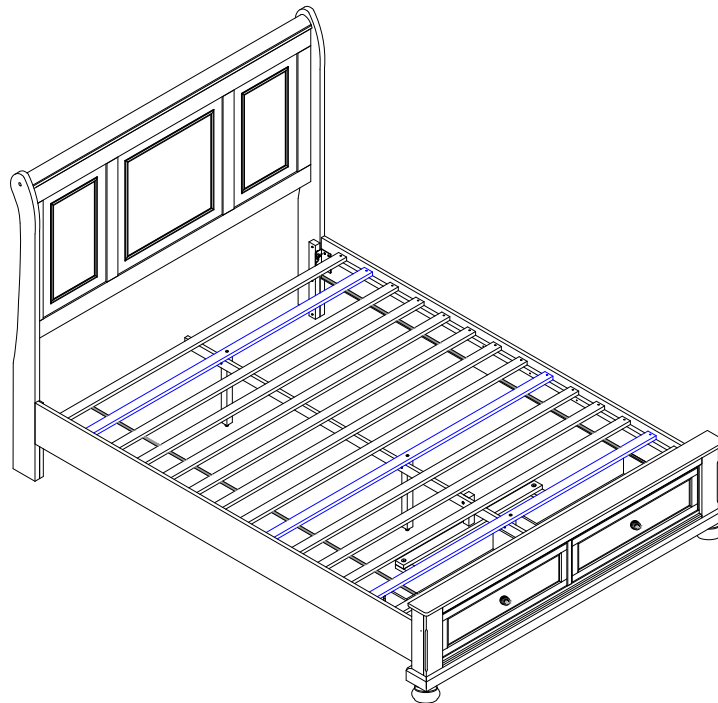

Required Tools : Screwdriver











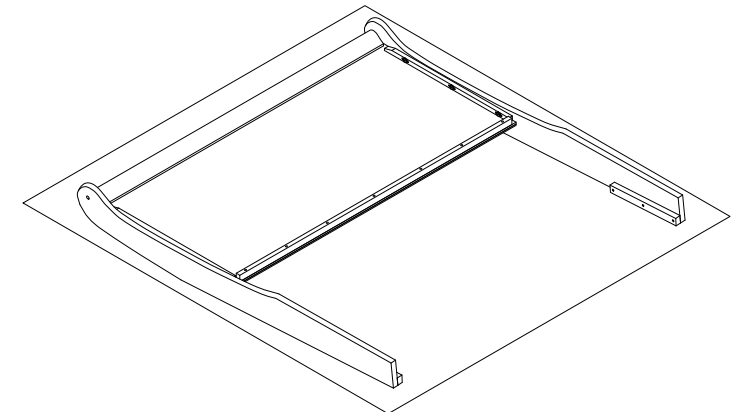
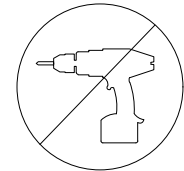
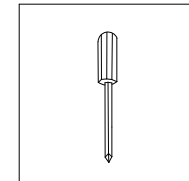




Please place on the carton while installing  
to prevent damage or scratches.



# ASSEMBLY INSTRUCTION

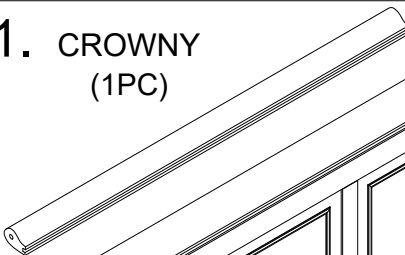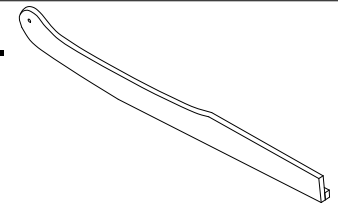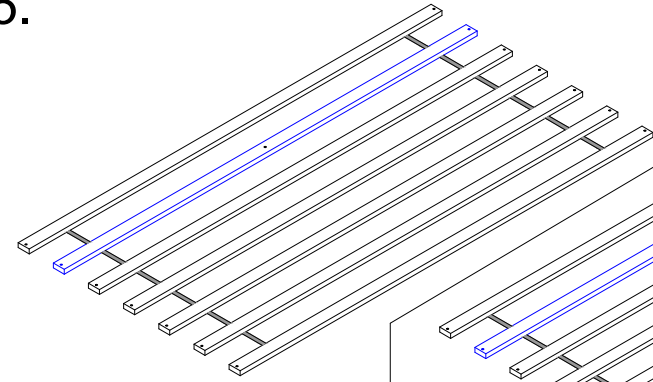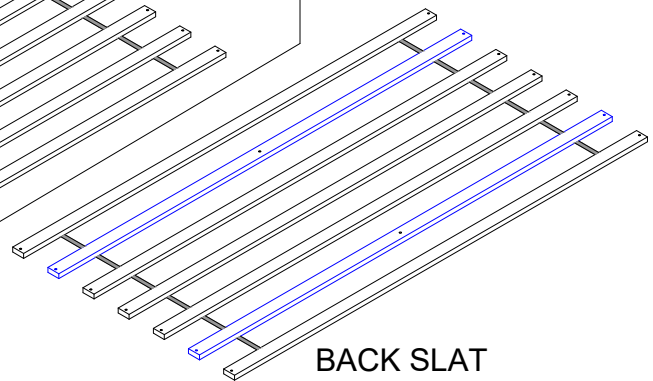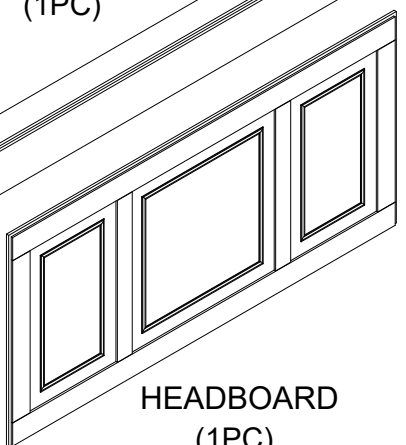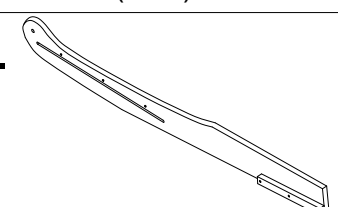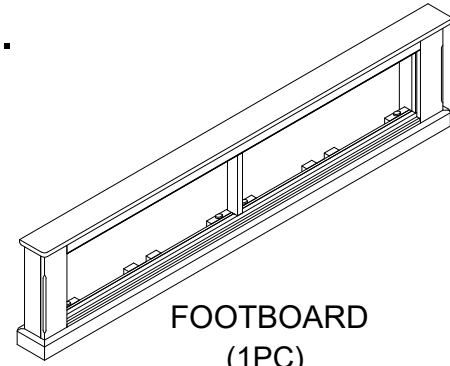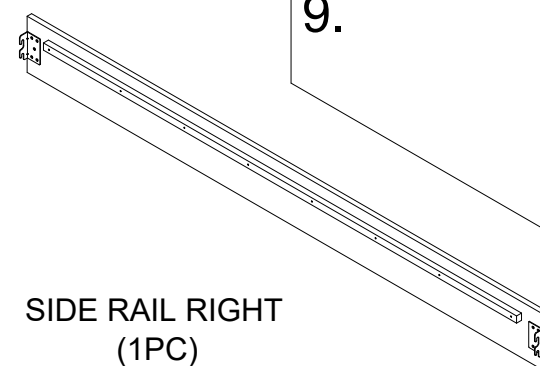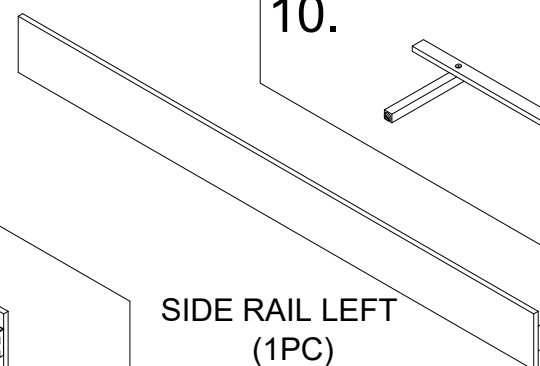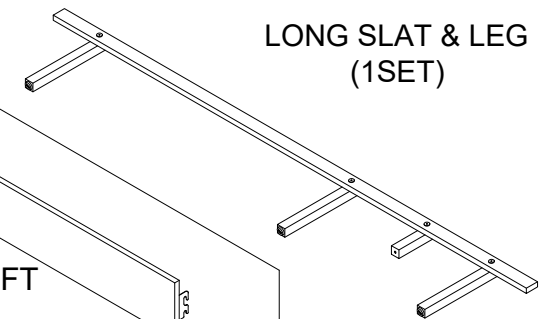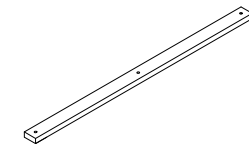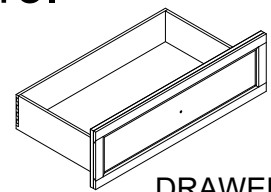QUEEN BED


ASSEMBLY PART				
<p>1. CROWNLY (1PC)</p> 	<p>3. HEADBOARD LEG RIGHT (1PC)</p> 	<p>5. FRONT SLAT (1SET)</p> 		<p>6. BACK SLAT (1SET)</p> 
<p>2. HEADBOARD (1PC)</p> 	<p>4. HEADBOARD LEG LEFT (1PC)</p> 			
<p>7. FOOTBOARD (1PC)</p> 	<p>8. SIDE RAIL RIGHT (1PC)</p> 	<p>9. SIDE RAIL LEFT (1PC)</p> 	<p>10. LONG SLAT &amp; LEG (1SET)</p> 	
<p>11. DRAWER SLAT (2PCS)</p> 	<p>12. DRAWER BACK SLAT (1PC)</p> 	<p>13. DRAWER (2PCS)</p> 	<p>14. SUPPORT LEG (2PCS)</p> 	<p>15. FOOTBOARD LEG (2PCS)</p> 

# HARDWARE PACK 1

QUEEN BED


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during the shipment. Count all parts and metal hardware, compare the parts list below to be sure all parts are present.

NOTE : HARDWARE AND QUANTITY SHOWN BELOW ARE FOR 1 UNIT ASSEMBLY



**A**      **6PCS**

JCBC Bolt  
M6 X 40mm




**B**      **2PCS**

JCBC Bolt  
M6 X 50mm




**C**      **1PC**

Allen Key M4




**D**      **2PCS**

Wood Button  
M15 X 9mm



**E**      **6PCS**

Spring Washer M6

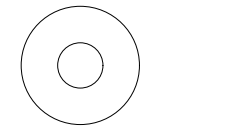

**F**      **6PCS**

Flat Washer M6

**1 : 1**




# HARDWARE PACK 2

QUEEN BED


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during the shipment. Count all parts and metal hardware, compare the parts list below to be sure all parts are present.

NOTE : HARDWARE AND QUANTITY SHOWN BELOW ARE FOR 1 UNIT ASSEMBLY




<b>G</b>	<b>10PCS</b>
----------	--------------

JCBC Bolt  
M6 X 35mm



<b>H</b>	<b>28PCS</b>
----------	--------------

Chipboard Screw  
M4 X 32mm



<b>I</b>	<b>2PCS</b>
----------	-------------

Adjuster Screw  
M6 X 24mm

**1 : 1**




# ASSEMBLY INSTRUCTION

QUEEN BED

## STEP 1.

Attach the Crownny (1), Headboard Leg Right (3) and Headboard Leg Left (4) to Headboard (2). Use JCBC Bolt (A), Spring Washer (E), Flat Washer (F) and Allen Key (C) to fix.

Use JCBC Bolt (B) and Allen Key (C) to fix.  
After tighten, use the Wood Button (D) to cover.

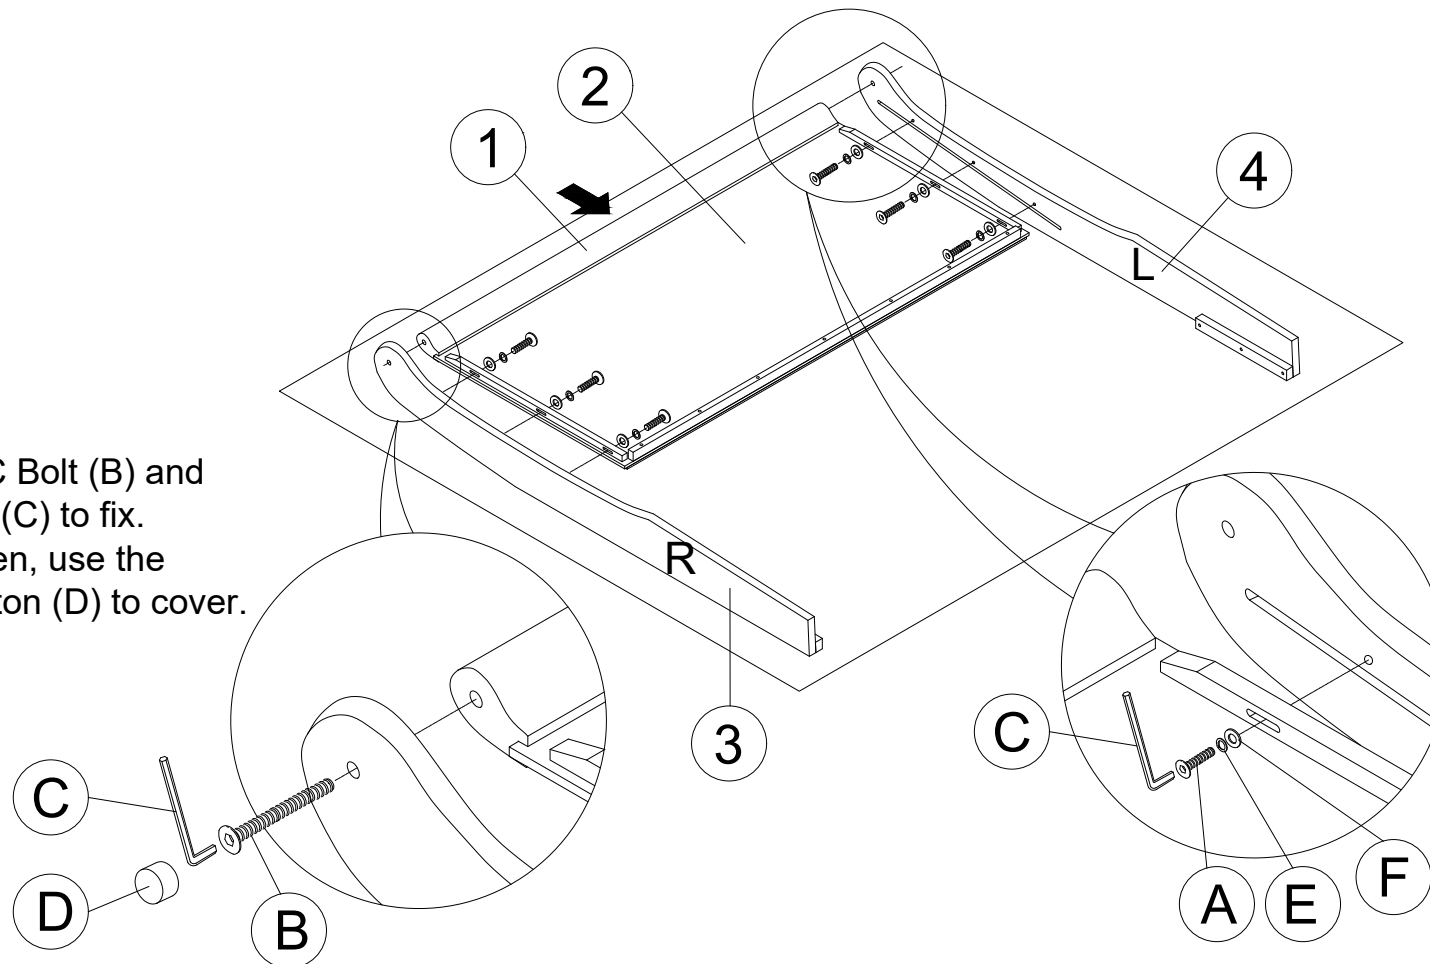

Please place on the carton while installing to prevent damage or scratches.


# ASSEMBLY INSTRUCTION

QUEEN BED

## STEP 2.



STEP 2.1: Attach Adjuster Screw (I) to leg (14). Attach the Drawer Slat (11) to Leg (14). Use JCBC Bolt (G) and Allen Key (C) to fix.

STEP 2.2: Attach the Drawer Back Slat (12) to Drawer Slat (11). Use JCBC Bolt (G) and Allen Key (C) to fix.

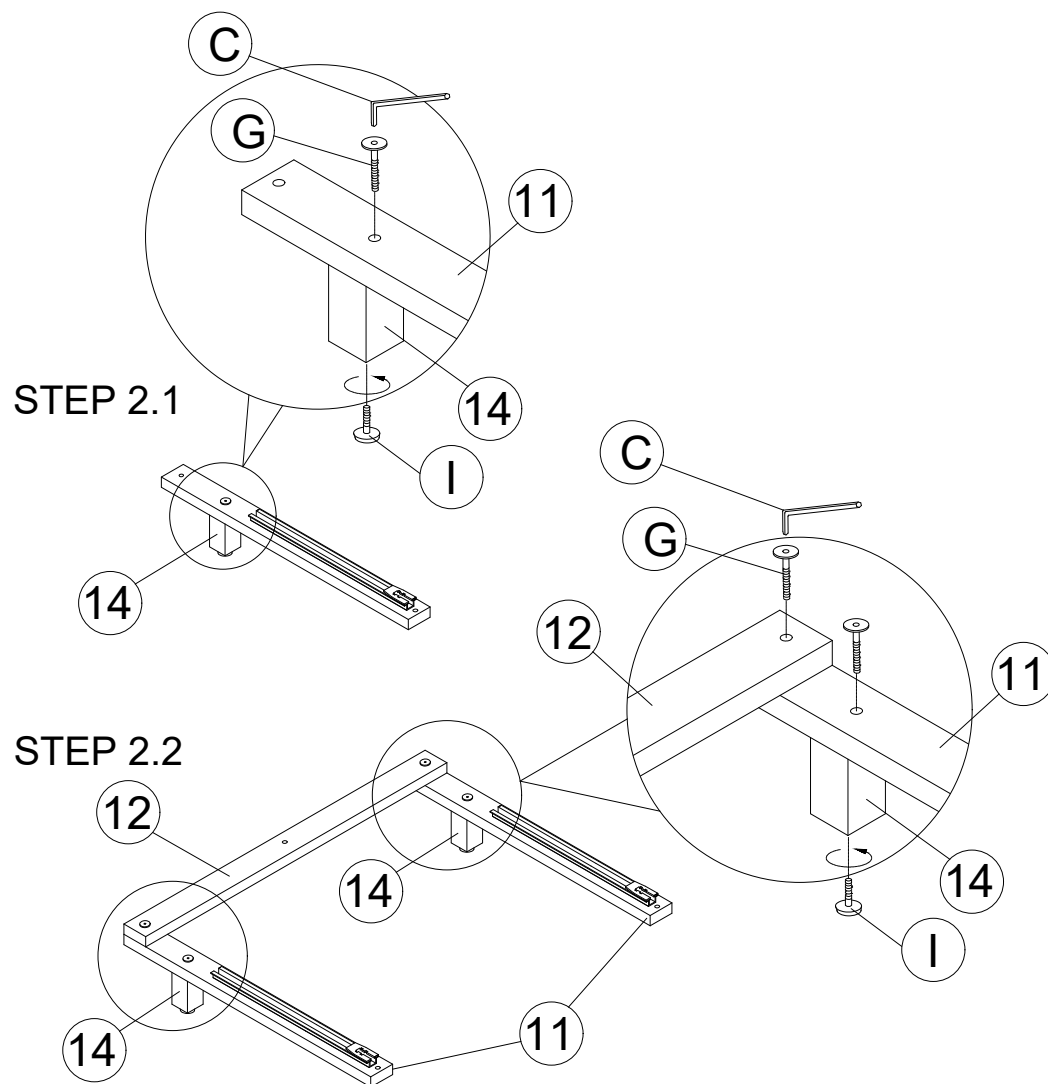

## STEP 3.

Attach (hook) the Side Rail (8) to Headboard Leg Right (3) and Side Rail (9) to Headboard Leg Left (4). Use Screw and screwdriver to fix.

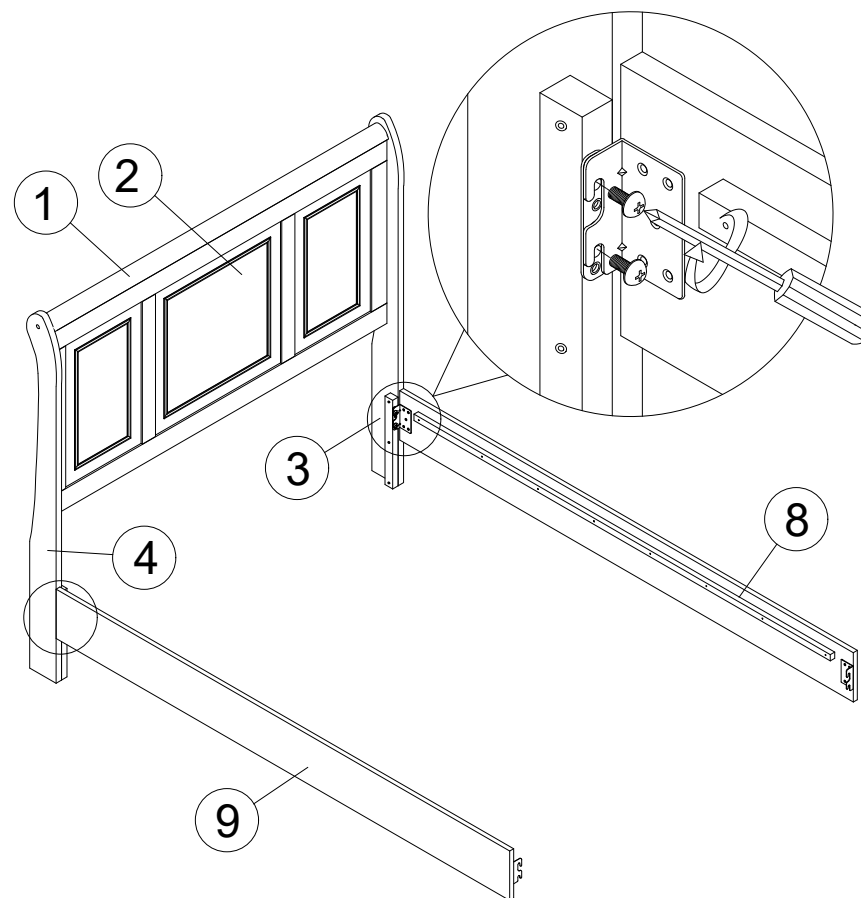

# ASSEMBLY INSTRUCTION


QUEEN BED

## STEP 4.

STEP 4.1: Attach and tighten the footboard leg (15) (2pcs).


STEP 4.2: Attach (hook) the Side Rail (8) & (9) to Footboard (7). Use Screw and screwdriver to fix.

## STEP 4.2

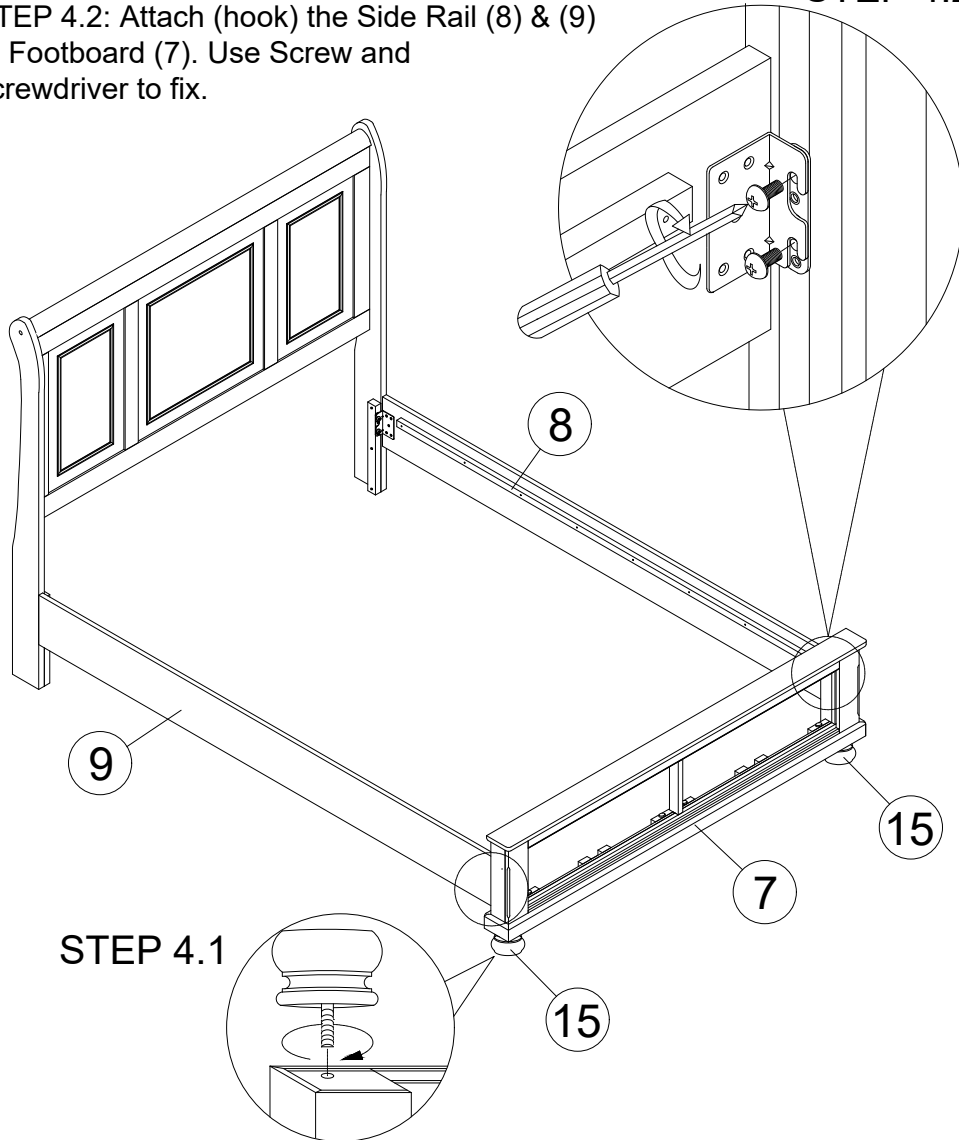

## STEP 5.

Attach and tighten the Drawer Slat (11) to Footboard (7). Adjusting the Leg Adjuster (I) to the floor . Use JCBC Bolt (G) and Allen Key (C) to fix.

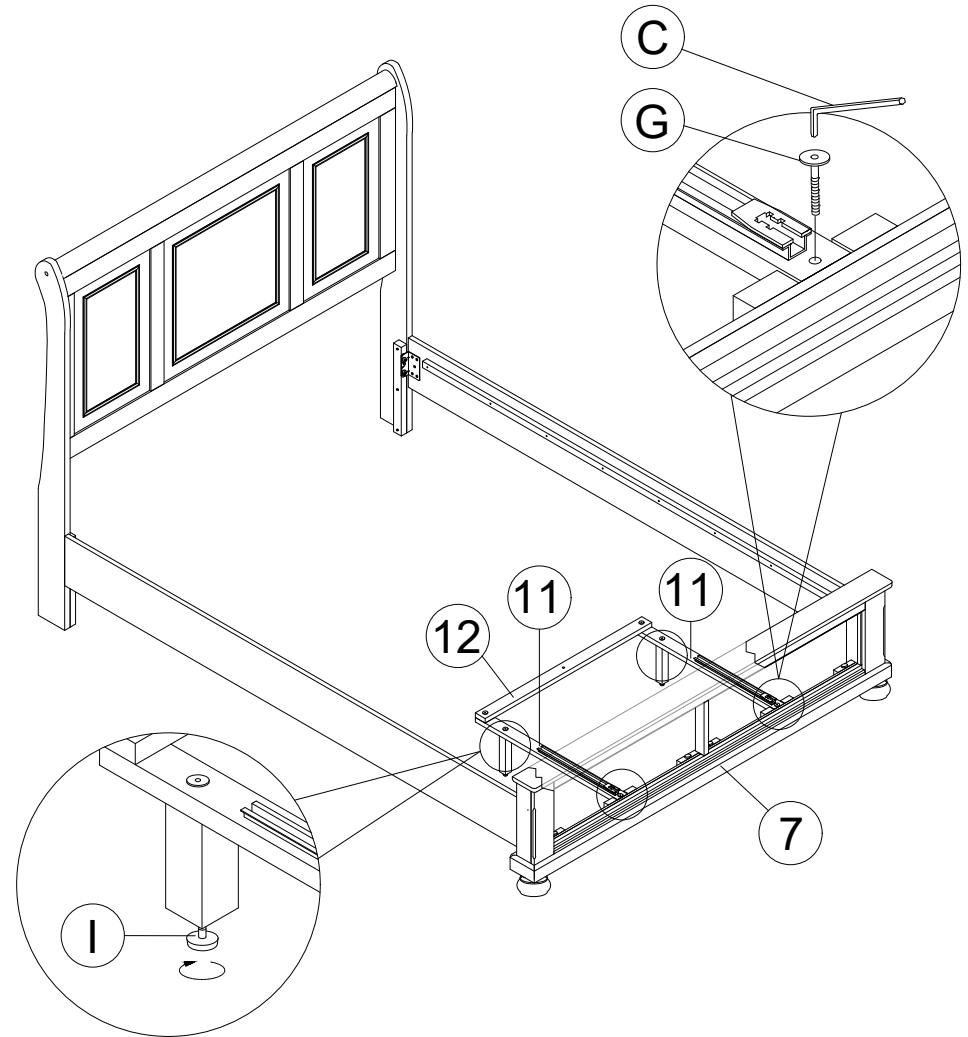




# ASSEMBLY INSTRUCTION

QUEEN BED

## STEP 6.


### STEP 6.1:

Rotate the Long Slat & Leg (10) and tighten using with Allen Key (C) to Fix.

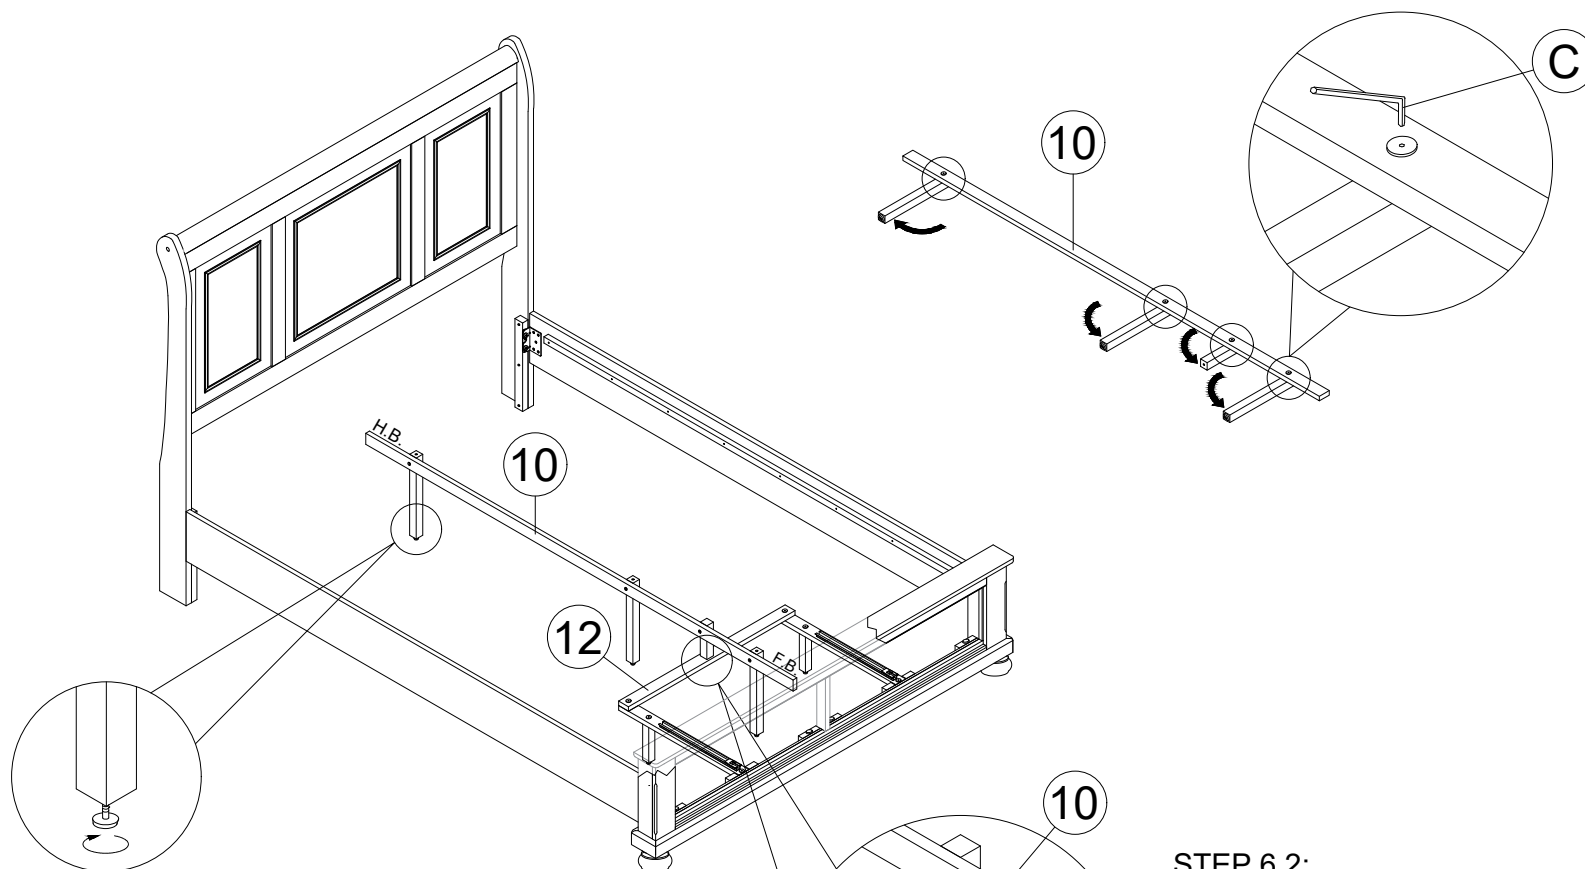


### STEP 6.3:

Adjusting the Leg Adjuster to the floor.

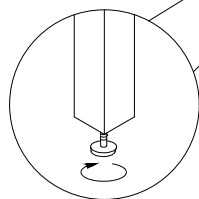

### STEP 6.2:

Attach the Long Slat & Leg (10) to Drawer Back Slat (12). Use JCBC Bolt (G) and Allen Key (C) to fix.

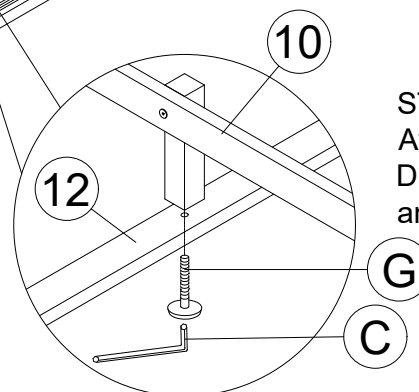


# ASSEMBLY INSTRUCTION

QUEEN BED

## STEP 7.


Attach and tighten the Front Slats (5) and Back Slats (6) to Long Slat (10).  
Use JCBC Bolt (G) and Allen Key (C) to fix.

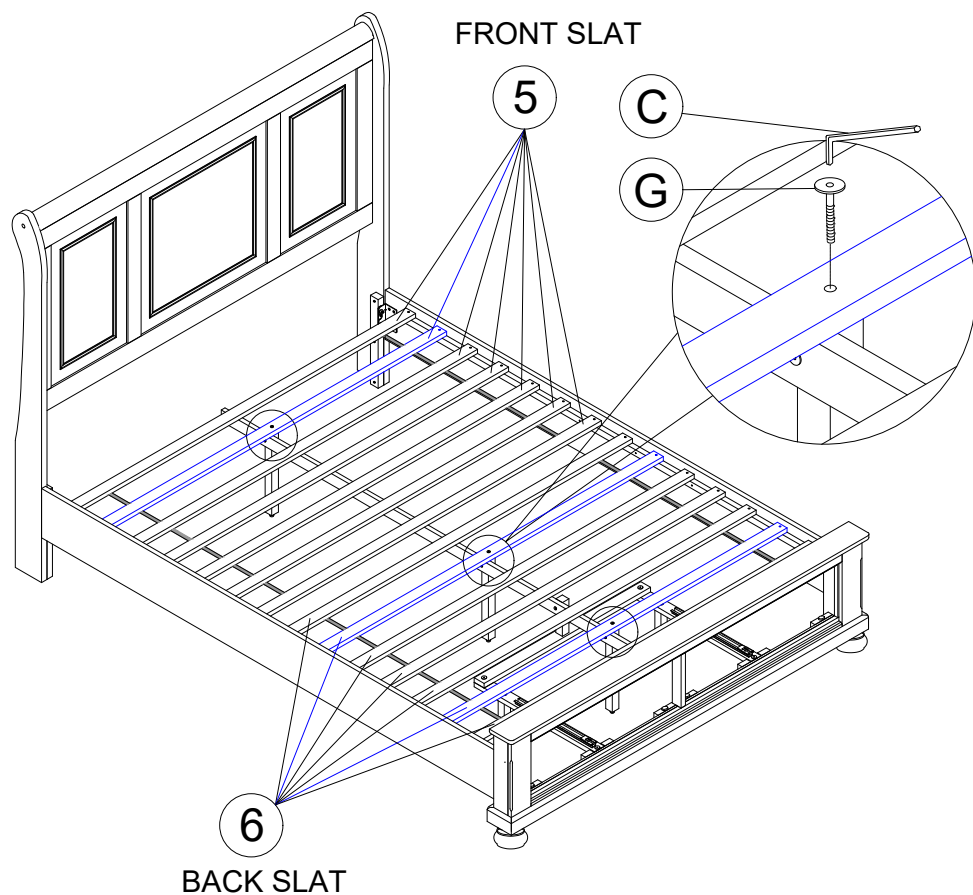

Make sure the slat put at correct consequence/location.  
Position: Front > Back.


## STEP 8.

Attach and tighten the All Slat's side each on pre-hole. Use Chipboard Screw (H) and Screwdriver to fix.



**\*\* This is an important step  
to ensure the quality of bed.  
Please follow accordingly.**

Tighten all slat each side  
on pre-hole.

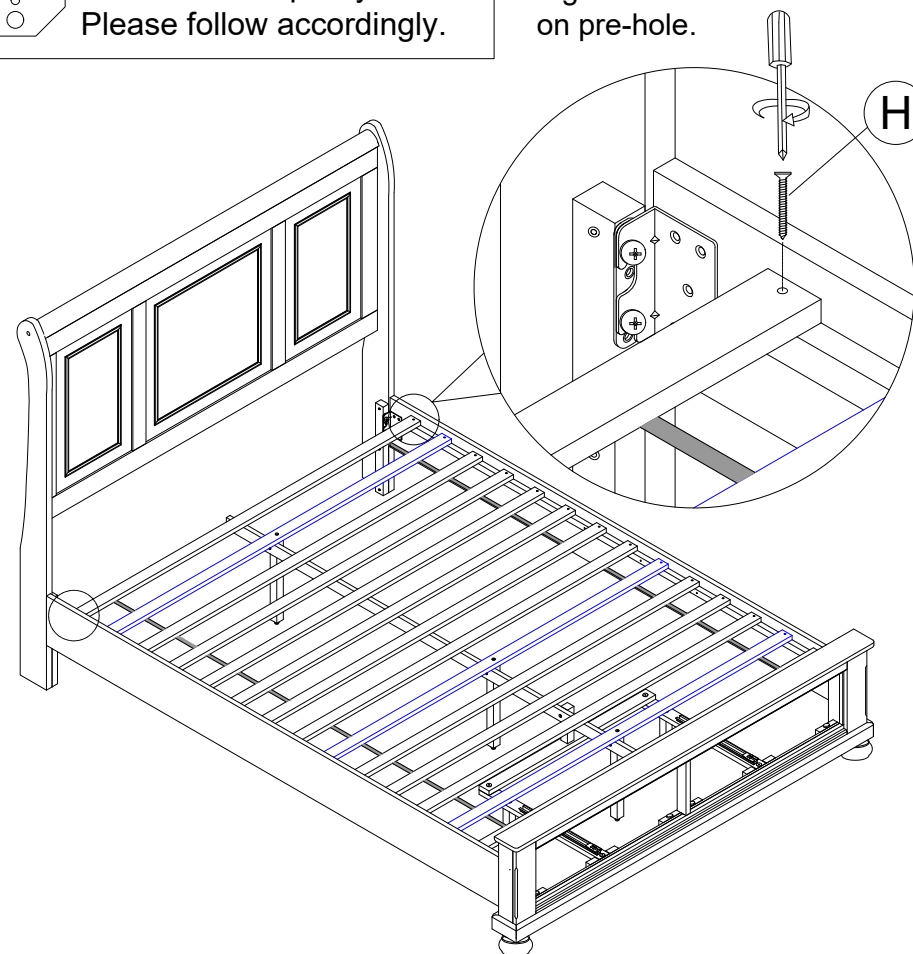



All 14pcs Slat need to tighten on both side.  
Total 28pcs Chipboard Screw (H) will be use.

# ASSEMBLY INSTRUCTION

QUEEN BED


## STEP 9.

Open the handle of Drawer (13) (2pcs), attach it properly.

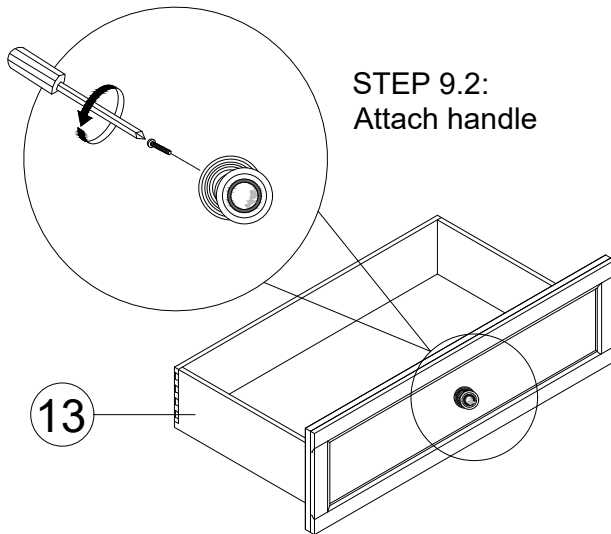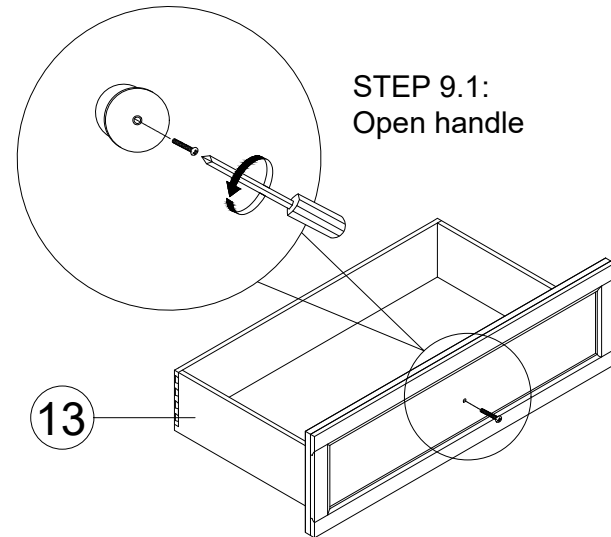

## STEP 10.

Put Drawer (13) (2pcs) on the track. Finally put mattress on the bed.



**\*\*Periodically check to ensure that all connectors (Bolt, screw, etc.) are tight and keep this Instruction for future reference.**

