


BV20789/BV20889 /BV20989-K MODEL

BED

ASSEMBLY INSTRUCTIONS

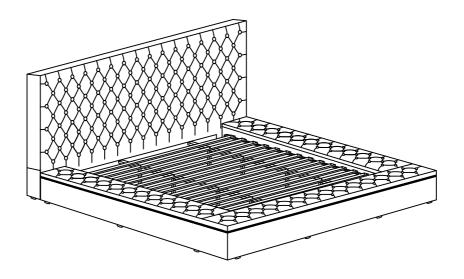

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Pleses check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



warming:


- 1.Don't attempt to repair or modify parts that are broken or defective. Pleses contact the store immediately.
- 2. This producct is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION


#1	Headboard	1PC
#2	Side Rail Panel(L&R)	2PCS
#3	FB Panel w/ Fabric	1PC
#4	FB Panel	1PC
#5	Side Rail Panel W/ Fabric(L&R)	2PCS
#6	Center Support Rail	2PCS
#7	Support Leg	8PCS
#8	HB Leg(L&R)	2PCS
#9	Side Rail Top Panel	2PCS

TIEMID VEGTOR	9/D V 20009/D V 20	7 TOOLINE	SET INSTITUCTIONS
#F		Hex Nut Ø5/16"	8PCS
#G		Flat Washer 19mm	40PCS
#H		Flat Washer 22mm	8PCS
#I		Flat Washer 16mm	40PCS
#J		Lock Washer Ø5/16"	48PCS
#K		Lock Washer Ø1/4"	40PCS
#L		Screw #8x38mm	24PCS
#M	⊕ mmn>	Screw #8x25mm	18PCS
#N		Screw #8x15mm	24PCS
#O		Wrench	1PC
#P		Allen Wrench 5mm	1PC
#Q		Allen Wrench 4mm	1PC

ITEM:BV20789/BV20889/BV20989-K **ASSEMBLY INSTRUCTIONS** Hinges(L) #R 5PCS 5PCS Hinges(R) #S Connection #T 10PCS Strap (L&R) **Plastic Feet** 0 18PCS #U

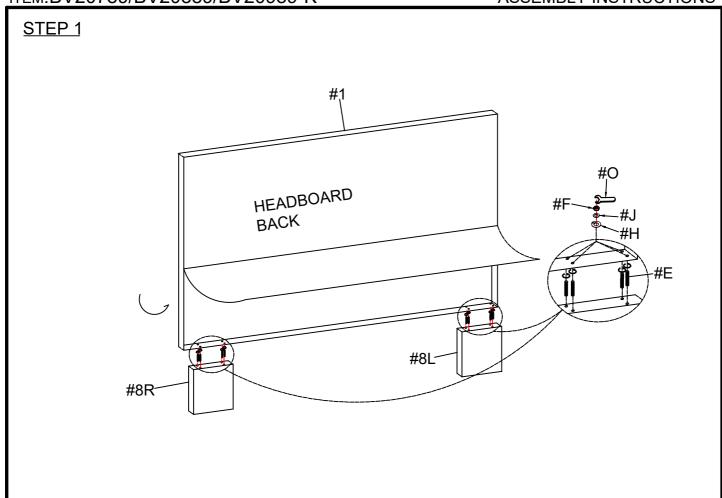




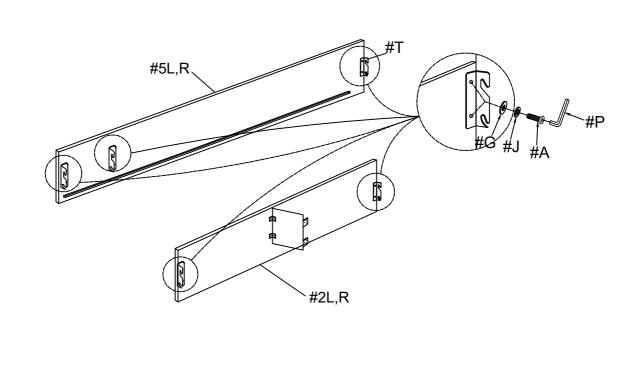



PAGE 6 of 12



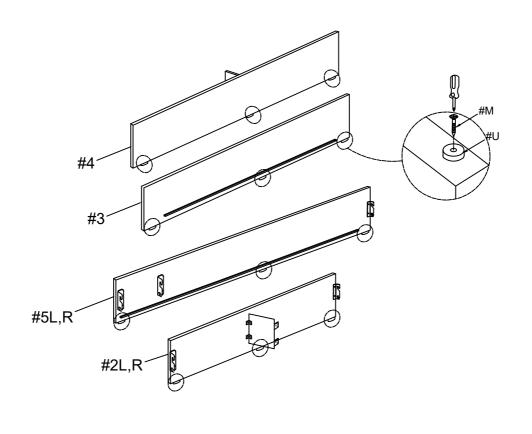



STEP 4

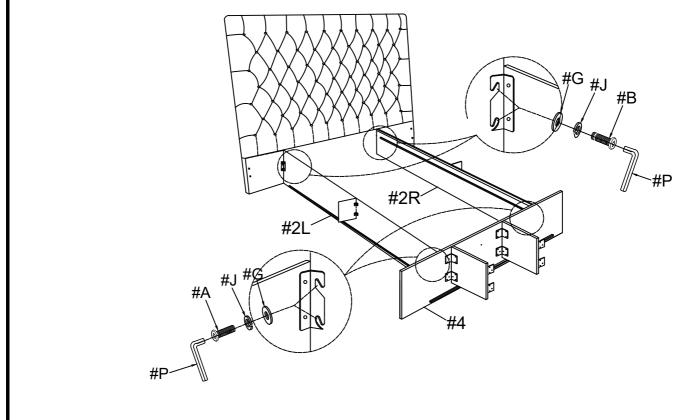

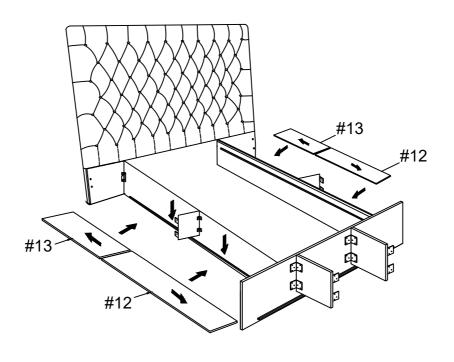


STEP 6

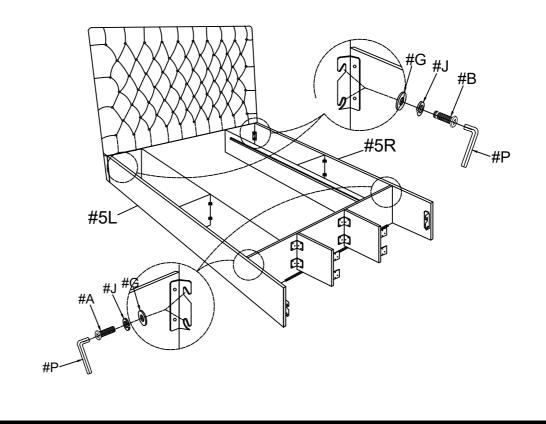


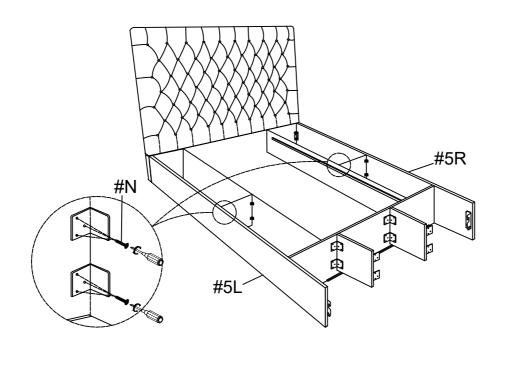


STEP 6

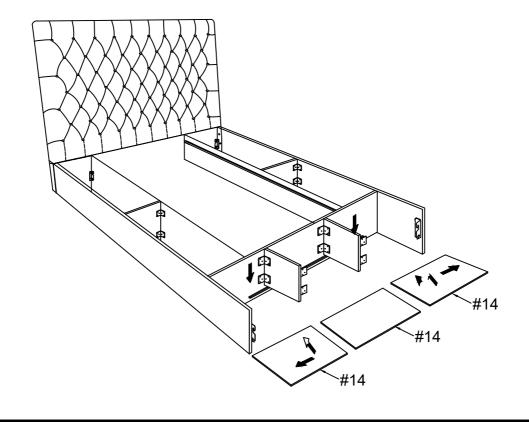





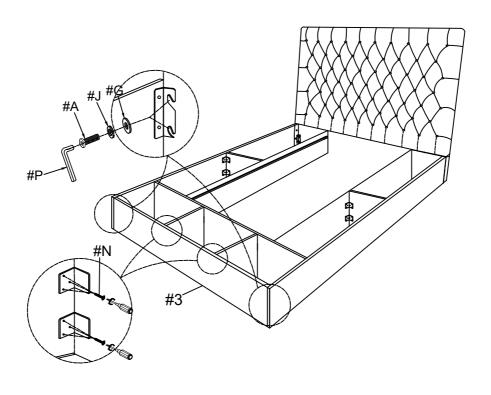

STEP 6

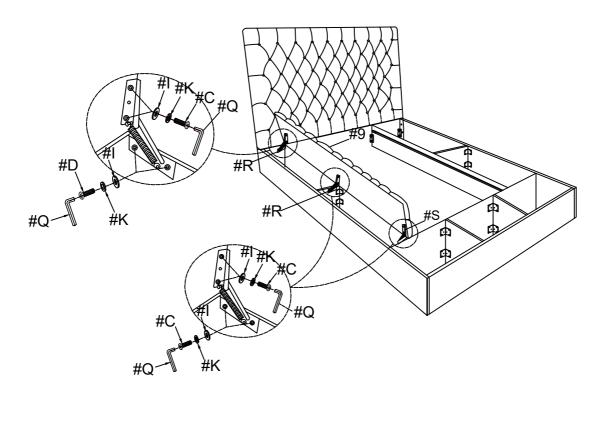


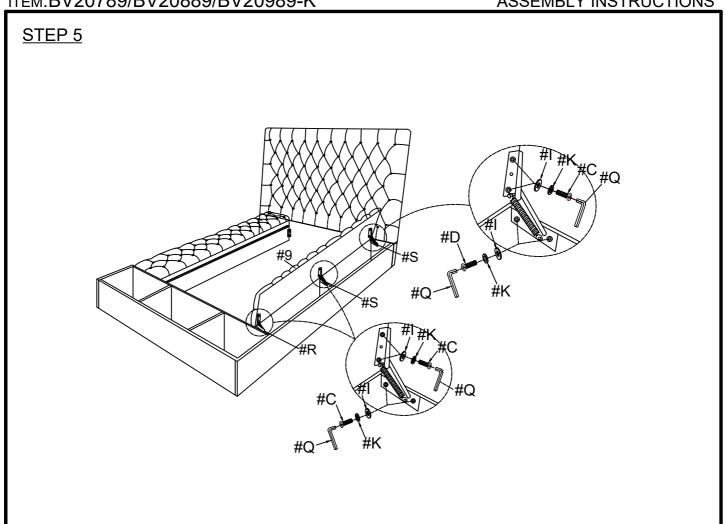

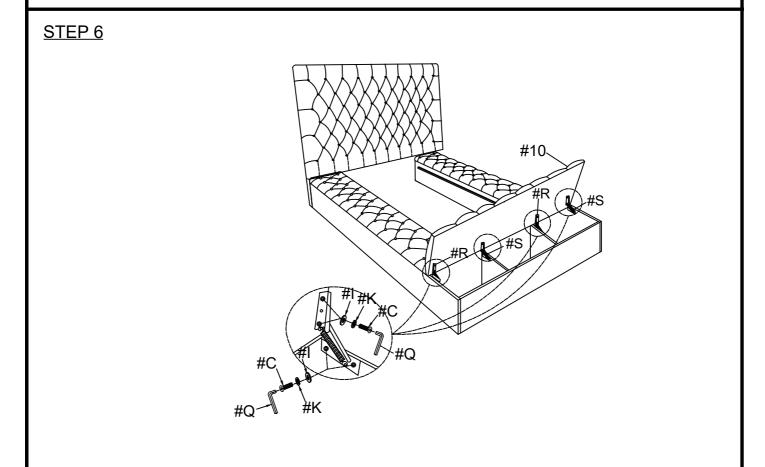

PAGE 11 of 12



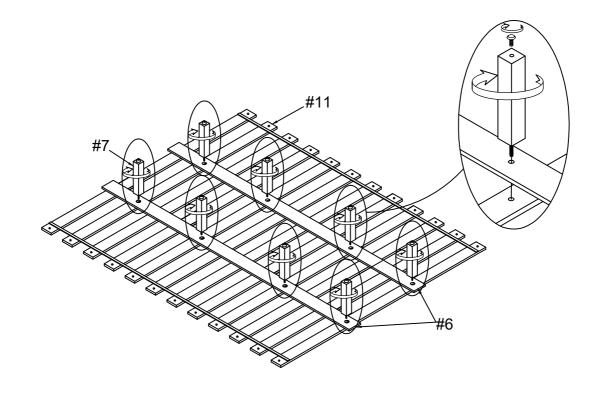

STEP 6

