




BV22028-Q
BV22128-Q
BV22228-Q

BED

ASSEMBLY INSTRUCTIONS

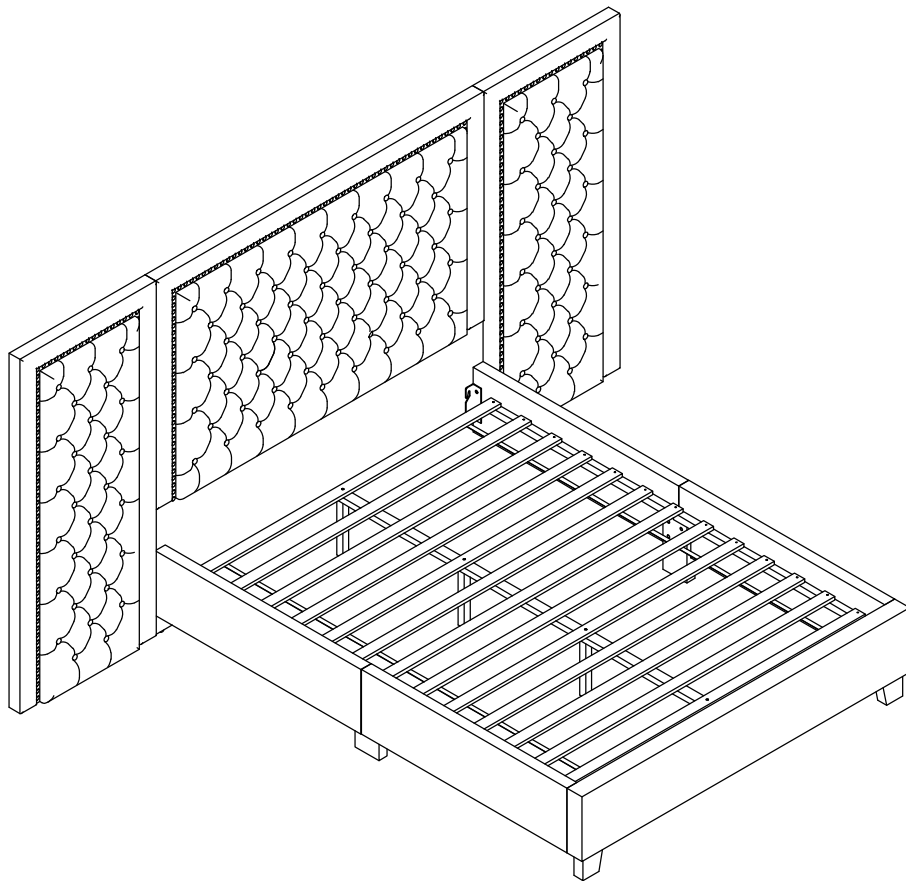













ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Pleases check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.


**warning:**

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.



PARTS IDENTIFICATION

#1		Headboard	1PC
#2		Footboard	1PC
#3		Footboard Leg	2PCS
#4		Left Bed Rail	2PCS
#5		Right Bed Rail	2PCS
#6		Bed Rail Leg	2PCS
#7		Slats	1SET
#8		Center Rail	1PC
#9		Slat Leg	4PCS
#10		Left End Panel	1PC
#11		Right End Panel	1PC
#12		Connect Rail	4PCS



HARDWARE LIST

#A		Bolt Ø5/16" x 1-1/4"	16PCS
#B		Bolt Ø5/16" x 2"	24PCS
#C		Bolt Ø5/16" x 3"	2PCS
#D		Lock Washer Ø5/16" x 12mm	42PCS
#E		Flat Washer Ø5/16" x 19mm	50PCS
#F		Allen Wrench 5mm	2PCS
#G		Screw #8 x 30mm	26PCS
#H		Connection Strap	2SET


STEP 1

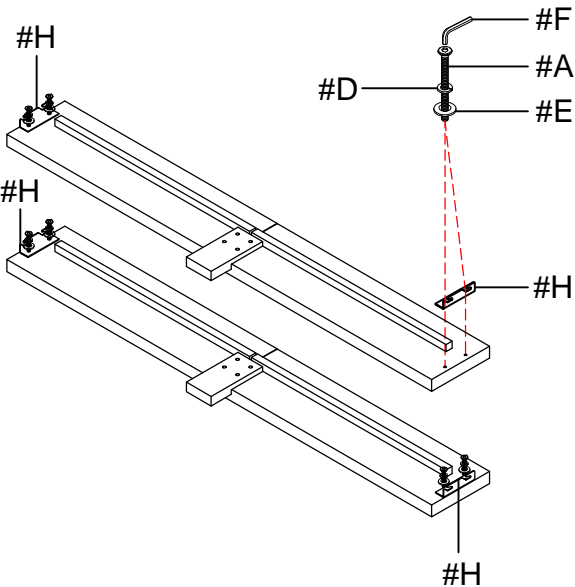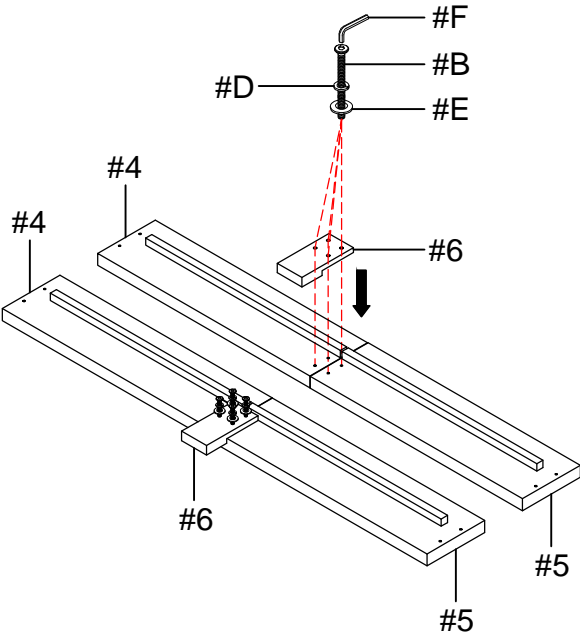


STEP 2

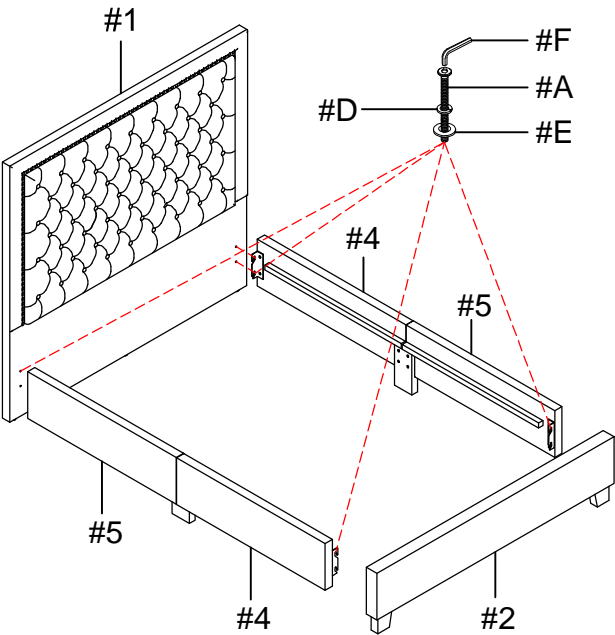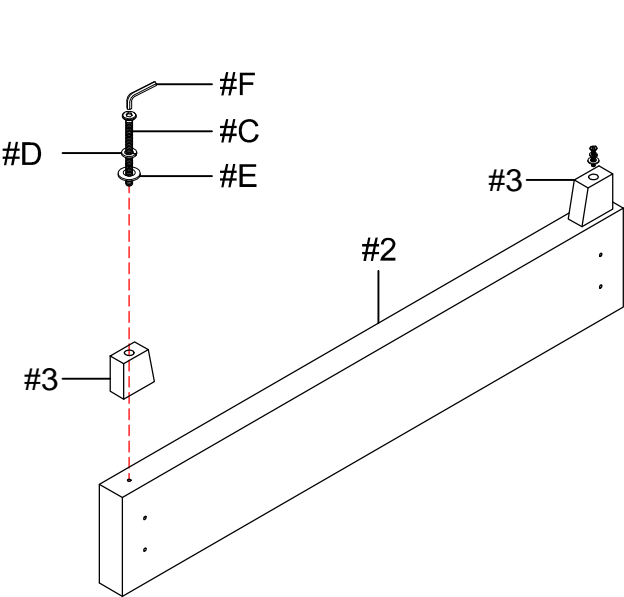


STEP 3

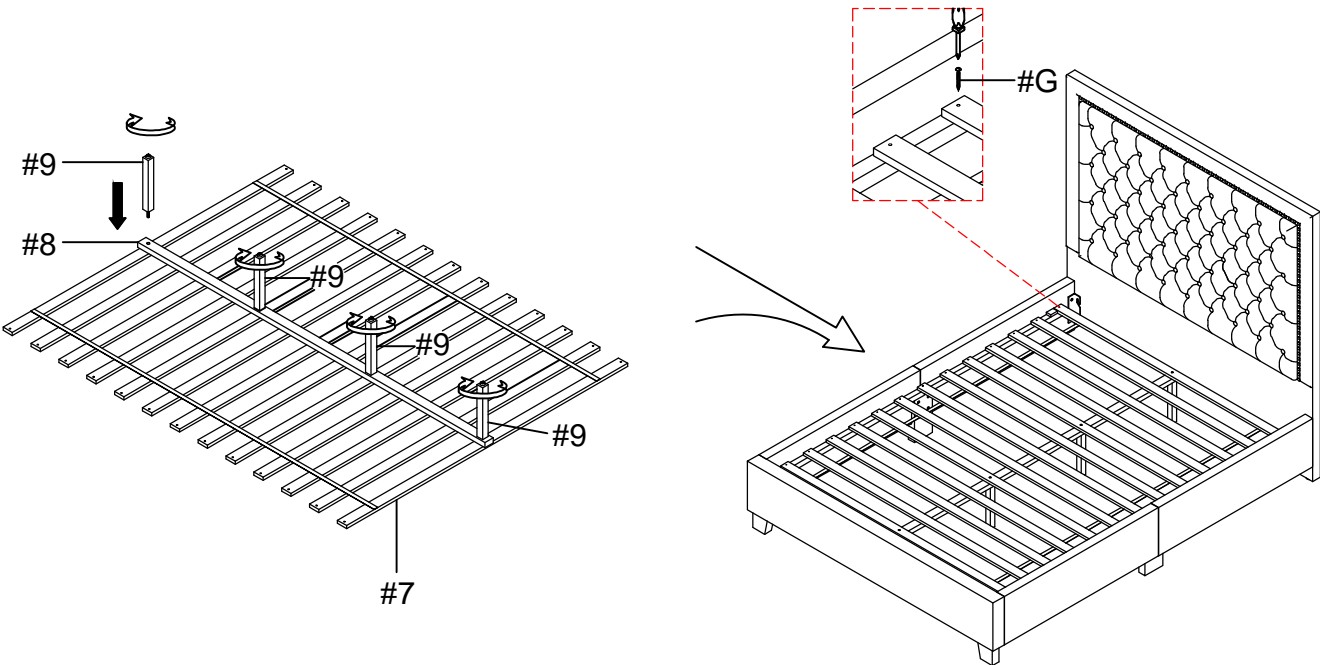

STEP 4

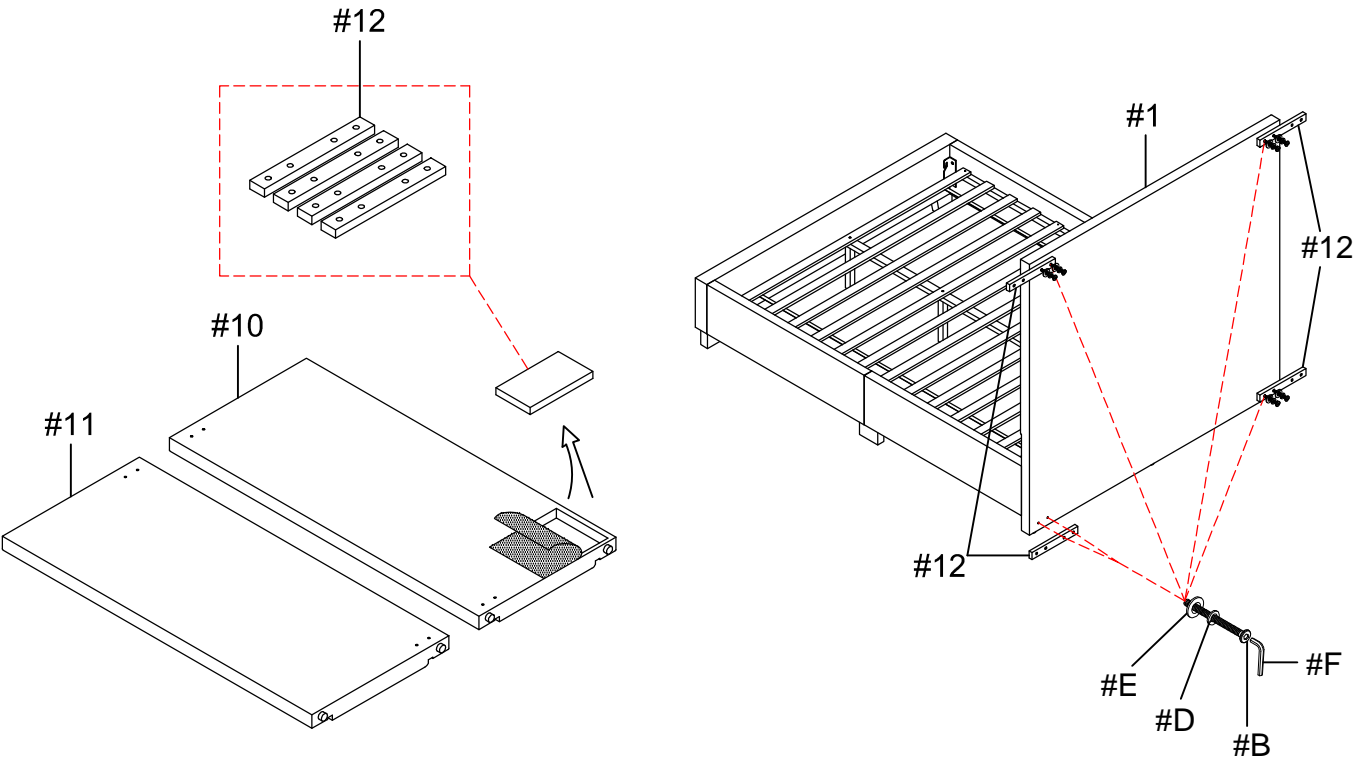

STEP 5

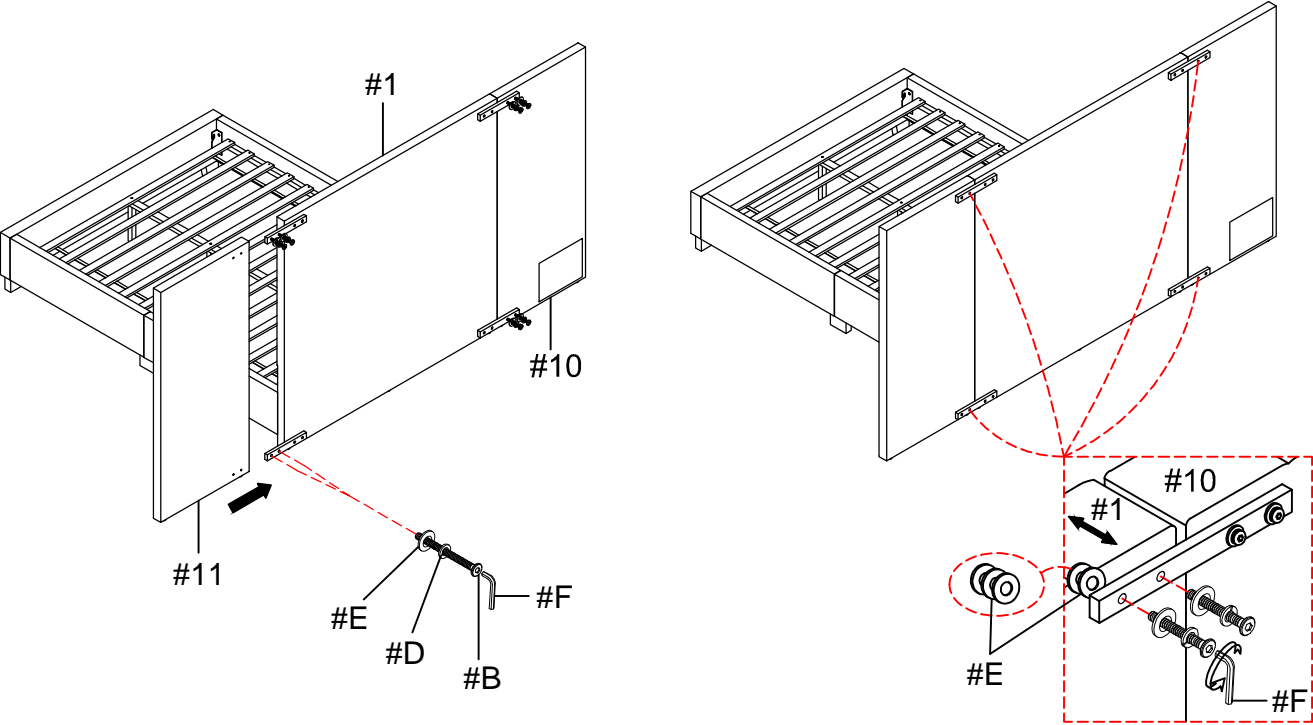

Use Flat washer #E 2~3 pcs to adjust the 2 End panels #10 #11 and the Headboard #1 to be straight.

STEP 6

