



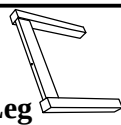


ASSEMBLY INSTRUCTION

MODEL : DM21069 SIDE CHAIR


HARDWARE LIST (2 Pcs)

A	JCBC M6 x 50mm		12pcs
B	Spring Washer M6		12pcs
C	Wood Dowel M8 x 30mm		8pcs
D	CSK M4 x 32mm		14pcs
E	Allen Key		1pc


PART LIST (2 Pcs)

1	 Back Rest	2pcs	2	 Side Rail L/R	4pcs
3	 Front Leg	2pcs	4	 Cushion	2pcs
5	 Strecher	4pcs			


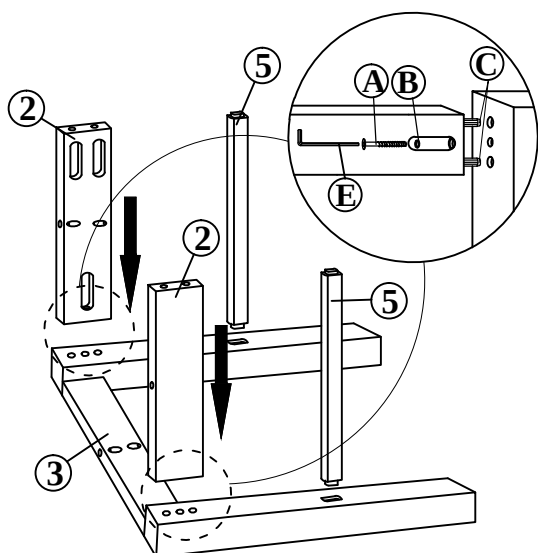
STEP 1



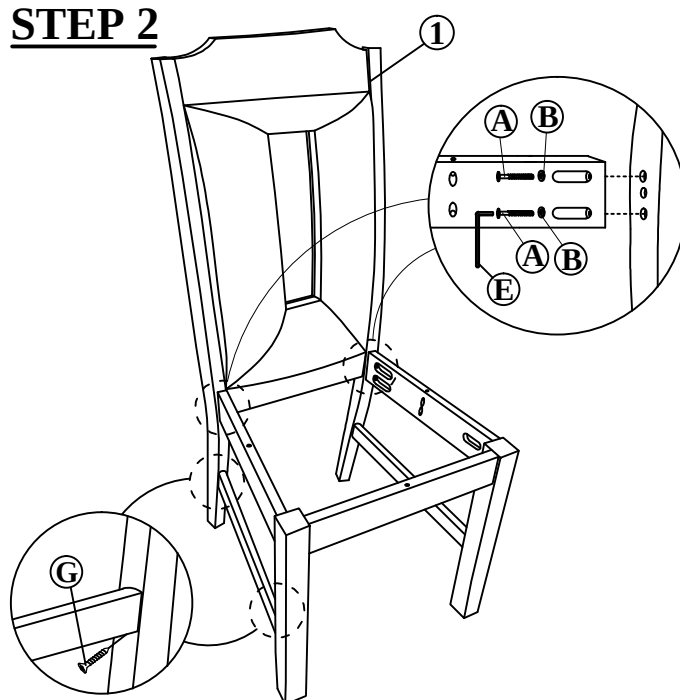STEP 2



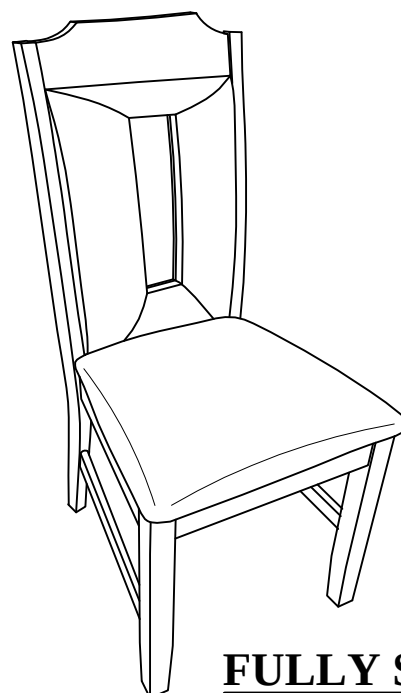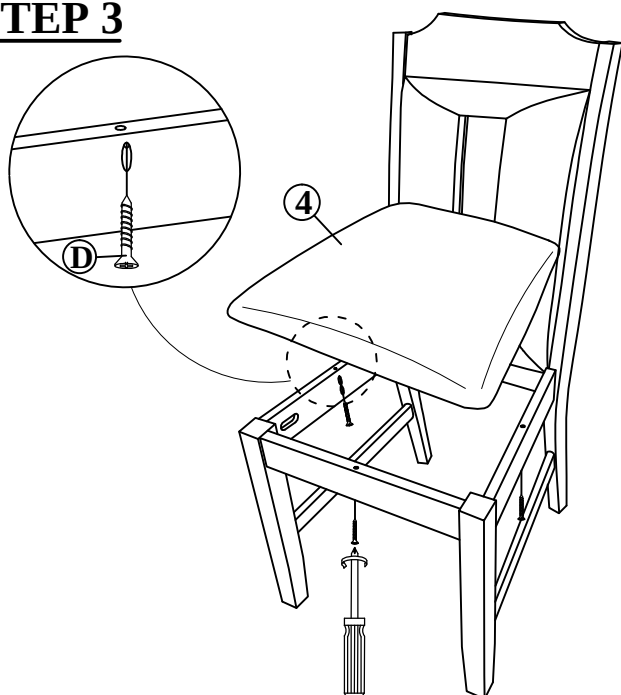STEP 3



FULLY SET