

ASSEMBLY INSTRUCTIONS

INSTRUCTIONS POUR L'ASSEMBLAGE

bel
FURNITURE



MODEL	: BM25658-EK / BM25658-QB
DESC.	: KING / QUEEN BED
SLAT SYSTEM	: 13PCS

MODEL: 3752 QUEEN / KING BED











ASSEMBLY INSTRUCTIONS / INSTRUCTIONS POUR L' ASSEMBLAGE


1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to the start of the assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

PART LIST :


ITEM	DESCRIPTION	QTY
1	Headboard	1
2	Headboard Leg Support	2
3	Headboard Wing (L & R)	2
4	Footboard	1
5	Side Rail (L & R)	2
6	Center Rail	1
7	Center Rail Support	1
8	Slat with 3 Holes	3
9	Slat with 2 Holes	10
10	Leg Support	3

HARDWARE LIST :


NO	DESCRIPTION	QTY
A	Allen Key With Ball M4 	1
B	Connection Bolt (M6 x 30mm) W/Spring Washer & Washer Medium 	4
C	Connection Bolt (M6 x 45mm) W/Spring Washer & Washer Medium 	12
D	Connection Bolt (M6 x 60mm) W/Spring Washer & Washer Medium 	6
E	JCBC Bolt M6 x 45mm 	2
F	JCBC Bolt M6 x 60mm 	3
G	CSK Screw M4 x 32mm 	27
H	Adjuster 	3
I	Bed Leg 	2
J	LED Adapter 	1

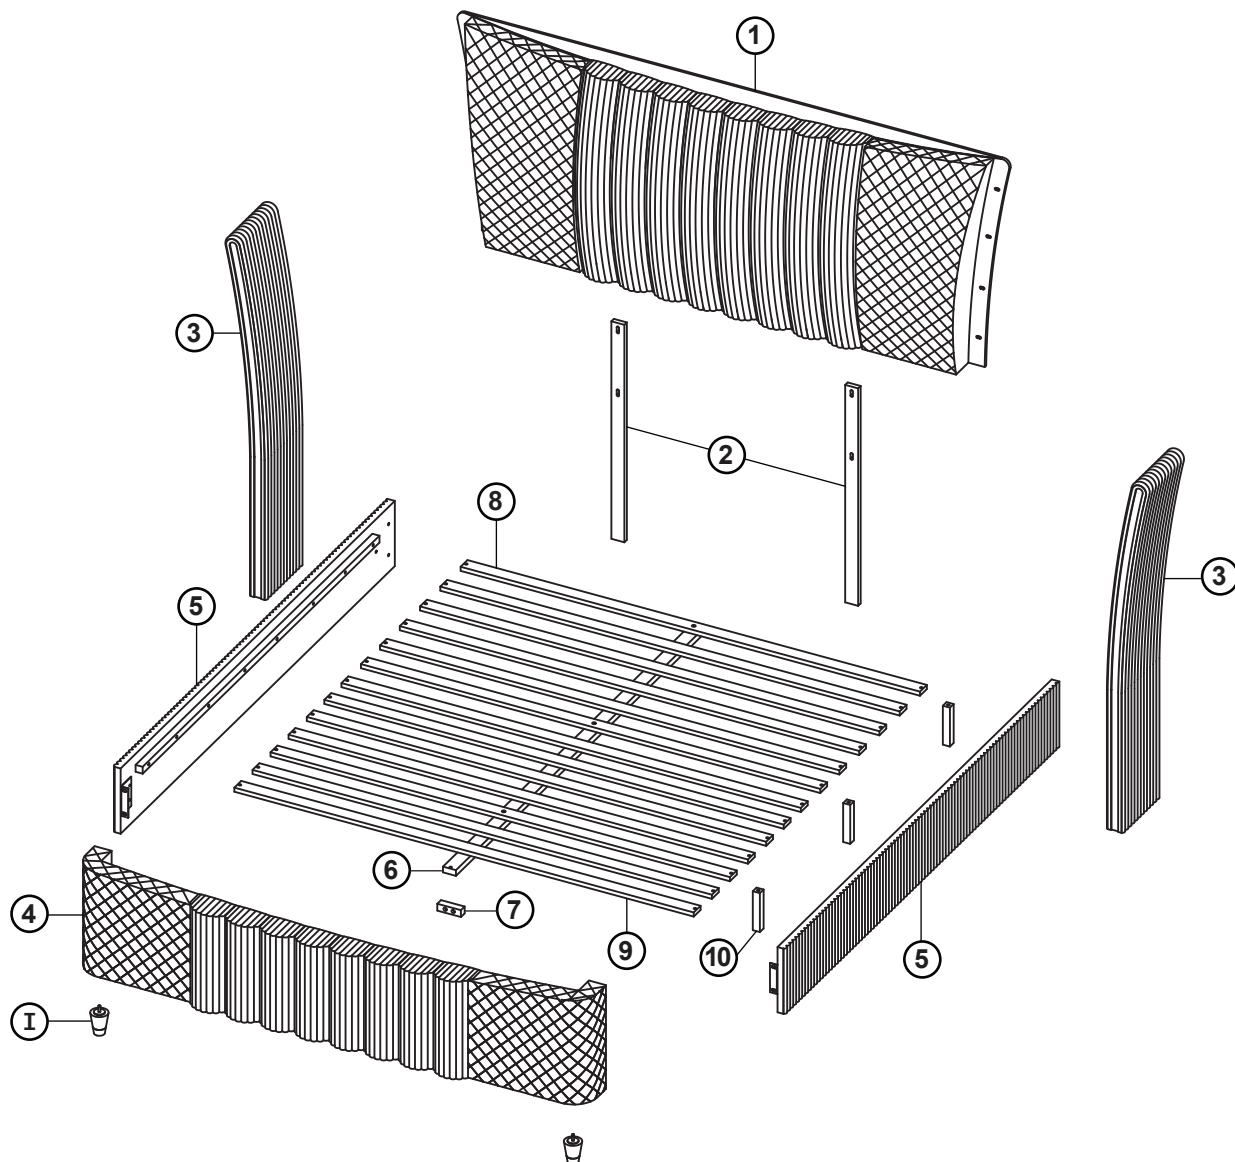

STEP: 1

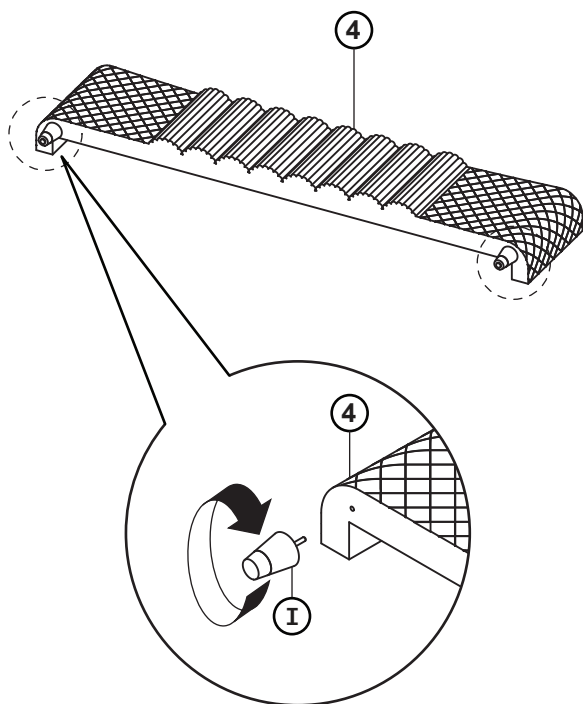


STEP: 2

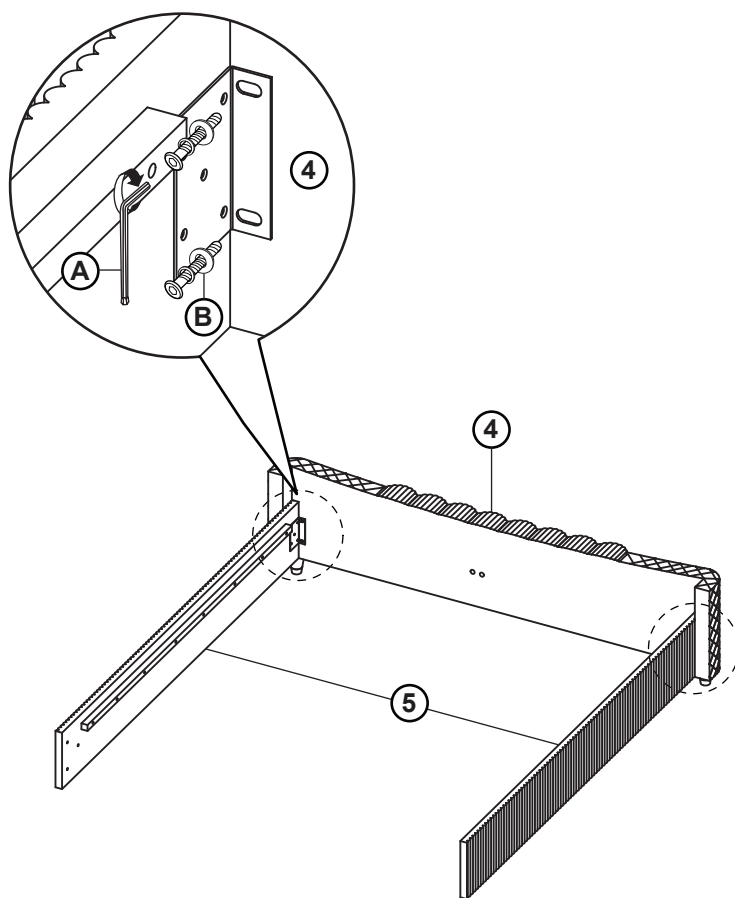


STEP: 3

Hand Tighten all the Bolts.

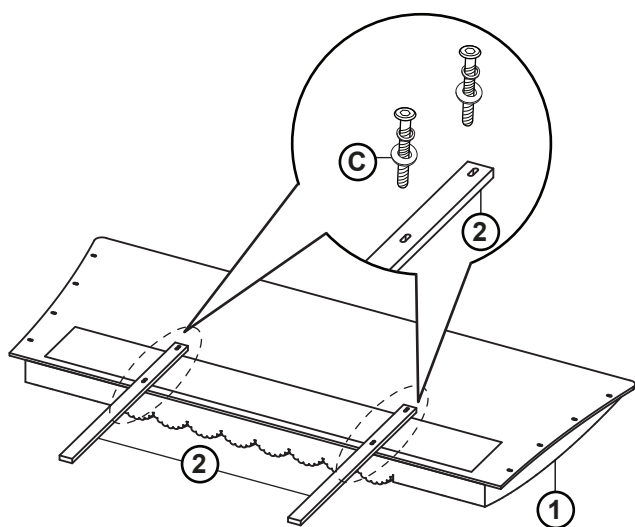


STEP: 4

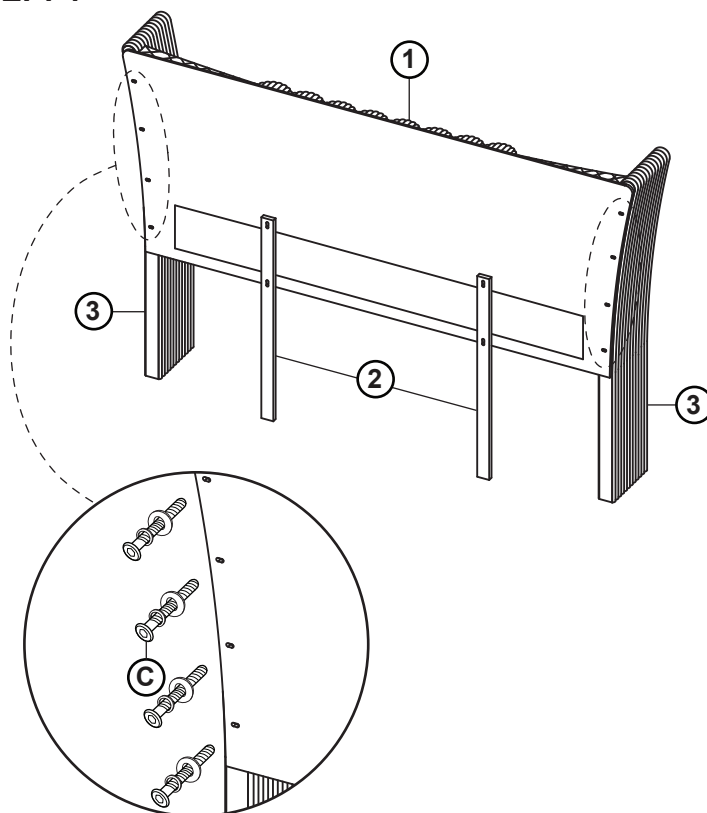


Hand Tighten all the Bolts.

STEP: 5


FULLY **TIGHTEN** ALL THE BOLTS USING ALLEN KEY (1) AT STEP 3, 4 & 5.

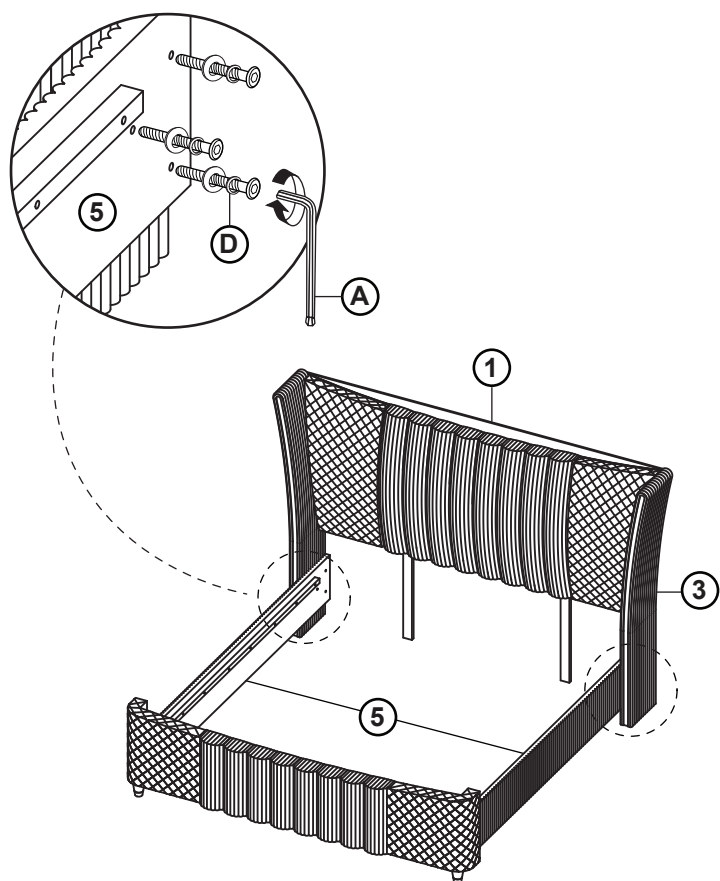


STEP: 6

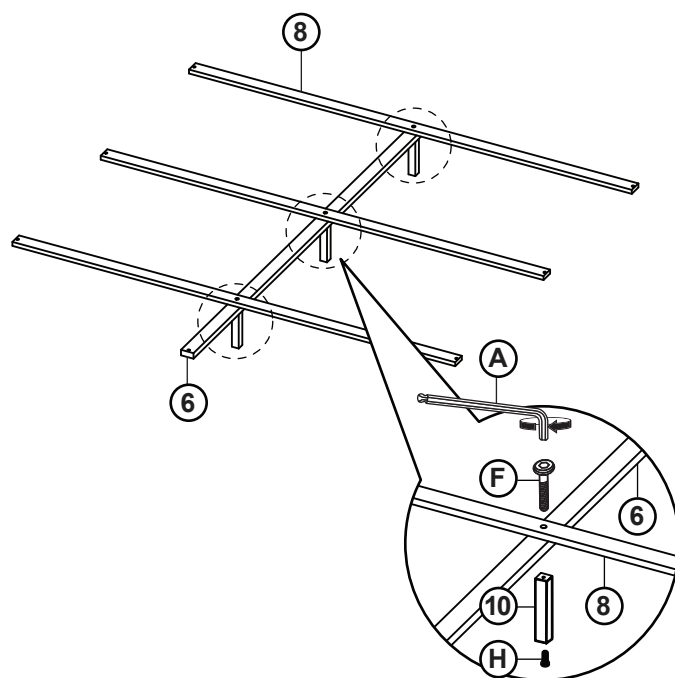


STEP: 7

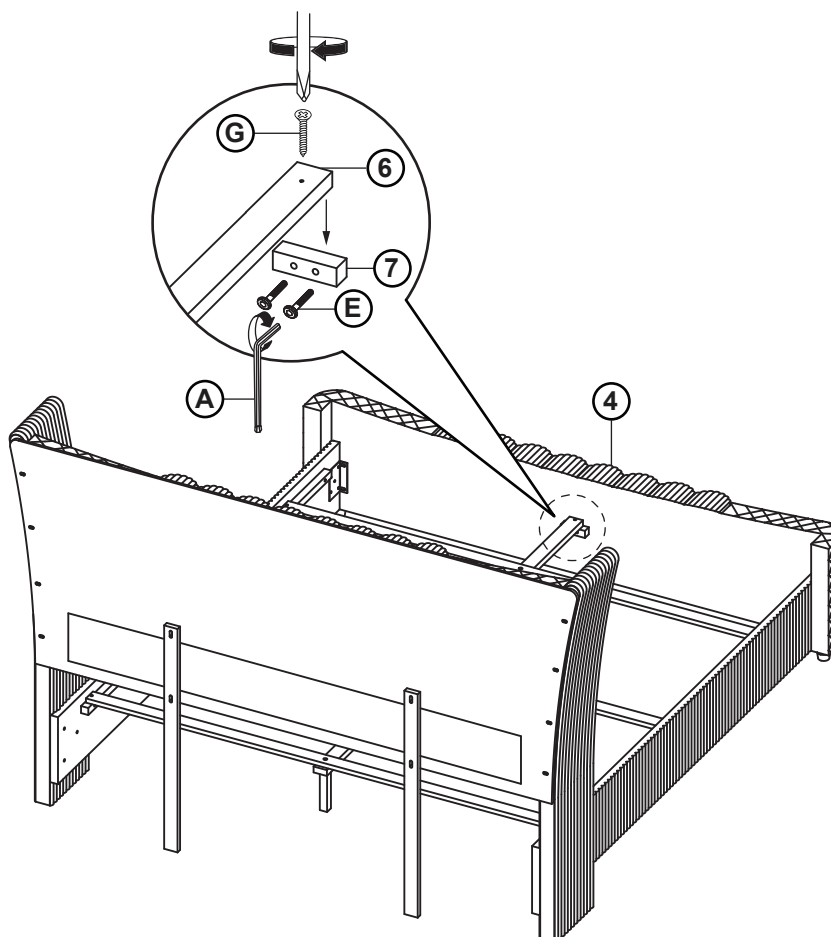


STEP: 8

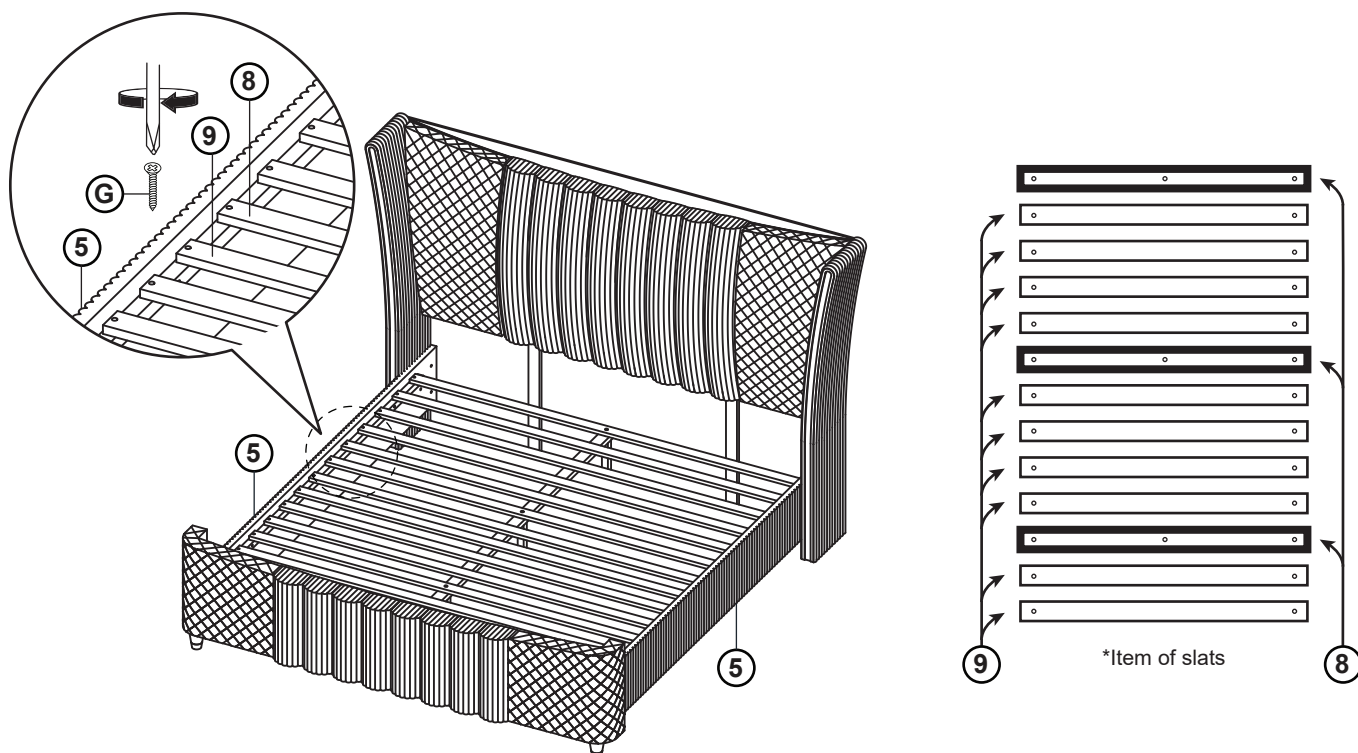

STEP: 9

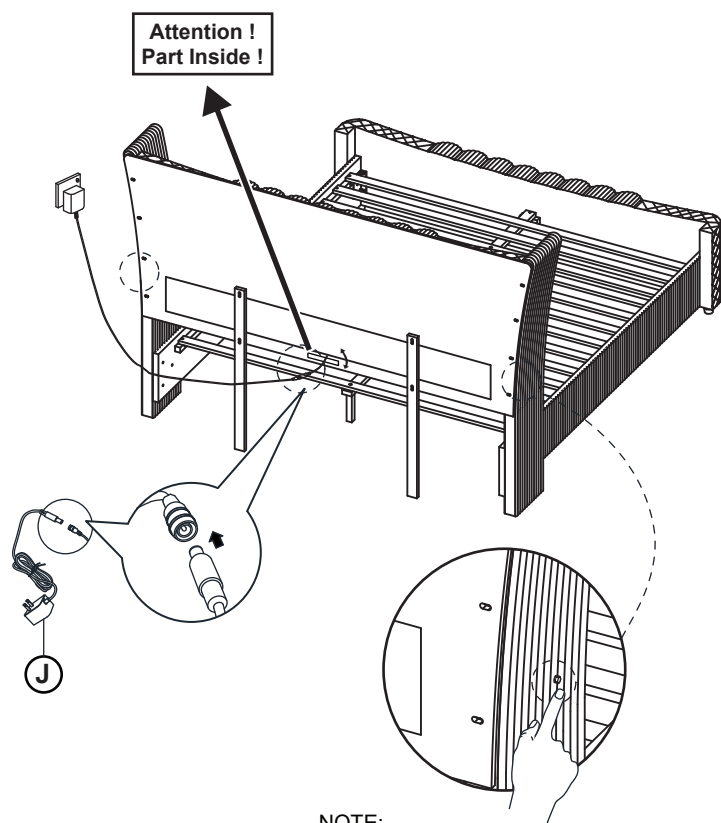

STEP: 10

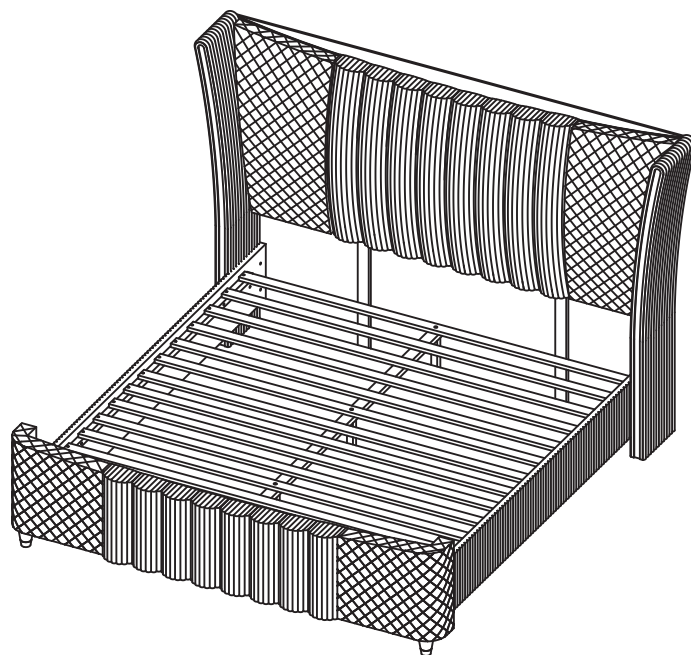

ASSEMBLY COMPLETE

