ASSEMBLY INSTRUCTIONS

MODEL : BM26253-CH
CHEST


(BOX 1)
BOX OF CHEST

NO	ITEM	QTY
A	Chest 	1 pc
B	Bun Foot 	4 pcs


(BOX 1)
HARDWARE LIST

NO	ITEM	QTY
1	JCBC M6 x 50mm 	4 PCS
2	Spring Washer 1/4" Rbw 	4 PCS
3	Flat Washer 1/4"ID x 13mOD Blk 	4 PCS
4	ALLEN KEY m4x110mm Blk 	1 pc

STEP 1 : Open the bottom drawer and take out the Bunfoot carton (B). Attach the Bun Foot (B) on the bottom of the Chest (A) using JCBC bolt (1) with Spring Washer (2) Flat Washer (3) and tighten with Allen Key (4).

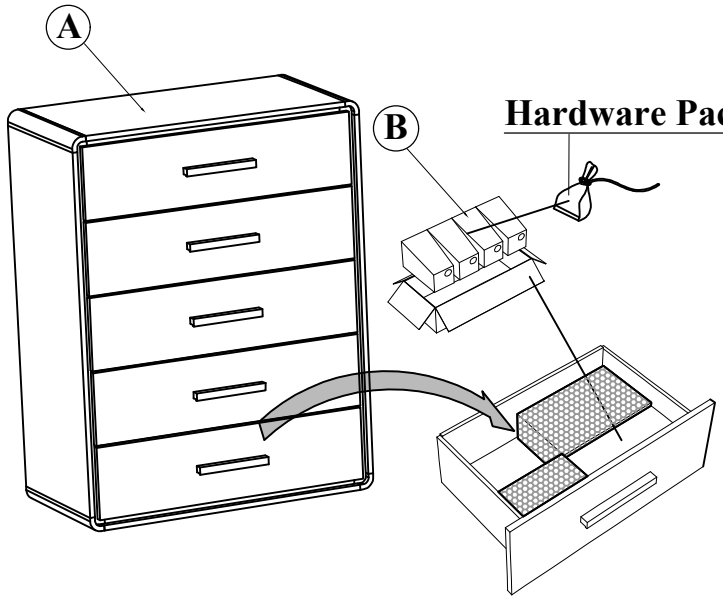

Hardware Pack x4

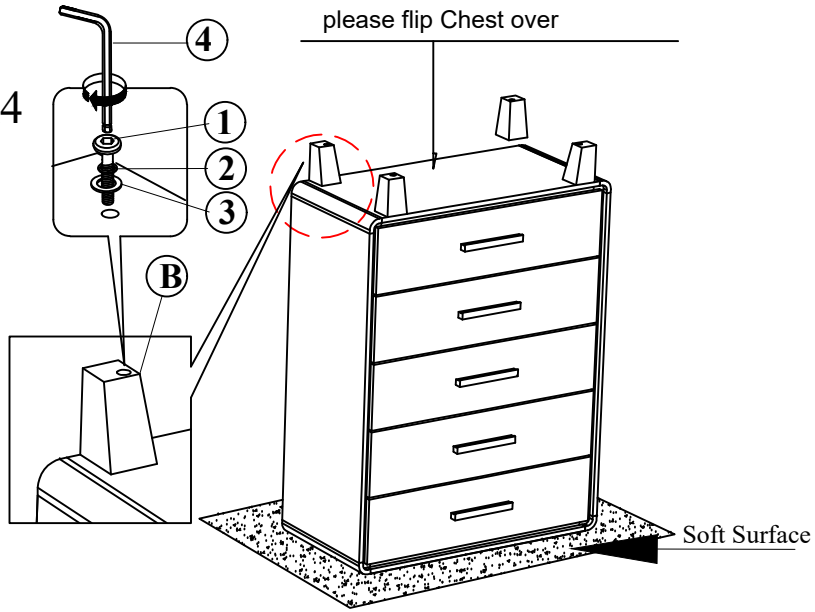

STEP 2 :



COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS PERIODCALLY . WITH USE , SCREW WILL BECOME LOOSE . CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.