# ASSEMBLY INSTRUCTIONS

**MODEL : BM26253-QHB/FB / BM26253-QSR**
**QUEEN BED**

**(Box 1)**
BOX OF HEADBOARD & FOOTBOARD

| No | ITEM | Qty |
|---|---|---|
| A | Headboard | 1 pc |
| B | Footboard | 1 pc |
| C | Headboard Leg (L) | 1 pc |
| D | Headboard Leg (R) | 1 pc |
| E | Bed Slat | 4 pcs |
| F | Bed Slat Support | 4 pcs |
| G | Headboard Leg Support | 1 pc |


**(Box 2 )**
BOX OF SIDE RAILS

| No | ITEM | Qty |
|---|---|---|
| H | Side Rail | 2 pcs |


**(Box 1)**
HARDWARE LIST(HARDWARE INSIDE HB & FB BOX )

| No | ITEM | Qty |
|---|---|---|
| 1 | Csk M4 x 32mm | 12pcs |
| 2 | JCBC M6 x 35mm | 6 pcs |
| 3 | SPRING WASHER 1/4" Rbw | 6 pcs |
| 4 | Flat Washer 1/4"ID x 13mmOD Blk | 6 pcs |
| 5 | ALLEN KEY m4x65mm Blk | 1 pc |
| 6 | ALLEN KEY m5x65mm Blk | 1 pc |


**STEP 1 : Attach Head Board Leg ( C & D) to Head Board ( A ) as shown using JCBC BOLT( 2 ) with Spring Washer (3), Flat washer (4)and securing with ALLEN KEY ( 5 ).**

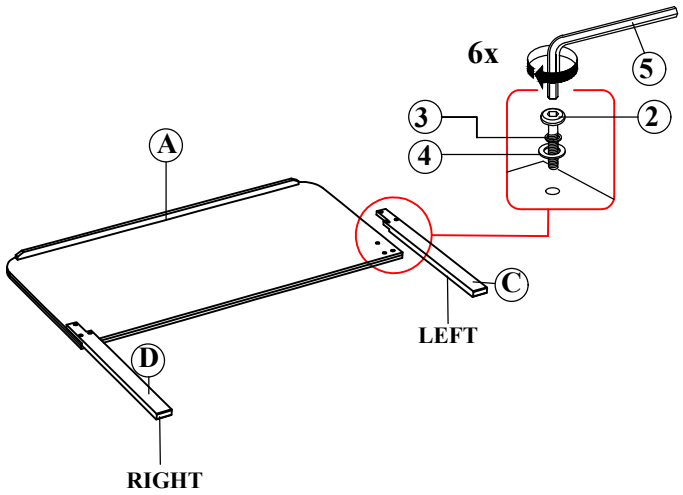


**STEP 2 :** Hook SIDE RAIL (H) TO HEAD BOARD (A) and push down to secure. Repeat step 2 for the FOOTBOARD (B).

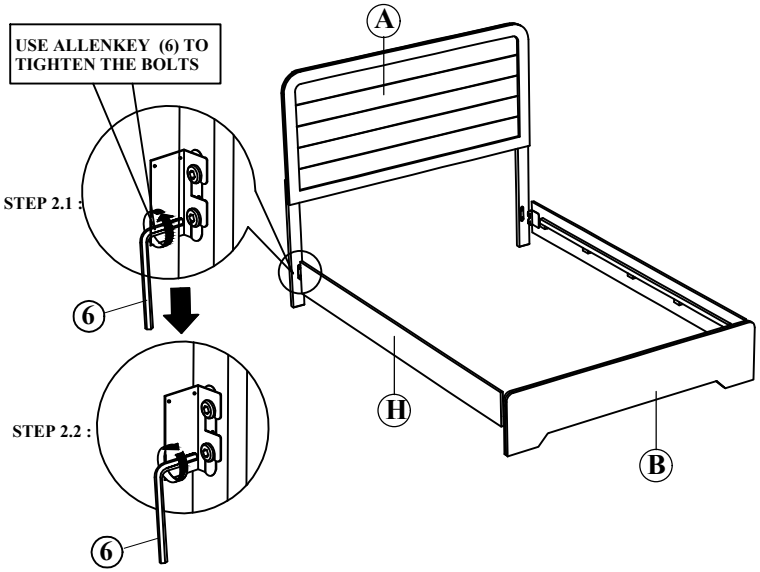



STEP 3 : Align the Bed Slat Support (F), to Bed Slat (E) as shown and twist it in. Align the bed slat( E ) to side rail( H ) using the marking on the side rail and tighten with Csk Screw( 1 ) as per diagram shown.(NOTE: THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

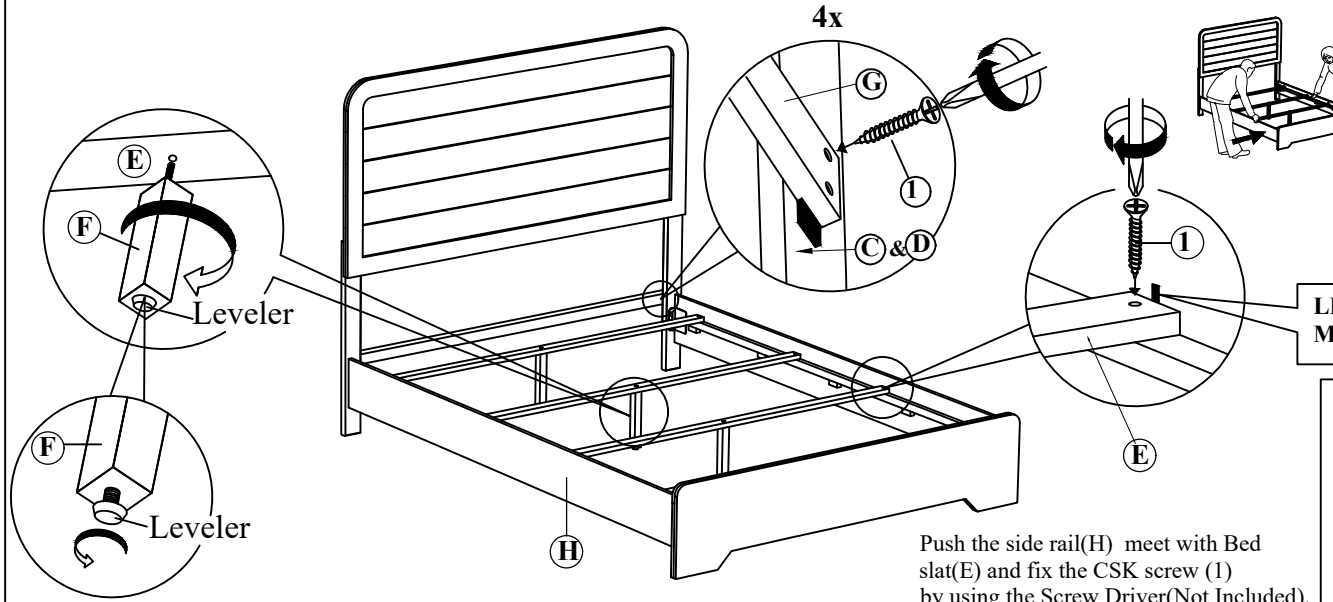


NOTE:
1-Push the side rail inward until the slats are flush and resting on the side rail support then fasten each slat to the side rail support using the provided screw.
2-The side rail warpage is a temporary condition, it will straighten out once the bed is fully assembled.

Push the side rail(H) meet with Bed slat(E) and fix the CSK screw (1) by using the Screw Driver(Not Included).

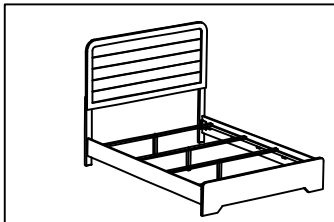

***COMPLETED***

**NOTE : MUST TIGHTEN SCREWS PERIODCALLY . WITH USE , SCREW WILL BECOME LOOSE . CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.**