
MOLLAI
COLLECTION

BV23236-Q
BV23136-Q
QUEEN BED

ASSEMBLY INSTRUCTIONS

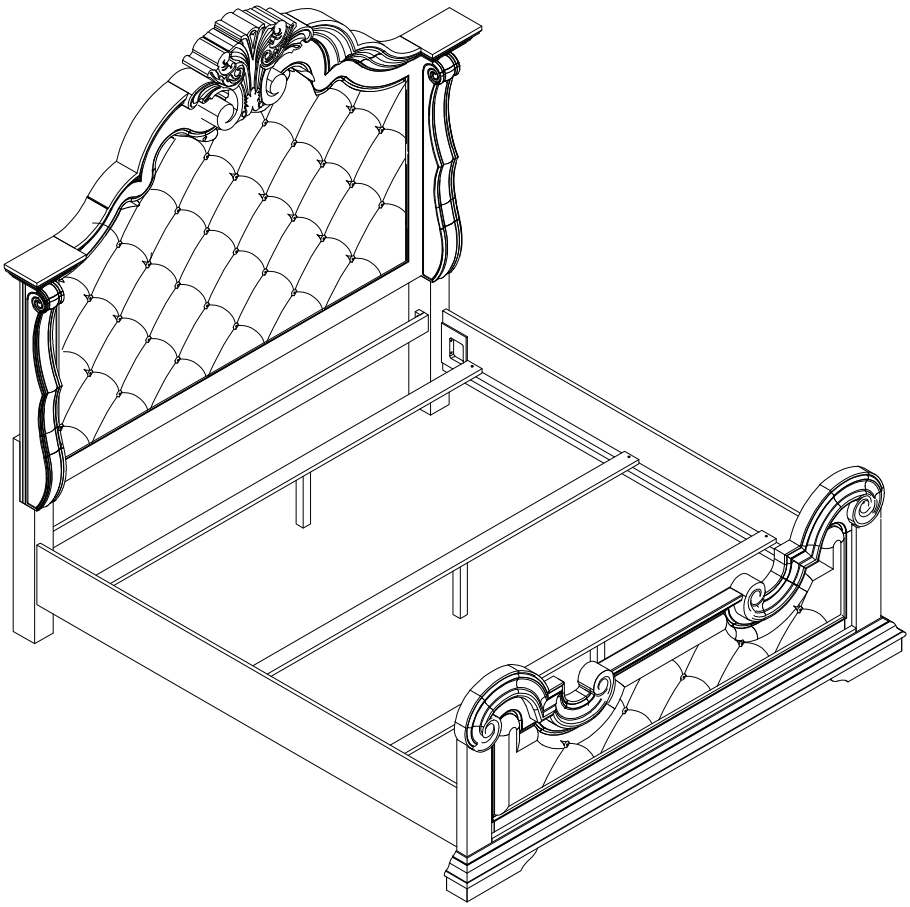




ASSEMBLY TIPS:
1.Remove hardware from box and sort by size.
2.Please check to see that all hardware and parts are present prior to start of assembly.
3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Warning!
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION

A		Headboard	1PC
B		H/Board leg (R/ L)	2PCS
C		Bottom rail	1PC
D		Footboard	1PC
E		Footboard legs	2PCS
F		Bed slat	3PCS
G		Bed slat support with leveler	3PCS
H		Bed rail	2PCS


HARDWARE IDENTIFICATION

1		Bolt 5/16"	20PCS
2		Lock washer 5/16"	20PCS
3		Flat washer 5/16"	20PCS
4		Allen wrench 5MM	2PCS
5		Threaded Stud	8PCS
6		Hex Nut	8PCS
7		Wrench	1PC
8		Screw	6PCS


STEP 1.

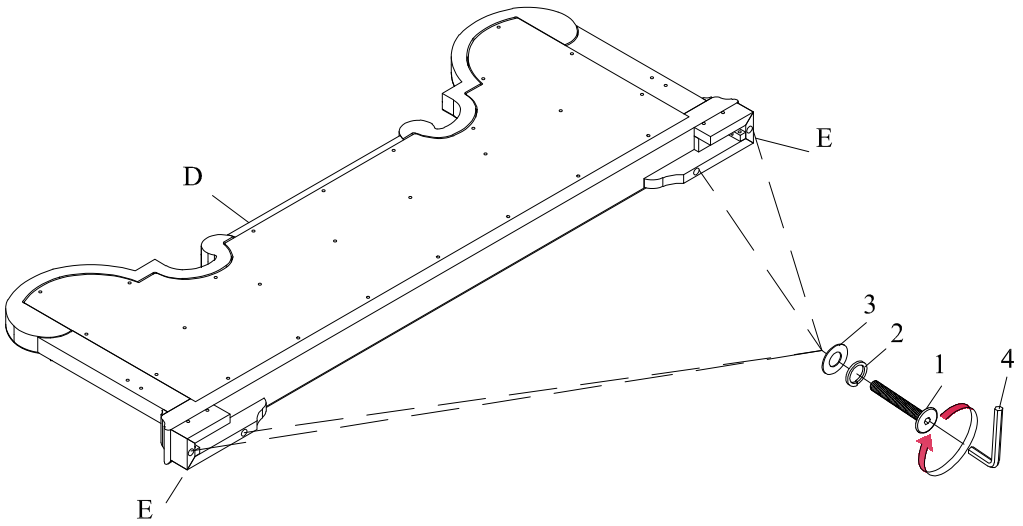


STEP 2.

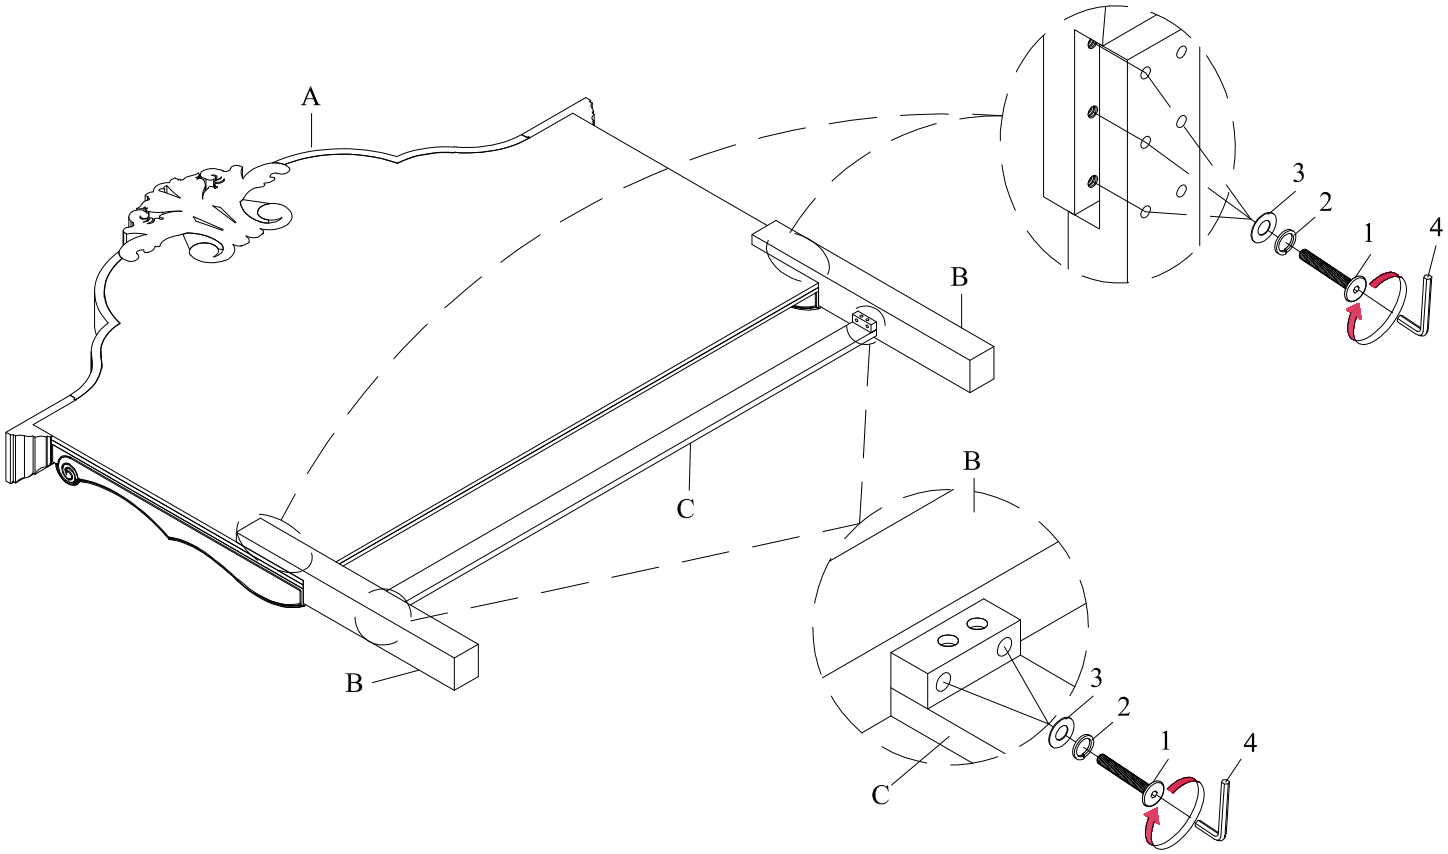

STEP 3.

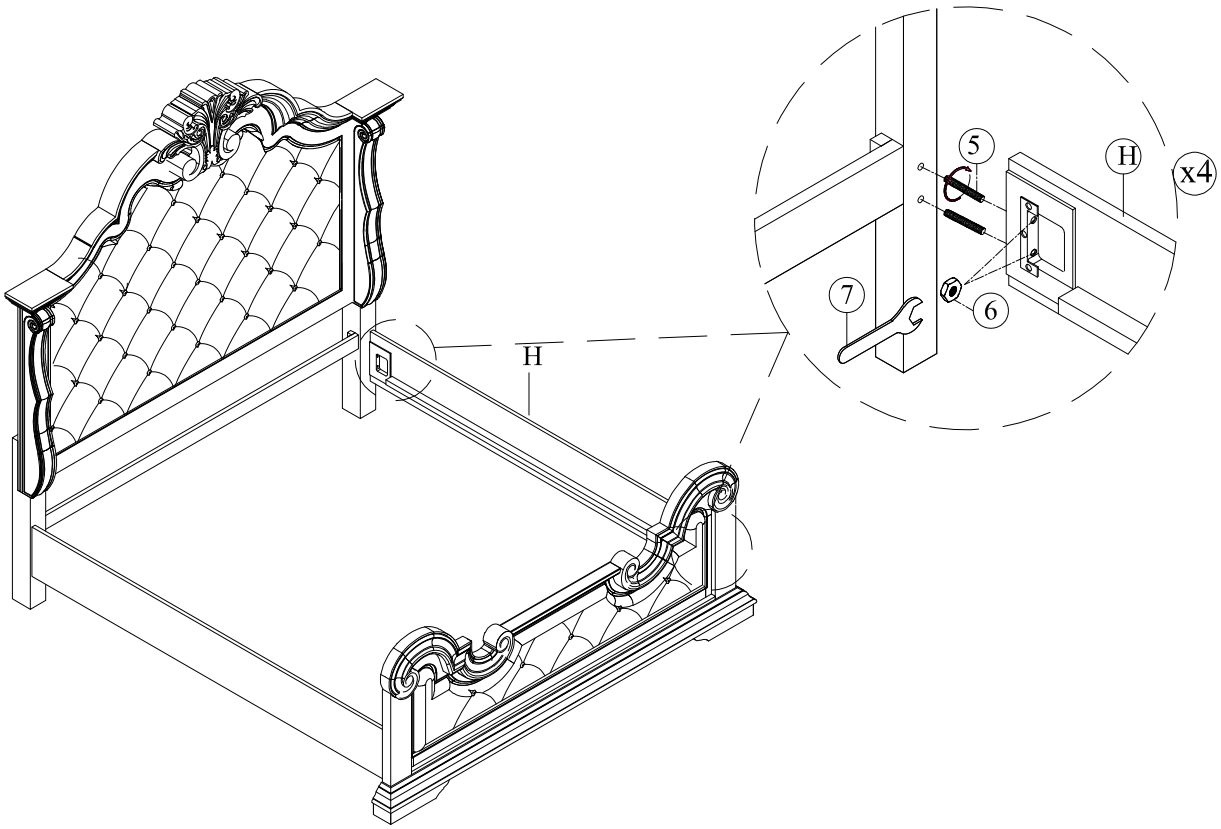

STEP 4.

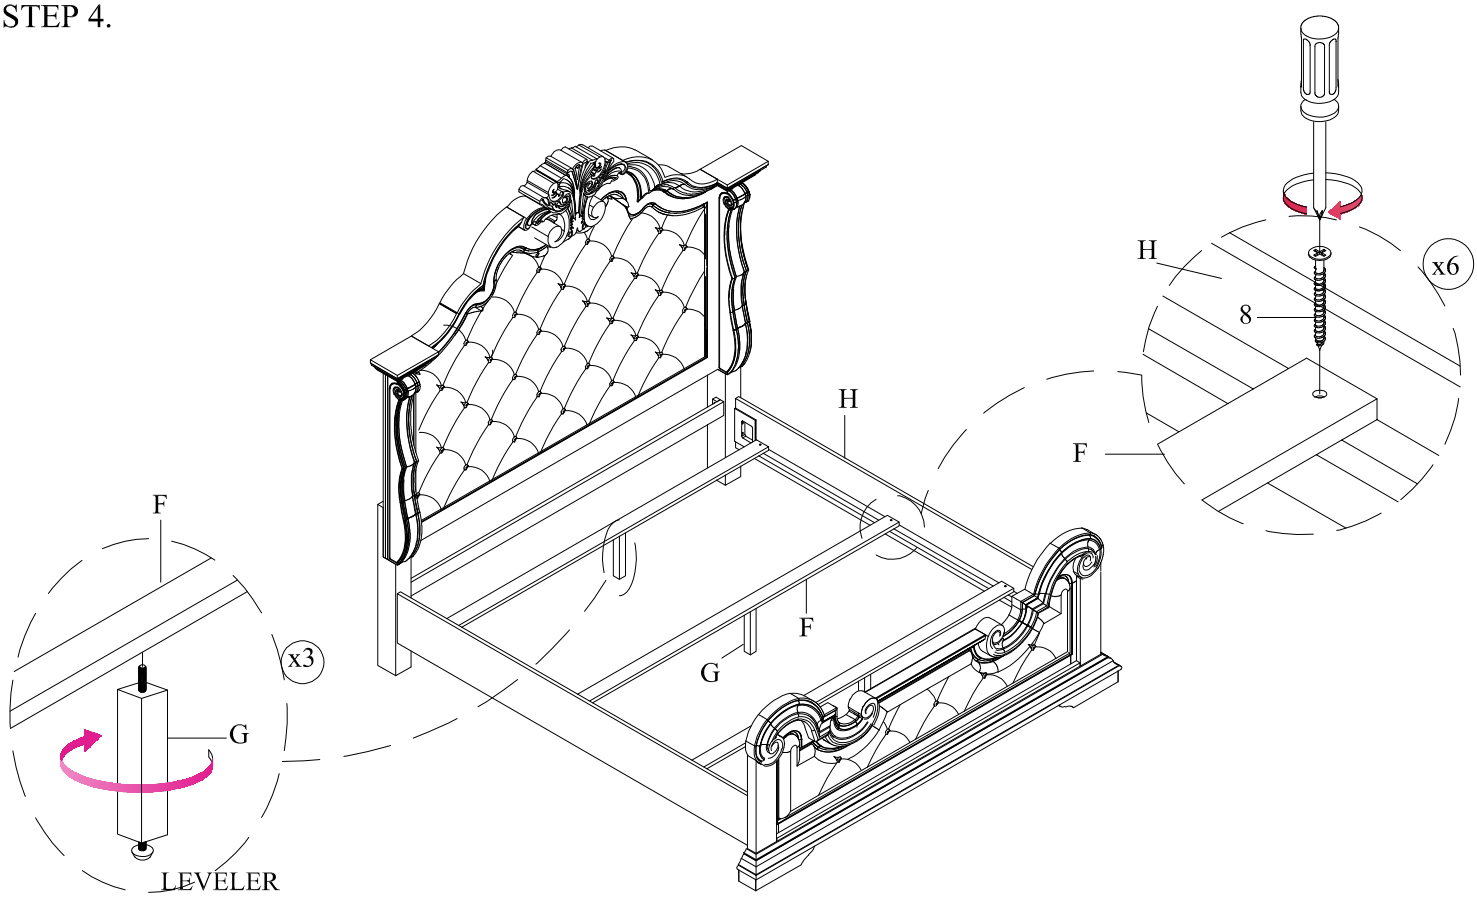

COMPLETED.